


C155

Item No.	Motorola Part No.	Description
1	3062E99001W	Escutcheon
2	2511E99001W	Front Housing
3	303FE98001W	Felt Speaker
4	3101E99014W	Keypad
5	3012E99001W	Bracket
6	2241332001W	Speaker
7	3109E99001W	Mylar
8	76300906D1W	Display assy
9	3501760102W	Screw
10	2220602201W	Microphone
11	23A1E99002W	Antenna

Item No.	Motorola Part No.	Description
12	2250131802W	Alert
13	3930408010W	Vibrator
14	2541E99002W	LED Lens
15	2523E99001W	Rear Housing
16	302FE99002W	Gasket Alert
17	3028E99001W	RF Grommet
18	252AE99001W	Battery Door
-	SNN5749A	Battery
-	AAPN4064A	Charger Euro
-	AAPN4065A	Charger UK

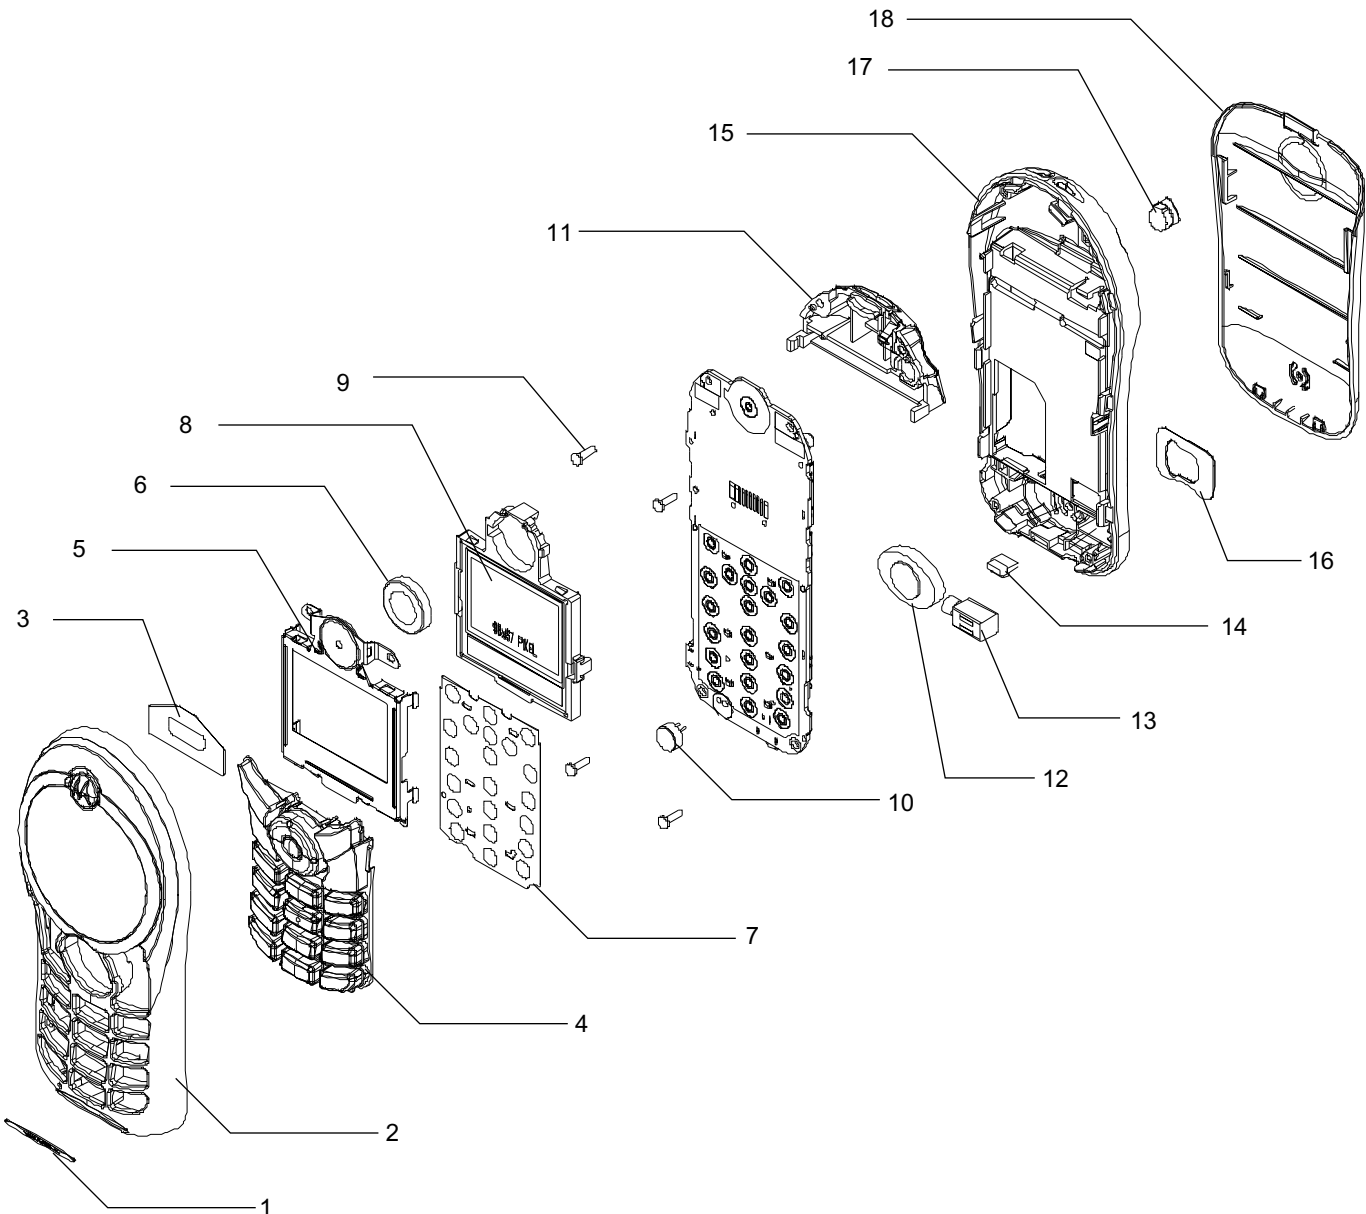

Level 1&2 Authorized

REVISIONS

Revision	Date
2004.09.16	
Level 1-2 Parts List	Version 1.0
C155	
Ralf Lorenzen-Scheil	Page 1 of 1