


Item No.	Motorola Part No.	Description
1	3388674Z01	M-Logo
-	3288422Z11	Felt Speaker
2	0188045Z14	Keypad Lens Assy English Fire Red
2	0188045Z06	Keypad Lens Assy English Licorice
2	0188045Z15	Keypad Lens Assy English CUBL
3	1188432Z11	Adhesive Lens Bottom
4	1188432Z10	Adhesive Lens Top
5	CHLG4610AA	Keyboard PCB Assy

Item No.	Motorola Part No.	Description
6	0388691Z01	Screw M1.4x2.6mm
7	5088767Z02	Speaker
8	0164078T01	Rear Housing Assy
9	0388668Z01	Screw M1.4x3.6mm
-	1388787Z10	Escutcheon TIM
-	1588631Z02	Battery Door
-	SNN5796A	Battery

Table 1.00

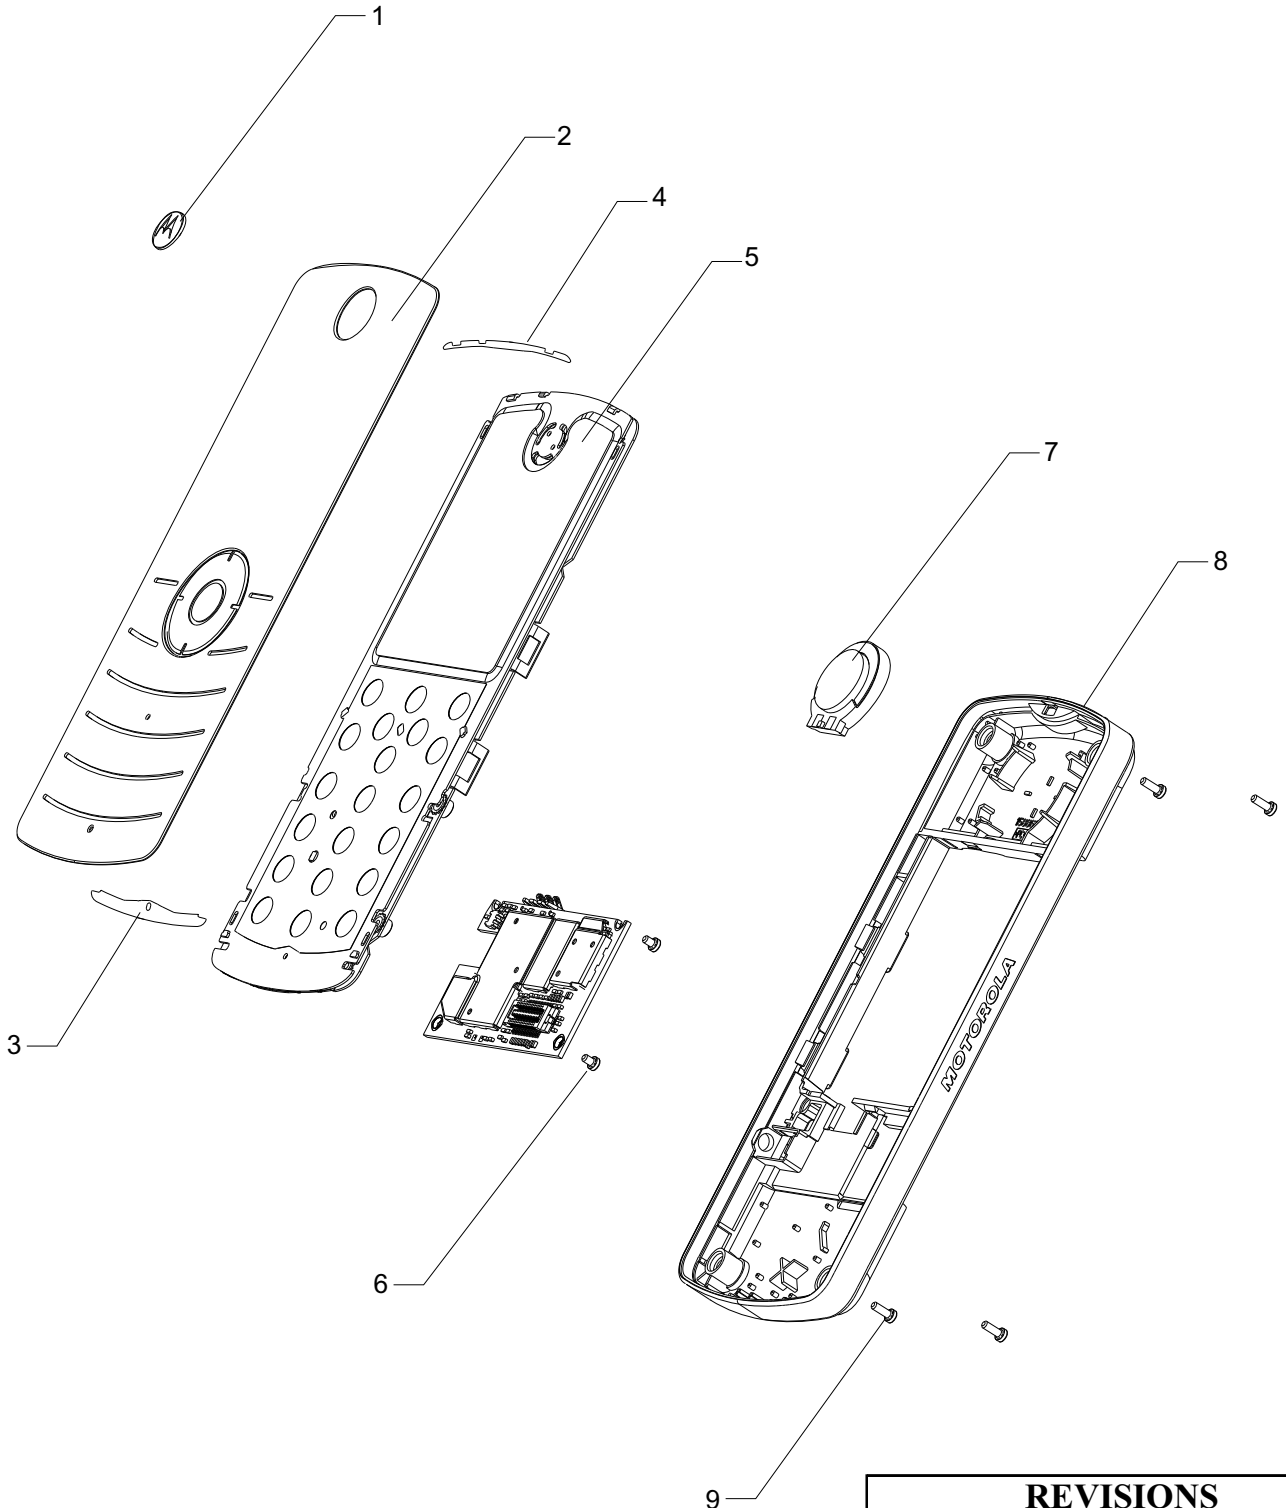

REVISIONS	
European	2007.01.05
Level 1-2 Parts List	Version 1.0
Product Name:	F3
	Page 1 of 3

