


MPX.200

Item	Part Number	Description
1	MEBEN61001B	Assembly Bazel Unit Generic EMEA
1	MEBEN61005B	Assembly Bazel Unit Orange
2	MEBEN61002B	Rear Case Assembly Upper Unit
3	20BENB20001	Rear Case assy incl. Antenna
4	MEBEN71002B	Cap Screw Silicon Rubber
5	20BENB0001	Battery External Cover
6	MEBEN01004B	Cover I/O
7	MEBEN01005B	Cover SD Card Socket
8	MEBEN01006C	Cover Audio Jack
9	MEBEN07001B	Key Pad English
9	MEBEN07002B	Key Pad Cyrillic
10	MEBEN51002B	Key Power
11	MEBEN16001A	Metal Dome EL Module
12	W6401160420	Screw
13	MEBEN11001A	Vibrator_3VDC_Dimension

Item	Part Number	Description
14	MEBEN08001B	Lens IrDA
15	MEBEN04003B	Lens Main LCD
16	MEBEN04004B	Lens Secondary LCD
17	SN0B7041040	Conn Main Battery Socket
18	MEBEN14001A	FPC Upper to Lower BTB Connector
19	S0S2014T010	Speaker
20	S0BML614090	Li Backup Battery
21	S0MFPT22030	Microphone
23	MEBEN33002B	Sponge Secondary LCD
-	MEBEN05001A	Name Plate
-	MEBEN84001B	Adhesive Main LCD
-	MEBEN84002B	Adhesive Secondary LCD
-	SNN5681A	Main Battery 860MAh
-	SPN5142A	USB Charger Euro
-	SPN5143A	USB Charger UK

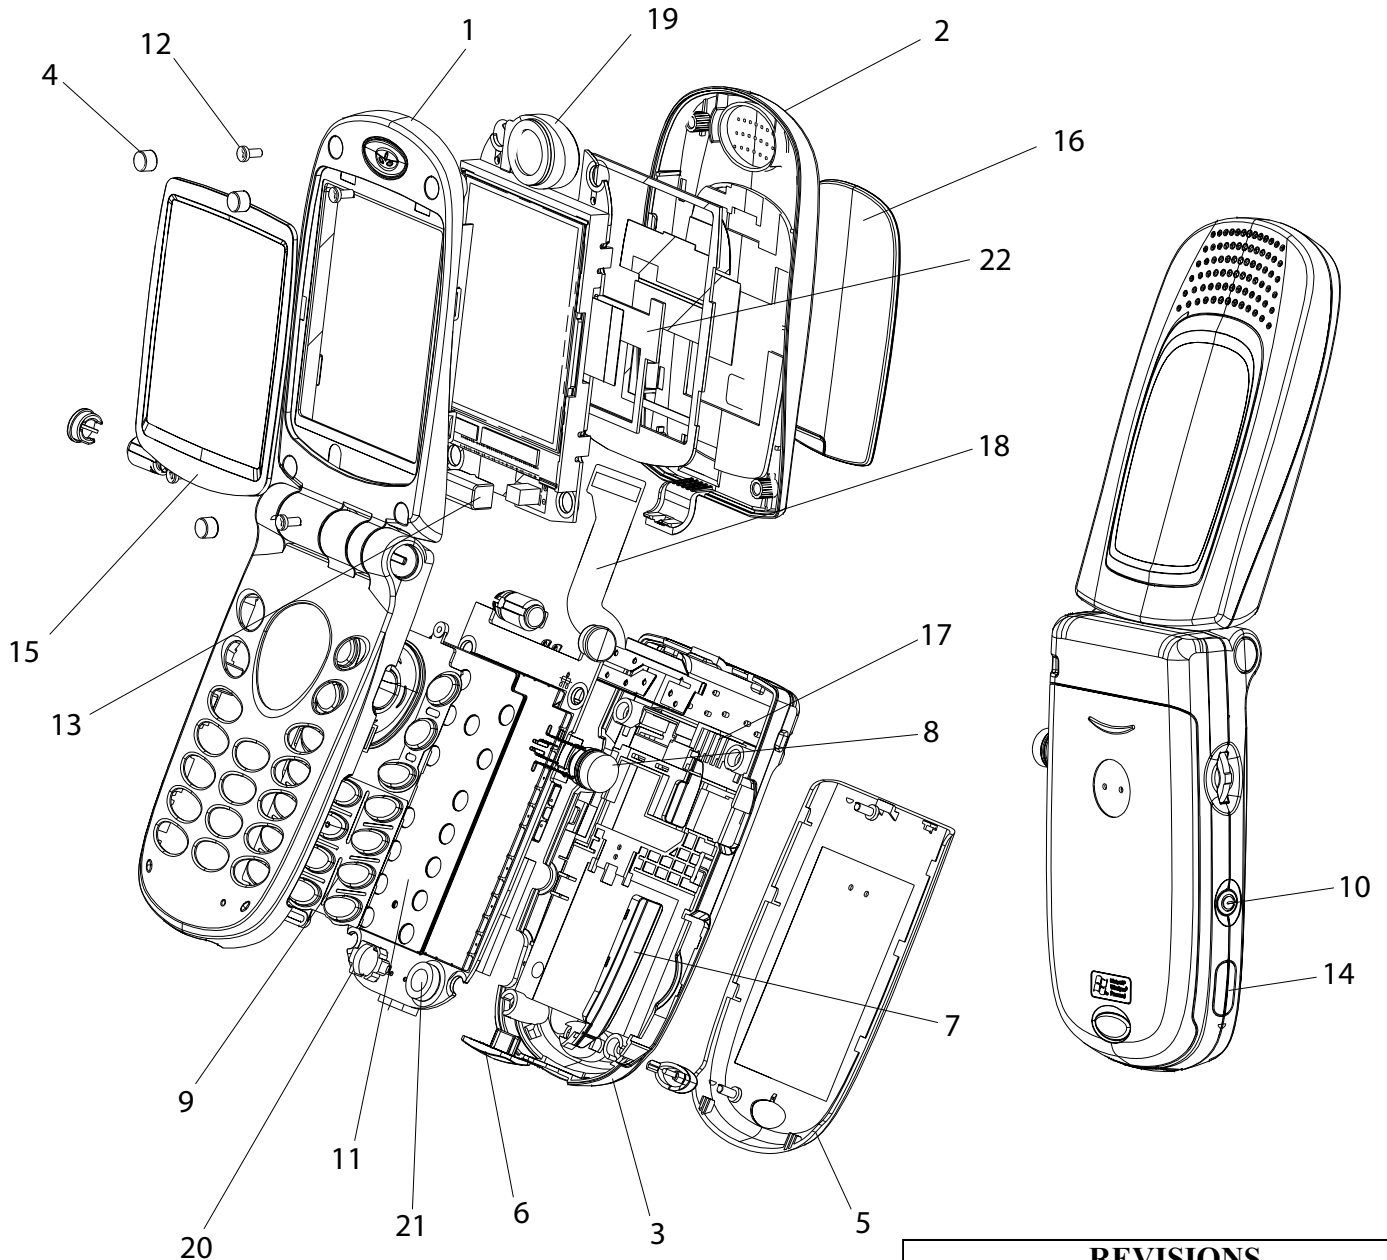

REVISIONS	
	2005.02.07
Level 1-2 Parts List	Version 1.4
MPX.200	
Ralf Lorenzen-Scheil	Page 1 of 1