


Item No.	Motorola Part No.	Description
1	0187996Y10	Flip Front Housing Assy Silver
1	0187996Y18	Flip Front Housing Assy Black
2	6190015N02	Lens Cli Display
3	3890012N01	Button Volume
4	3890013N01	Button Smart
5	3890014N01	Button VR
6	1590001N02	Flip Cover Assy Silver
6	1590001N03	Flip Cover Assy Black
7	6190019N02	Lens Camera
8	7588069Y01	Copper Tape
9	3588010Y01	Mesh Speaker
-	3287414Y01	Cushion Speaker
10	0590033N01	Grommet Camera Upper
11	8488310Y01	Camera Assy
12	0587343Y01	Grommet Camera Lower
13	1589126Y01	Hinge Cap Left
14	5590242N02	Hinge
-	1590020N01	Socket Hinge
-	0387726M05	Screw, Hinge
15	1589127Y01	Hinge Cap Right
-	8490007N01	Flex Side Button
-	7588382Y01	Pad Side Key
16	7290086N01	Display Assy
16a	7287518Y01	Cli Display
17	1590025N03	Flip Housing Silver
17	1590025N04	Flip Housing Black
-	5988515L01	Magnet
-	3290026N01	Gasket Speaker

Item No.	Motorola Part No.	Description
-	3387630Y01	M Logo Flip
18	0387726M02	Screw (Flip)
19	6190016N03	Lens Main Display
20	1487942Y01	Insulator Tape
21	1590043N03	Front Housing Assy Silver
21	1590043N07	Front Housing Assy Black
22	8489976N03	Keyboard Flex Assy
23	3890022N01	Screw Cover #1 Silver
23	3890022N03	Screw Cover #1 Black
24	3890023N01	Screw Cover #2 Silver
24	3890023N03	Screw Cover #2 Black
25	3888182Y03	Keypad English
25	3888182Y05	Keypad Cyrillic
25	3888182Y06	Keypad Arabic
25	3888182Y09	Keypad Hebrew
26	1590048N01	Rear Housing Assy Silver
26	1590048N03	Rear Housing Assy Black
27	5088017N02	Alert
28	0387473K07	Screw Rear Housing
29	0590070N01	Grommet Rf Silver
29	0590070N02	Grommet Rf Black
30	1590051N03	Antenna Assy
31	SHN8739A	Battery Door Silver
31	SHN8827A	Battery Door Silver Orange
31	SHN8962A	Battery Door Black
-	SNN5696B	Battery
-	3887389Y01	Button Plug #1
-	3887388Y01	Button Plug #2

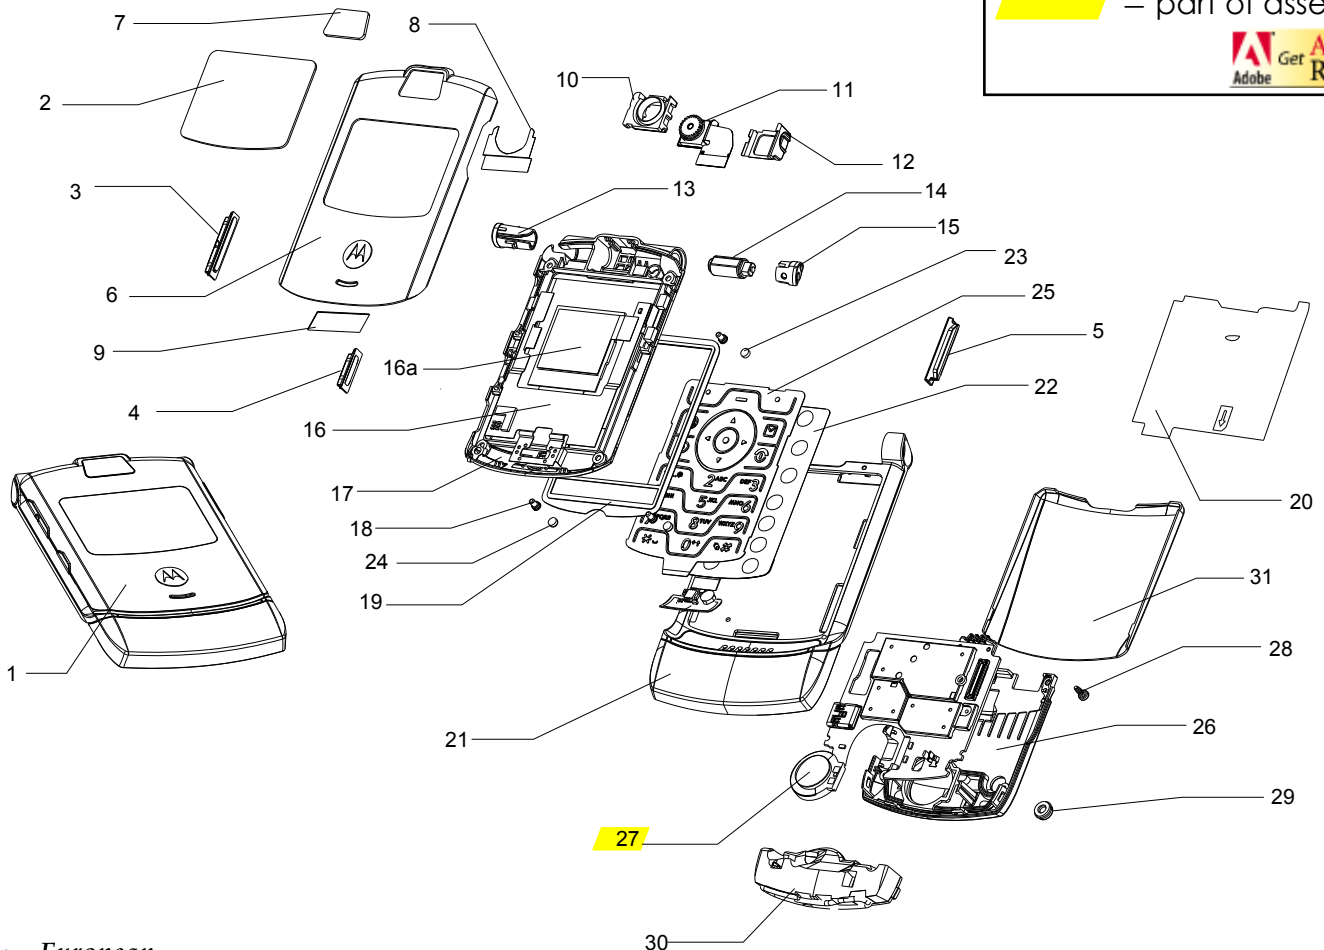

REVISIONS	
	2005.08.01
Level 1-2 Parts List	Version 2.0
Product Name:	V3
Author:	Ralf Lorenzen-Scheil, Kai Nielsen
	Page 1 of 2

