



REVISIONS	
	2006.07.07
	Level 1-2 Parts List
Product Name:	V3x
Author:	Ralf Lorenzen-Scheil, Kai Nielsen
	Page 1 of 3

Item No.	Motorola Part No.	Description
1	0171425C02	Flip Front Housing Assy CUBL Generic
1	0171425C03	Flip Front Housing Assy Ash Vodafone
1	0171425C04	Flip Front Housing Assy Licorice H3G
1	0171425C07	Flip Front Housing Assy Ash SFR
1	0171425C12	Flip Front Housing Assy Pink Generic
1	0171425C13	Flip Front Housing Assy Pink Vodafone
1	0171425C17	Flip Front Housing Assy Pumpkin H3G
1	0171425C20	Flip Front Housing Assy RED
2	6171885B01	Lens Camera Main
3	6171886B01	Lens Flashlight
4	6188777Y01	Lens CLI Display H3G
4	6188777Y03	Lens CLI Display Vodafone
4	6188777Y04	Lens CLI Display Generic
4	6188777Y05	Lens CLI Display TIM
5	3371139D01	M-Logo Outer
6	CFHN9075A	Flip Cover Licorice H3G
6	CFHN9076A	Flip Cover CUBL Generic
6	CFHN9077A	Flip Cover ASH Vodafone
6	CFHN9078A	Flip Cover Pink Generic
6	CFHN9086A	Flip Cover Pumpkin H3G
6	TBA	Flip Cover RED Generic
-	0371160D01	Screw M1.2 X 2.98MM
7	0171102C01	Display Module
-	7271094B01	CLI Display
8	0171456C01	Flex Assy
9	0788870Y01	Bracket Camera
10	3271688B04	Gasket Camera Main
11	0171347C01	Camera Assy Main
12	5571967B03	Hinge
13	0171325C01	Speaker Assy
-	1189617N05	Adhesive Speaker
14	1371698B01	Mesh Speaker
15	CFHN9079A	Flip Housing Assy
-	3271687B01	Gasket Main Display
-	3371697B01	M-Logo Inner
16	0171343C01	Camera Assy VGA
17	3271688B02	Gasket Camera VGA
18	6171865B01	Lens Camera VGA
19	6188778Y01	Lens Main Display Generic
19	6188778Y03	Lens Main Display Vodafone
19	6188778Y04	Lens Main Display Swisscom
19	6188778Y05	Lens Main Display SFR

Item No.	Motorola Part No.	Description
20	0387726M07	Screw M1.6x2.5mm
21	3271689B01	Screw Cover Right
21	3271689B02	Screw Cover Left
22	3871943B01	Button Smart / Volume
23	3871942B01	Button Camera / VR
24	3888722Y01	Keypad English Ash, Licorice, Pump
24	3888722Y02	Keypad English CUBL & Pink & RED
24	3888722Y03	Keypad English Vodafone
24	3888722Y13	Keypad English TIM
24	3888722Y05	Keypad Hebrew
24	3888722Y09	Keypad Cyrillic
24	3888722Y10	Keypad Arabic
25	0188747Y01	Front Housing Assy Licorice
25	0188747Y02	Front Housing Assy CUBL
25	0188747Y03	Front Housing Assy Ash
25	0188747Y06	Front Housing Assy Pink
25	0188747Y07	Front Housing Assy Pumpkin
25	0188747Y08	Front Housing Assy RED
26	0188749Y01	Keyboard Assy
-	3271603B02	Gasket Acoustic
-	3271703B01	Gasket Micophone
27	0387726M07	Screw M1.6x3.2mm
28	0188746Y01	Rear housing Assy
-	5088017N04	Alert Speaker
29	0387791L07	Screw K1.5x4.25mm
30	0171605B01	Antenna Cap Licorice
30	0171605B02	Antenna Cap CUBL
30	0171605B03	Antenna Cap Ash
30	0171605B06	Antenna Cap Pink
30	0171605B07	Antenna Cap Pumpkin
30	0171605B08	Antenna Cap RED
-	8571704B01	Antenna Wire
-	1571701B01	Antenna Endo
31	SNN5781A	Battery
32	SHN9500A	Battery Door Licorice Generic
32	SHN9368A	Battery Door Licorice H3G
32	SHN9369A	Battery Door Ash Generic
32	SHN9574A	Battery Door CUBL Generic
32	SHN9370A	Battery Door CUBL Orange
32	SHN9622A	Battery Door Pink
32	SHN9786A	Battery Door Pumpkin
32	SHN9836A	Battery Door RED



REVISIONS	
	2006.07.07
Level 1-2 Parts List	
Version 1.8	
Product Name:	V3x
Author:	Ralf Lorenzen-Scheil, Kai Nielsen
Page 2 of 3	

