 
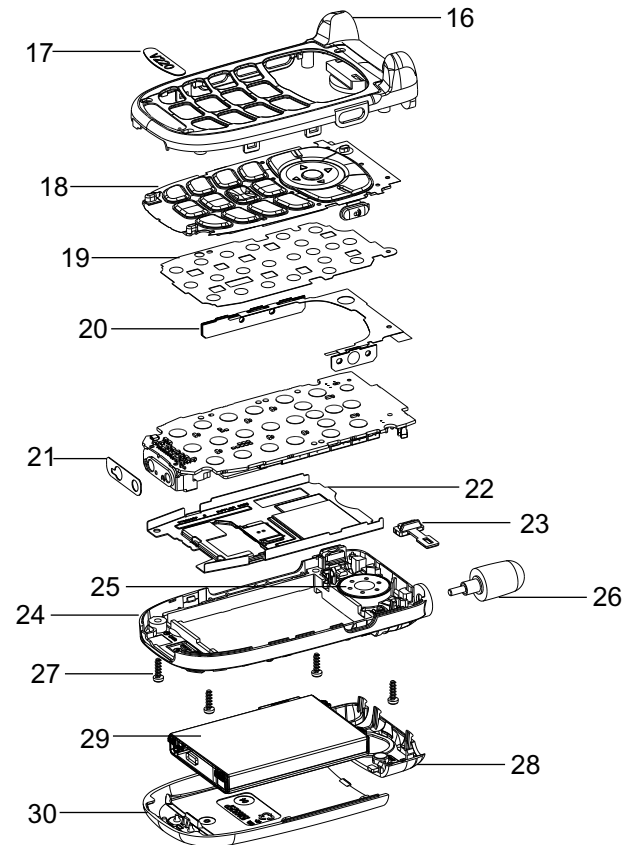 


V220

Item No.	Motorola Part No.	Description
-		
1	0170386H01	Lens, CLI assy
2	6186921P01	Lens, Camera
3	0170386L01	Housing assy Flip top
4	6186920P01	Lightguide, Funlight
5	7586916P01	Holder Lightguide
6	0786911P01	Bracket, Flip
7	0370303D01	Screw, Flip
8	0786909P01	Bracket, Display
9	0186959P01	CLI Display Flex assy
10	5089081L02	Speaker
11	0186861P02	Main Display Module
12	0170299Y01	Camera asy
13	0170386A01	Housing assy Flip bottom
14	5570373B01	Hinge
15	6186914P01	Lens Main Display
16	0170299Z02	Housing assy, XCVR top
17	1386937P01	Escutcheon, V220

Item No.	Motorola Part No.	Description
18	3886904P03	Keypad, English
19	4086903P01	Mylar
20	8586902P01	Flex Side Key
21	1386938P01	Escutcheon, Connector
-	3286899P01	Gasket, Connector
22	0170386G01	Chassis
23	3286900P01	USB Grommet
24	0170386C02	Rear Housing assy
25	5070371C01	Alert Speaker
26	8586901P01	Antenna
27	0309315B07	Screw, Rear Housing
28	0170386D02	Rear Housing Cap
29	AAHN4285	Battery
30	AAHN5524	Battery Door
-	5070371D01	Microphone
-	6087603L01	RTC Battery
-	SPN4892	Charger Euro
-	SPN4891	Charger UK

 = part of assembly

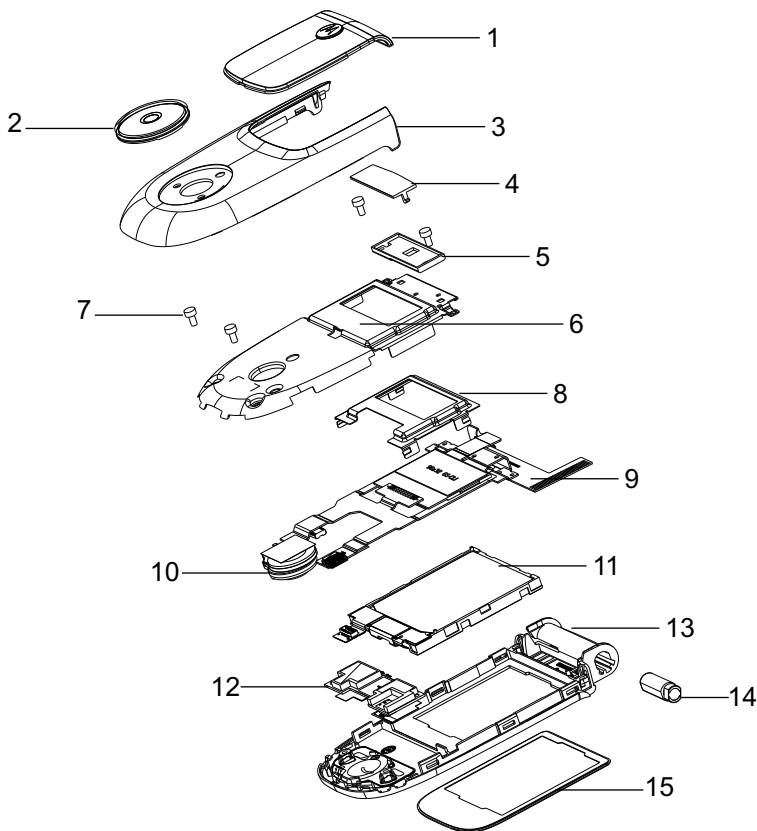

Level 1&2 Authorized

REVISIONS	
	2004.04.07
Level 1-2 Parts List	Version 1.0
V220	
Ralf Lorenzen-Scheil	Page 1 of 1