
- •Flow Chart of Elastomer Replacement
- •Note: ESD wristlet is a must when touching components, Finger cot is a must when touching display, golden pads and spring contact.

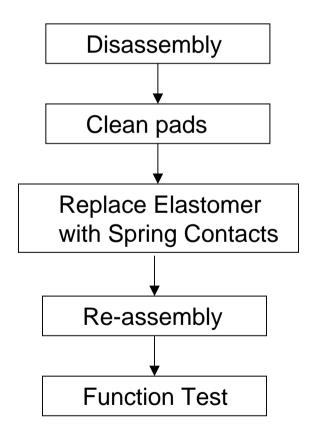

- •Unfix the 4 screws
- •Take off the rear-housing and PCB board





- •Disassemble the flip from the base
- •Note: make sure the flex cable is in the gap before removing the front housing.





- •Take off the 4 screw covers and unfix the flip screws
- •Take off the flip cover, chassis, snubber, camera cover and camera
- •Take off the LCD model together with flex cable
- •Remove and discard the 3987819M02 Elastomer

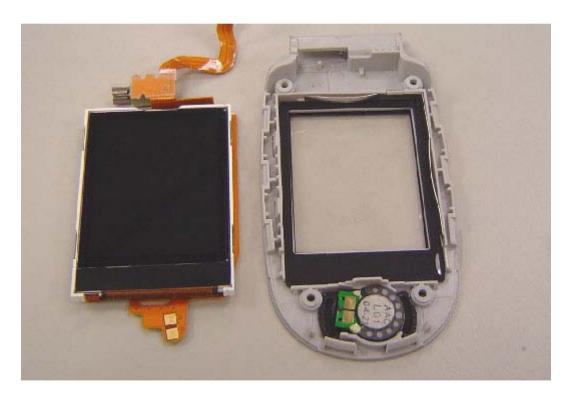

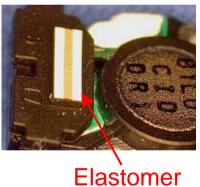


May 12, 2005

- •Separate the flex from the LCD module
- •Paste the 0771469B01 Flex Stiffener on back of flex
- •A simple fixture can be used to ensure the alignment





- •Clean both flex pads and speaker pads with Isopropyl Alcohol (IPA)
- •Inspect under magnification to ensure no foreign material is present on pads

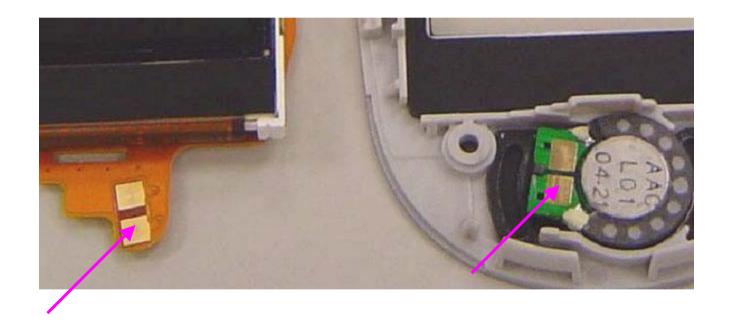


- •Attach the 3989791L03 Spring Contact on the speaker
- •Make sure it's aligned well





- •There is a potential alignment issue present when attaching the L03 Spring Contact to some AAC Speakers due to variance in the height of the glue. See images below.
- •If this issue is observed, the AAC Speaker should be replaced to allow proper mating with the new Spring Contacts.

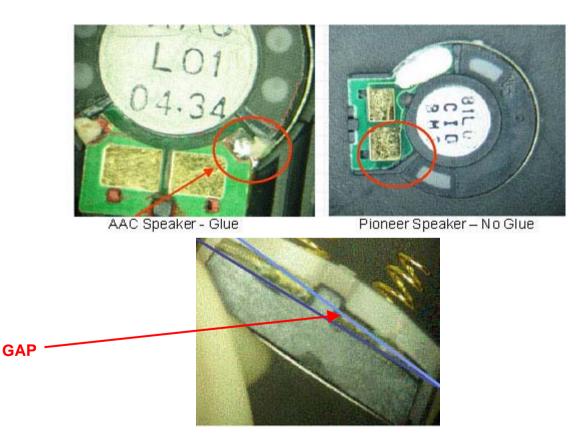

- Assemble back the LCD module with flex
- Assemble back the camera module
- •Paste a kapton tape (1190142N01) on the flex and pcb to make sure the locating column of flip base is within flex locating hole of flex cable
- •Reassemble the phone and Retest

