


W180

Item No.	Motorola Part No.	Description	Europe	MEA
1	3104H29011W	Keypad Lens Assy English	✓	✓
1	3104H29071W	Keypad Lens Assy Arabic	✓	✓
2	8609H28001W	Adhesive Keypad Lens Assy	✓	✓
3	3013H28001W	Front Chassis Assy	✓	✓
4	303FH28001W	Felt Speaker	✓	✓
5	3109H28001W	Mylar	✓	✓
6	7809520003N	Keyboard Assy	✓	✓
7	2240133208W	Speaker	✓	✓
8	7630121257W	Display Assy	✓	✓
9	8609H28002W	Adhesive Keypad	✓	✓
10	2220602207W	Microphone	✓	✓
11	3930408022W	Vibrator	✓	✓

Item No.	Motorola Part No.	Description	Europe	MEA
12	3068H28001W	Gasket Antenna Housing	✓	✓
13	2250160815W	Alert Speaker	✓	✓
14	2300H28001W	Antenna Assy EU	✓	✓
15	303EH28001W	Gasket Alert Speaker	✓	✓
16	303EH28002W	Mesh Alert Speaker	✓	✓
17	303FH28002W	Mesh Speaker Top	✓	✓
18	2523H28002W	Rear Housing Assy	✓	✓
19	3028H28001W	RF Grommet	✓	✓
20	3062H29001W	Escutcheon Generic	✓	✓
21	3501645204W	Screw M1.6 X 4.5mm	✓	✓
-	SNN5804A	Battery	✓	✓
-	252AH28002W	Battery Door	✓	✓

Table 1.00

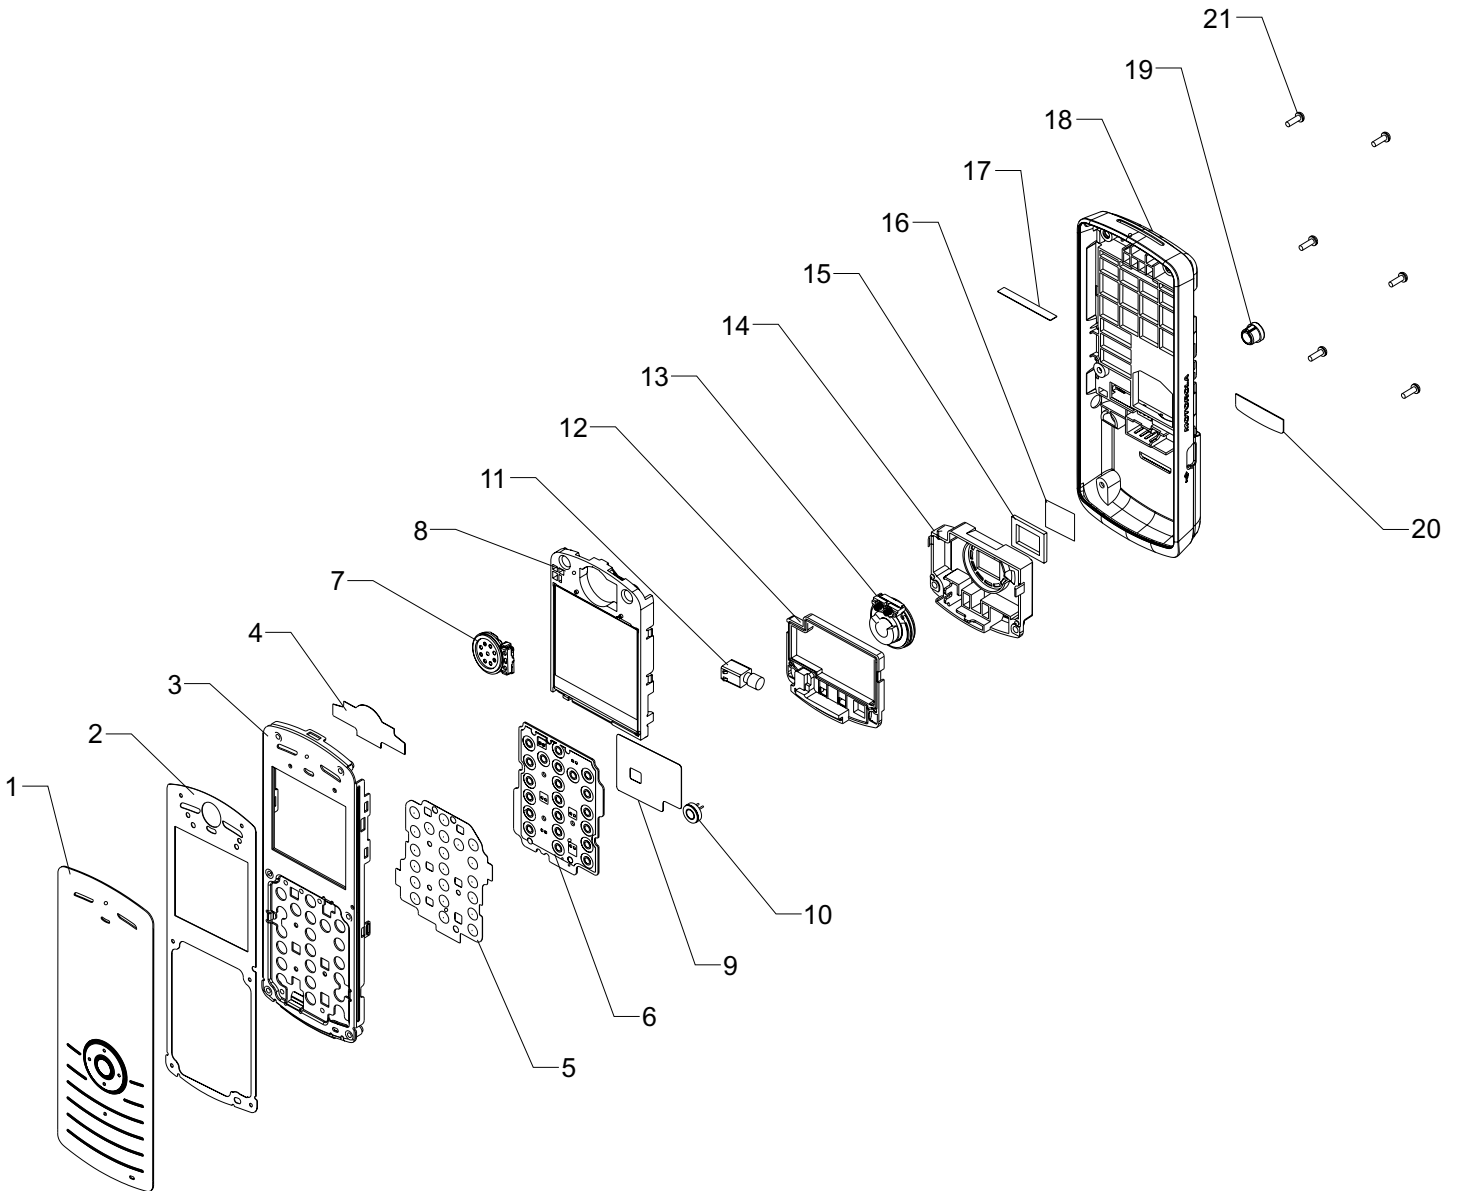

REVISIONS	
European & MEA	2007.10.19
Level 1-2 Parts List	Version 1.0
Product Name:	W180
	Page 1 of 2

