



**MOTOROLA**  
*intelligence everywhere™*

# Field Service Manual

## *Basic and Field Level Test Procedures*



***iDEN i830***  
***Digital Multi-Service,  
Data-Capable Portable***



**MOTOROLA**  
*intelligence everywhere™*

***i*DEN**

*i*830  
Digital Multi-Service,  
Data-Capable Portable

Field Service Manual

Basic and Field Level  
Test Procedures

April 23, 2004

---

## **Manual Revisions**

Changes that occur after this manual is printed are described in the Field Manual Revisions (FMRs). The FMRs provide the most current instructions and component information.

## **Copyright Information**

The Motorola products described in this manual may include Motorola computer programs stored in semiconductor memories or other media that are copyrighted with all rights reserved worldwide to Motorola. Laws in the United States and other countries preserve for Motorola, Inc. certain exclusive rights to the copyrighted computer programs, including the exclusive right to copy, reproduce, modify, decompile, disassemble, and reverse-engineer the Motorola computer programs in any manner or form without Motorola's prior written consent. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license or rights under the copyrights, patents, or patent applications of Motorola, except for a nonexclusive license to use the Motorola product and the Motorola computer programs with the Motorola product.

## **Trademarks**

MOTOROLA, the Stylized M Logo, Message Mail, VibraCall, and iDEN are registered trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© Copyright 2004, Motorola, Inc. All rights reserved.

---

# SAFETY AND GENERAL INFORMATION

**IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR INTEGRATED  
MULTI-SERVICE PORTABLE RADIO.**

## RF Operational Characteristics

Your radio product contains a radio frequency transmitter to convey the information you wish to send as well as occasional automatic signals used to sustain connection to the wireless network, and a receiver which enables you to receive communication and connection information from the network.

## PORTABLE RADIO PRODUCT OPERATION AND EME EXPOSURE

Your Motorola two-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992
- Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 2001
- ANATEL, Brasil Regulatory Authority, Resolution 256 (April 11, 2001) "additional requirements for SMR, cellular and PCS product certification."

**To assure optimal radio product performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:**

### Phone Operation

When placing or receiving a phone call, hold your radio product as you would a wireline telephone. **Speak directly into the microphone.**

### Two-way radio operation

When using your radio product as a traditional two-way radio, **hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.**



### Body-worn operation

To maintain compliance with FCC RF exposure guidelines, if you wear a radio product on your body when transmitting, always place the radio product in a **Motorola approved clip, holder, holster, case or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a Motorola approved body-worn accessory and are not using the radio product in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, then ensure the antenna and the radio product are kept the following minimum distances from the body when transmitting:**

- **Phone or Two-way radio mode: one inch (2.5 cm)**
- **Data operation using any data feature with or without an accessory cable: one inch (2.5 cm)**

### Antenna Care

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the radio product and may violate FCC regulations.

**DO NOT hold the antenna when the radio product is "IN USE".** Holding the antenna affects call quality and may cause the radio product to operate at a higher power level than needed.

### Approved Accessories

For a list of approved Motorola accessories call 1-800-453-0920, visit our website at [www.mot.com/iden](http://www.mot.com/iden) or look in the accessory section of this manual.

**ALL MODELS WITH FCC ID AZ489FT5828 MEET THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **1.41 W/kg** and when tested on the body, as described in the user guide, is **1.45 W/kg** during packet data transmission. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.) While there may be differences between the SAR levels or various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID AZ489FT5828.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## Electro Magnetic Interference/ Compatibility

**NOTE: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.**

## Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio product in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## Aircraft

When instructed to do so, turn off your radio product when on board an aircraft. Any use of a radio product must be in accordance with applicable regulations per airline crew instructions.

## Medical Devices

### Pacemakers

The Advanced Medical Technology Association (AdvaMed) recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio product and a pacemaker. These recommendations are consistent with those of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the radio product more than 6 inches (15 cm) from their pacemaker when the radio product is turned ON.
- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

### Hearing Aids

Some digital wireless radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

### Use While Driving

Check the laws and regulations on the use of radio products in the area where you drive. Always obey them. When using the radio product while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.



## Operational Warnings

### For Vehicles Equipped with an Air Bag

Do not place a portable radio product in the area over the air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio product may be propelled with great force and cause serious injury to occupants of the vehicle.

### Potentially Explosive Atmospheres

Turn off your radio product prior to entering any area with a potentially explosive atmosphere, unless it is a radio product type especially qualified for use in such areas as “Intrinsically Safe” (for example, Factory Mutual, CSA, or US approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**NOTE: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often, but not always, posted.**

### Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio product when you are near electrical blasting caps, in a blasting area, or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Cleaning and Drying Considerations

Using a leather carry case may help protect the surfaces and help prevent liquids (e.g., rain) from entering into the interior of the radio product. This product is not water proof, and exposing the unit to liquids may result in permanent damage to the unit.

If your radio product interior gets wet, then do not try to accelerate drying with the use of an oven or a dryer as this will damage the radio product and void the warranty. Instead, do the following:

1. Immediately power off the radio product.
2. Remove Battery and SIM card (if so equipped) from radio product.
3. Shake excess liquid from radio product.
4. Place the radio product and battery in an area that is at room temperature and has good air flow.
5. Let the radio product, battery, and SIM card dry for 72 hours before reconnecting the battery and/or powering on the radio product.



## Operational Cautions

### Antennas

**Do not use any portable radio product that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### Batteries

All batteries can cause property damage and/or bodily injury, such as burns if a conductive material, such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

If the radio product does not work after following the steps listed above, contact your dealer for servicing information.

Clean the external surfaces of the radio product with a damp cloth, using a mild solution of dishwashing detergent and water. Some household cleaners may contain chemicals that could seriously damage the radio product. Avoid the use of any petroleum-based solvent cleaners. Also, avoid applying liquids directly on the radio product.

## Accessory Safety Information

### IMPORTANT: SAVE THESE ACCESSORY SAFETY INSTRUCTIONS

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.
- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.



**WARNING: To reduce the risk of injury, charge only the rechargeable batteries listed in the Accessories section of this manual. Other types of batteries may burst, causing personal injury and damage.**

- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug — replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.

## SAFETY AND GENERAL INFORMATION

---

- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.
- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
  - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
  - The extension cord is properly wired and in good electrical condition.
  - The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
- Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
- Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
- The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.

For optimum charging performance, turn off the radio product while charging it in any battery charger.

# MODEL INFORMATION

This manual applies to the following *i*DEN *i*830 Digital Portable models:

H74XAH6RR4AN 806-940 MHz, Multi-Service, Data-Capable Portable

## MODEL NUMBERING SYSTEM

**Typical Model Number:** H 7 4 X A H 6 R R 4 A N  
**Position:** 1 2 3 4 5 6 7 8 9 10 11 12

**Position 1 - Type of Unit**

H = Hand-Held Portable  
M = Mobile Product

**Positions 2 and 3 - Model Series**

02 = Motorola Digital Communicator  
06 = Motorola Advanced Feature Digital  
07 = Motorola i370 Products  
08 = Motorola i1000 Products  
12 = Motorola 3:1 Mobile  
13 = Motorola Ruggedized Digital  
15 = Motorola i600 Products  
26 = Motorola i1000plus Products  
27 = Motorola i500plus Products  
29 = Motorola i700plus Products  
32 = Motorola i2000plus Products  
35 = Motorola i2000 Products  
36 = Motorola i550plus Products  
40 = Motorola i85s/i55sr/i50sx Products  
41 = Motorola i90c Products  
48 = Motorola i80s Products  
58 = Motorola i88s/i58sr Products  
62 = Motorola i205/i305 Products  
63 = Motorola i730 Products  
74 = Motorola i830 Products

**Position 4 - Frequency Band**

U = 806 to 870 MHz  
X = 806 to 941 MHz  
\*Values given represent range only; they are not absolute.

**Position 5 - Power Level**

A = 0 to 0.7 Watts  
B = 0.7 to 0.9 Watts  
C = 1.0 to 3.9 Watts  
D = 4.0 to 5.0 Watts  
E = 5.1 to 6.0 Watts  
F = 6.1 to 10.0 Watts

**Position 6 - Physical Packages**

F = Limited Keypad - With Display  
H = Full Keypad - With Display  
N = Enhanced Controls - Enhanced Display

**Position 7 - Channel Spacing**

1 = 5 kHz      5 = 15 kHz  
2 = 6.25 kHz    6 = 25 kHz  
3 = 10 kHz      7 = 30 kHz  
4 = 12.5 kHz    9 = Variable Programmable

**Position 12 - Unique**

Model Variations  
N = Standard Package

**Position 11 - Version**

Version Letter (Alpha) -  
Major Change

**Position 10 - Feature level**

1 = Basic                  6 = Standard Plus  
2 = Limited Pkg        7 = Expanded Pkg  
3 = Limited Plus        8 = Expanded Plus  
4 = Intermediate       9 = Full Feature/  
5 = Standard Pkg       Programmable

**Position 9 - Primary System Type**

R = iDEN Shared

**Position 8 - Primary Operation**

N = Digital Dispatch  
Q = Low Profile - Basic Display  
R = Digital Multi-Service  
J = TDMA Digital Dual Mode



# MODEL SPECIFICATIONS

GENERAL		RECEIVER		TRANSMITTER	
FCC Designation:	AZ489FT5828	Receiver Type:	Superheterodyne	Transmitter Type:	Single Conversion
Operational Modes:	Phone Private Group Circuit Data	Frequency Range:	851-870 MHz 935-940 MHz	Frequency Range:	806-825 MHz 896-901 MHz
800 MHz Band only:	Packet Data				
Temperature Range:		Channel Spacing:	25 kHz	Emission Designator:	18K3D7W
Operating	-10°C to +60°C				
Storage (w/o battery)	-40°C to +85°C				
Power Supply:		Frequency Stability:		Modulation Types:	Quad 16QAM Quad 64QAM Quad QPSK
Battery Type	Lithium Ion	Referenced to base station	0.4 ppm		
Recommended Battery:	NNTN4930A NNTN5195A	Sensitivity (10%)BER: (M-16 QAM)	-111 dBm	Frequency Stability: Referenced to base station	0.4 ppm
Battery Voltage:		Spurious Response Immunity:	-51 dBm	Spurious Emissions:	
Nominal	3.6 Vdc			Conducted	-13 dBm
Range	3.0 to 4.2 Vdc			Radiated	-13 dBm
Dimensions (HxWxD):		Spurious Radiation:		RF Pulse Avg Power:	
Phone only	85 x 45 x 20 mm	Above 960 MHz	<500 µV/m.	(dynamically adjusted)	-11 to +28 dBm
		216-960 MHz	<200 µV/m.		
		88-216 MHz	<150 µV/m.		
		30-88 MHz	<100 µV/m.		
Weight:		Audio Output Power and Speakerphone Rating:		Adjacent Channel Power:	
(without battery)	93.5 g	(Private and Group Modes only) into 8 ohms at maximum volume (nominal battery voltage)	500 mW	(at ±25 kHz in 18 kHz BW)	-55 dB
		Distortion at Rated Audio:			
		Electrical	5% Max.		
		Acoustical	10% Max.		

Specifications subject to change without notice.

---

# CONTENTS

	SAFETY AND GENERAL INFORMATION . . . . .	iii
	MODEL INFORMATION . . . . .	vii
	MODEL SPECIFICATIONS . . . . .	viii
	CONTENTS . . . . .	ix
	PREFACE . . . . .	xiii
	Who Should Use This Manual . . . . .	xiii
	How This Manual Is Organized . . . . .	xiii
	Conventions Used in This Manual . . . . .	xiv
	Related Publications . . . . .	xiv
<b>CHAPTER 1</b>	<b>OVERVIEW . . . . .</b>	<b>1-1</b>
	<i>i</i> DEN Digital Modulation Technology . . . . .	1-1
	<i>i</i> DEN Voice Compression Technology . . . . .	1-3
	RF Transmission Bursts . . . . .	1-3
	Calling Area Coverage . . . . .	1-4
	Global Positioning System (GPS) Section . . . . .	1-5
	SIM Cards . . . . .	1-5
	Replacing a SIM Card . . . . .	1-5
<b>CHAPTER 2</b>	<b>COMPONENTS, ICONS, AND INDICATORS . . . . .</b>	<b>2-1</b>
	Component Views . . . . .	2-1
	Display Icons . . . . .	2-2
	Main Menu Icons . . . . .	2-2
	Status Icons . . . . .	2-3
	Call Icons . . . . .	2-4
	Contacts Type Icon . . . . .	2-5
	Outbox Icons . . . . .	2-5
<b>CHAPTER 3</b>	<b>DISPLAYS, MESSAGES, AND ALERTS . . . . .</b>	<b>3-1</b>
	Power-Up Sequence . . . . .	3-1
	Power-Down Sequence . . . . .	3-2

Messages . . . . .	3-2
Self-Test Errors . . . . .	3-2
Self-Test Reset Errors . . . . .	3-2
Service Messages . . . . .	3-3
Alert Tones . . . . .	3-4
Using the Optional Vibrate Function . . . . .	3-6

**CHAPTER 4      PREPARING FOR BASIC LEVEL TESTING . . . .      4-1**

Test Equipment . . . . .	4-1
Reference Unit . . . . .	4-1
Reference Accessories . . . . .	4-1

**CHAPTER 5      BASIC LEVEL CHECKS AND SELF TESTS . . . .      5-1**

Customer Care . . . . .	5-1
Test Conditions . . . . .	5-1
Antenna Condition . . . . .	5-1
Reset Condition . . . . .	5-1
Basic-Level Test Checklist . . . . .	5-1
Preventive Maintenance . . . . .	5-2
Mechanical and Electrical Checks . . . . .	5-3
Shock and Pressure Test . . . . .	5-3
SIM Card Swap Test . . . . .	5-3
Accessory Swap Test . . . . .	5-4
Lockup Test . . . . .	5-4
Battery Connections Test . . . . .	5-5
Testing the GPS Receiver . . . . .	5-5
Voltage Recognition Test . . . . .	5-6
Troubleshooting . . . . .	5-6
Self-Test Procedures . . . . .	5-7
Passcode Test . . . . .	5-7
Programming Menu Settings Check . . . . .	5-7
Call Performance Test . . . . .	5-12

**CHAPTER 6      BASIC LEVEL TEST MODES AND PROCEDURES . . . . .      6-1**

Test Modes . . . . .	6-1
Entering Debug Mode . . . . .	6-1
Display Screens . . . . .	6-2
Entering Test Mode . . . . .	6-3
Test Mode Test Procedures . . . . .	6-4
Audio Loopback Test . . . . .	6-4
ESN and IMEI Matching Test . . . . .	6-5
Engineering Debug Check . . . . .	6-5
Technician Test Procedures . . . . .	6-8
Using iDEN Radio Service Software (RSS) . . . . .	6-8

	Testing with a Recommended Communications System Analyzer. . . . .	6-9
	Connecting the Unit to RSS . . . . .	6-9
	Analyzing Code Plug Error Messages. . . . .	6-11
	Code Plug Help Topic in Windows . . . . .	6-11
	Unit Programming . . . . .	6-11
<b>CHAPTER 7</b>	<b>PREPARING FOR FIELD LEVEL TESTING. . . . .</b>	<b>7-1</b>
	Preparing Equipment for Testing . . . . .	7-1
	Calibrating Equipment . . . . .	7-1
	Checking the RF Cable . . . . .	7-1
	Strong-Signal Environments . . . . .	7-1
	Protecting Static-Sensitive Devices. . . . .	7-1
	Connecting an <i>i</i> DEN Unit to the R-2660 . . . . .	7-2
	Operating the R-2660 . . . . .	7-4
	Disassembling and Reassembling the Unit . . . . .	7-5
	Disassembly Sequence Flowchart . . . . .	7-5
	Assembly/Disassembly Procedures. . . . .	7-5
	Battery Cover . . . . .	7-6
	SIM Card. . . . .	7-7
	Antenna . . . . .	7-8
	Back Housing . . . . .	7-9
	Coin Cell . . . . .	7-10
	Main Board, Microphone, and Seal . . . . .	7-11
	Clip and Keypad . . . . .	7-12
	Flip Assembly . . . . .	7-13
	Exploded Views and Parts Lists . . . . .	7-15
	Component Parts List . . . . .	7-16
	Exploded View . . . . .	7-17
<b>CHAPTER 8</b>	<b>FIELD LEVEL TEST MODES AND PROCEDURES. . . . .</b>	<b>8-1</b>
	Required Test Equipment . . . . .	8-1
	Test Modes . . . . .	8-1
	Entering Test Mode . . . . .	8-1
	Field-Level Test Checklist. . . . .	8-2
	Registration/Call Test . . . . .	8-4
	SQE Test . . . . .	8-5
	TX Power Test. . . . .	8-6
	RX BER Test. . . . .	8-7
	Power-Up Test. . . . .	8-8
	Keypad Test. . . . .	8-9
	Audio Test. . . . .	8-10
	Reset Test . . . . .	8-11
	Reset Log Test. . . . .	8-12

**CONTENTS**

---

Model Assembly (MA) Test Mode Test . . . . . **8-13**  
GPS Receiver . . . . . **8-15**

**APPENDIX A**

**ORDERING REPLACEMENT PARTS  
AND KITS . . . . . A-1**

Replacement Parts . . . . . **A-1**

**INDEX . . . . . I-1**

---

# PREFACE

The *iDEN i830 Digital Multi-Service, Data-Capable Portable Field Service Manual* contains the information necessary to identify and fix problems in the Motorola *i830 Digital Portable*. This unit is based on digital technology and is designed to operate on *iDEN* systems.

Basic and field-level service for the this unit as described in this manual includes troubleshooting, testing, board swapping, and maintenance.

Service for this unit is based on the substitution method: a faulty part is replaced by a working one, providing quicker service to the customer. For example, if the battery is faulty, it is replaced. If the unit requires more complete testing or service than is available at the basic level, it is sent to the field-level service facility, serviced, and returned to the *iDEN* Customer Care Center (ICC).

**NOTE:** Before operating or testing this unit, please read the **Safety and General Information** section in the front of this manual.

## 1.1 Who Should Use This Manual

This manual is intended for service technicians who should be familiar with the test equipment recommended in Appendix A. To help pinpoint basic problems with the unit, first perform the mechanical checks and self tests as described in Chapter 5; then proceed to field level troubleshooting and testing.

## 1.2 How This Manual Is Organized

This manual contains the following chapters and appendices:

**Chapter 1** presents the theory and technology used by the *iDEN* system and the unit.

**Chapter 2** describes the unit's components, icons, and indicators.

**Chapter 3** describes displays, messages, and alerts.

**Chapter 4** describes preparing for basic level testing.

**Chapter 5** describes basic mechanical checks and self test procedures to be performed.

**Chapter 6** describes basic test modes and technician test procedures.

**Chapter 7** describes how to prepare and operate field level test equipment. It also contains disassembly and reassembly instructions.

**Chapter 8** describes field level test modes and procedures.

**Appendix A** provides information on ordering kits and replacement parts. It also contains lists of recommended test equipment.

**Glossary** contains a listing of terms, acronyms, and definitions that apply to the *iDEN* system.

## 1.3 Conventions Used in This Manual

The following conventions are used throughout this manual:

<i>italics</i>	Used for emphasis and new terms
<b>bold</b>	Defines menu items, fields, and buttons
code	Used for sample input and output

## 1.4 Related Publications

The following publications are available separately:

<i>iDEN i830 Digital Multi-Service Data-Capable Phone User's Guide</i>	NNTN5429A
<i>R-2660 Digital Communications System Analyzer Operator's Manual</i>	68P80386B72

---

# CHAPTER 1

## OVERVIEW

To achieve a high spectrum efficiency, the *i830* digital multi-service, data-capable portable uses a unique modulation technology and sophisticated voice-compression algorithm. The voice of the person speaking into the microphone is converted into a digital bit stream consisting of zeros (0) and ones (1). The stream then is modulated into a radio-frequency (RF) signal, which is transmitted over the air to another unit. This process is called *digital modulation*.

### 1.1 *i*DEN Digital Modulation Technology

The *i830* digital portable is a dual band 806-870 MHz and 896-940 MHz unit that can operate in multiple modes: *phone*, *private*, *data*, and *group*. It uses three digital modulation technologies: Quad QAM, Quadrature Phase Shift Keying (QPSK), and Time Division Multiple Access (TDMA).

*Quadrature Amplitude Modulation (QAM)* is a modulation technique that transmits information by altering the amplitude and phase of the radio frequency (RF) signal. Data is converted into complex symbols, which alter the RF signal and transmit the information. When the signal is received, the amplitude and phase are converted back into symbols and then into the original data.

There are three different QAM modes that are used for different applications: *64QAM*, *16QAM*, and *4QAM*. In voice applications, *16QAM* is used, while in data applications, *64QAM*, *16QAM*, and *4QAM* are used.

**NOTE:** The 900 MHz band operates only in *16QAM* modulation.

In *64QAM*, 64 possible combinations of 6 bits are converted into a unique amplitude and phase. In *16QAM*, there are 16 possible combinations of 4 bits, while in *4QAM*, there are 4 possible combinations of 2 bits.

The traditional 25 kHz channel used for two-way radios is split into four QAM signals (subcarriers) that are transmitted simultaneously. This technique can transmit 64 Kbps in a single 25 kHz channel.

The *i*DEN system requires approximately 10 Kbps to transmit a compressed voice; therefore, 64 Kbps can accommodate 6 voice channels or 3 voice channels in enhanced systems.

The signal spectrum of the Quad *16QAM* is shown in Figure 1-1.



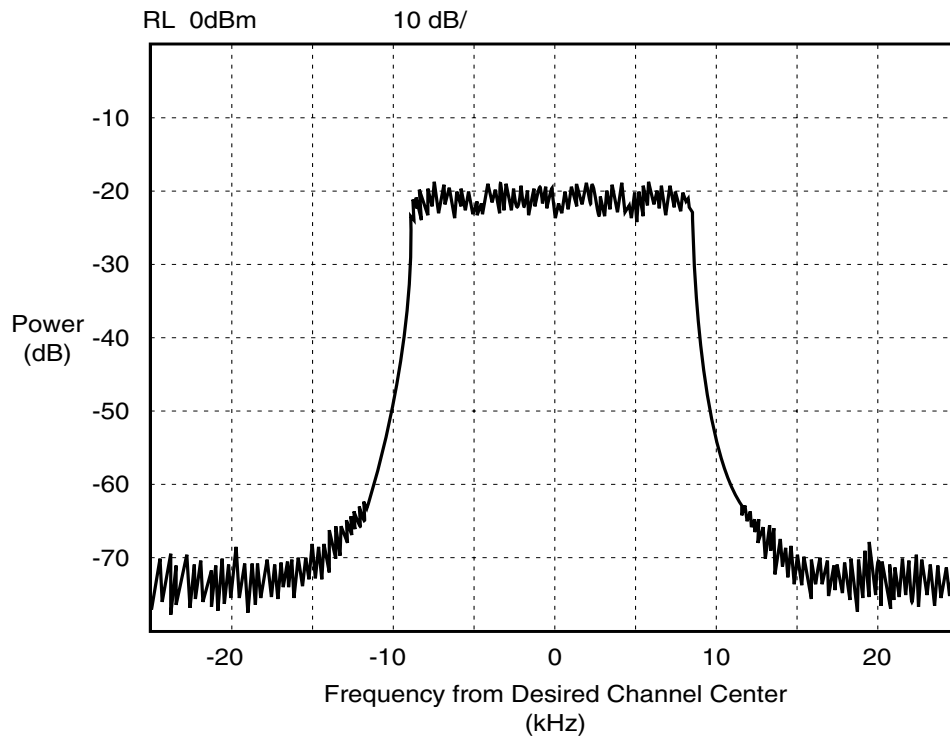


Figure 1-1. Spectrum of iDEN Quad 16QAM

*Quadrature Phase Shift Keying (QPSK)* is one of the most common modulation techniques for satellite communications. In QPSK, a digital data stream is taken two bits at a time to generate four possible phase states of the transmitted carrier. A characteristic of this technique is its resistance to noise.

*Time Division Multiple Access (TDMA)* is used to allocate portions of the RF signal by dividing time into 6 slots, one for each unit. Time allocation enables each unit to transmit its voice information without interference from another unit's transmission.

Transmission from a unit or base station is accommodated in time-slot lengths of 15 milliseconds and frame lengths of 90 milliseconds (see Figure 1-2).

Note that **Rx** (outbound) indicates base-to subscriber transmissions; **Tx** (inbound) indicates subscriber-to-base transmissions. The slots are paired and have a fixed offset of 19 milliseconds; their timings are synchronized by the iDEN system. The TDMA technique requires sophisticated algorithms and one digital-signal processor (DSP) to perform voice compression/decompression and RF modulation/demodulation.

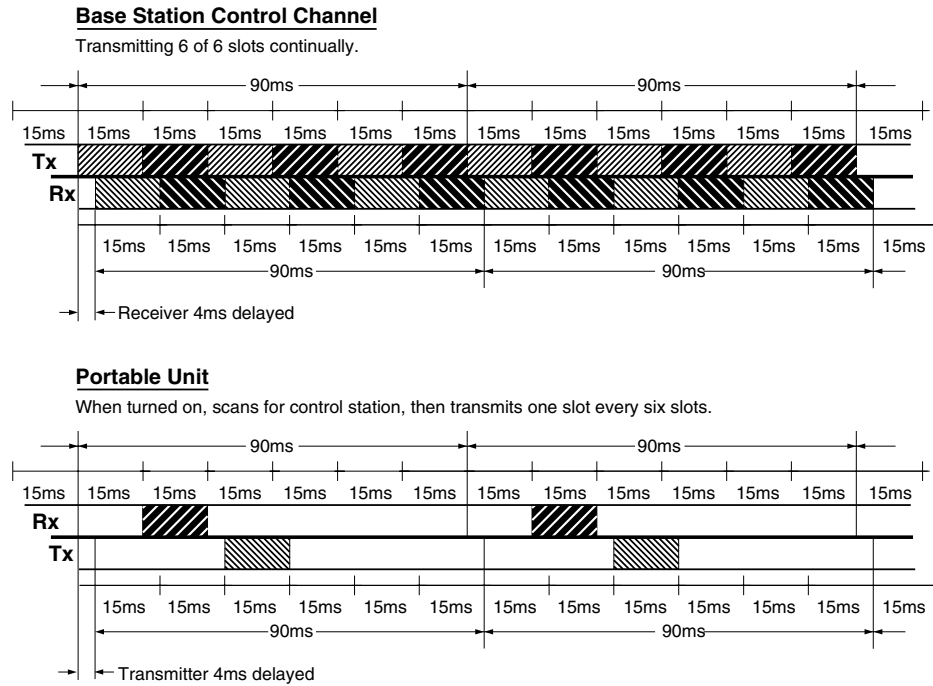


Figure 1-2. iDEN TDMA Format

## 1.2 iDEN Voice Compression Technology

Voice is converted into a digital bit stream by sampling the voice signal at a high rate and converting the samples into numbers, which are represented by bits. A sample consists of 8 bits. Approximately 8000 samples per second (64 Kbps) are required to maintain a reasonable quality.

*Voice compression* reduces the number of bits per second while maintaining the voice at an acceptable quality level. The iDEN system uses a coding technique called *Vector Sum Excited Linear Prediction (VSELP)* to compress voice to 4.2 or 8.0 Kbps. The compressed voice-data bits modulate the RF signal. The compression rate is based on the type of call (dispatch or interconnect) and the network configuration established by the local service provider.

Adding error-correction bits to the coded-voice bits increases the required RF-transmission bit rate to approximately 7.4 Kbps for the 4.2 Kbps voice coder and 14.8 Kbps for the 8.0 Kbps voice coder.

### 1.2.1 RF Transmission Bursts

All RF transmissions within an iDEN system occur in 15-millisecond blocks called *bursts*. An iDEN base station transmits bursts continually on each RF frequency it uses. Transmission bursts from the stations are synchronized in time by signals received from the global positioning satellite (GPS) system. Each burst is numbered; the number is referred to as the *slot* number. All bursts occurring at a given time carry the same slot number.

Inbound transmission bursts (sent from the unit) are offset 19 milliseconds from the outbound burst; the inbound burst begins 4 milliseconds after the end of the outbound burst (see Figure 1-2 on page 1-3). This offset in time allows the unit to appear capable of transmitting and receiving at the same time (it actually is switching rapidly back and forth between receiving and transmitting).

In current iDEN systems, outbound transmissions in the 800 MHz band range from 851–870 MHz; inbound transmissions are 45 MHz lower in frequency. For the 900 MHz band, outbound transmissions range from 935-940 MHz; inbound transmissions are 39 MHz lower in frequency.

An iDEN channel is created by grouping bursts so that their slot numbers differ by a number referred to as the *repetition rate*. The unit uses two repetition rates for interconnect voice calls: 6:1 and 3:1. A single frequency can handle 6 calls using a 6:1 repetition rate with the 4.2 Kbps coder.

Dispatch calls always use this rate. However, the audio quality of the 3:1 repetition rate with the 8.0 Kbps coder is superior to the 6:1 rate with the 4.2 Kbps coder. Most service providers configure the system and unit to allow only the 3:1 rate for interconnect calls.

Calls are set up on a primary control channel (PCCH) in response to a request from a unit or a regular telephone connected to the Public Switch Telephone Network (PSTN). The PCCH is established by the base station equipment; typically, it is a 6:1 channel.

The outbound PCCH carries system information and “pages” to specific subscriber units and asks them to respond if they are available for a call. Inbound PCCH transmissions carry responses to the “pages” and requests by subscriber units to set up calls. Inbound transmissions on the primary control channel only take 7.5 milliseconds and can be timed to occur in either half of a 15-millisecond burst.

The dual band unit will power up in the 800 MHz band and will use these channels for control channels—Primary Control Channel (PCCH) and Broadcast Control Channel (BCCH). The 900 MHz mode will be used only during 3:1 interconnect calls. Every attempt will be made to assign the unit to 900 MHz carriers during new 3:1 interconnect calls, handovers into a cell, and inter-cell handovers. If no resources are available, or if available resources have insufficient channel quality (in the case of a handover), then 800 MHz carriers will be evaluated.

Using the above techniques, the iDEN system can operate 6 voice channels simultaneously in dispatch mode or 3 voice channels simultaneously in interconnect mode on a single RF carrier at 25 kHz bandwidth.

## 1.2.2 Calling Area Coverage

Area coverage is obtained by dividing the area into a mosaic of cells. Coverage is controlled so that frequencies can be reused with less distance between sites. Each cell is covered by a base station, which is classified as *Omni* or *Sectored*. An Omni station connects base transceivers to antennas that have a circular pattern centered at the site. A Sectored station connects base transceivers to directional antennas that point in particular directions. Units that operate in a multi-site system must be able to “handoff” from one coverage area to another as the user moves about during a call. Handoff is controlled by the iDEN system.

## 1.3 Global Positioning System (GPS) Section

The U.S. Department of Defense (DoD) has built a 24-satellite constellation for the purpose of pinpointing locations anywhere on the planet. The satellites circle the earth every 12 hours, transmitting radio signals at a fixed frequency of 1575.42 MHz. The satellites share the 1575.42 MHz spectrum with each other through the use of CDMA modulation.

To determine a location on earth, a receiver must be built that can receive the simultaneous signals from the satellites that are in view of the receiver and use that information to calculate the location of the receiver. The receiver must pick up the signals from 4 satellites. Once the 4 satellites are located, the receiver measures the time it took for the satellite signals to arrive. From this timing information, the distance between the receiver and each satellite can be calculated. The four satellites' ephemeris data provide the satellite's X, Y, and Z positions. The range,  $R$ , is the receiver measurement made by calculating the time it took for the signal to reach the receiver. The user's position, ( $U_x$ ,  $U_y$ ,  $U_z$ ), and the clock bias,  $C_b$ , is then calculated.

To use the GPS, a receiver that can receive the spread-spectrum signals must be built. The detected signals are then converted from RF signals into appropriate digital input formats. These digital inputs are processed and converted into position information. Once the position coordinates are determined, they are communicated to the handset microprocessor and displayed on the screen or transmitted to the base station as required.

## 1.4 SIM Cards

This unit is designed to work with a mini Subscriber Identity Module (SIM). The SIM card contains all of the personal data required to access *i*DEN services. Data held by the SIM card includes:

- Temporary Mobile Subscriber Identity
- Services to which the user subscribes
- PIN and unblocking codes
- Call barring codes

The SIM card is also capable of storing phone numbers and names. Available SIM cards for this unit are 64 kB and prepaid.

### 1.4.1 Replacing a SIM Card

**NOTE:** For details on removing and installing a SIM card, refer to Chapter 7.

When a SIM card is defective and must be replaced with a new one, the following information will be erased:

- The recent calls list
- Call forwarding settings
- Net alerts
- Mobile originated text messages, drafts, and quick notes
- Information stored in Memo
- 3 most recent GPS enabled locations
- Voice records

Voice names

This page intentionally left blank.

## CHAPTER 2

# COMPONENTS, ICONS, AND INDICATORS

To conduct basic troubleshooting and maintenance of the *i830* unit, you must become familiar with the components, display icons, and status indicators associated with the unit.

## 2.1 Component Views












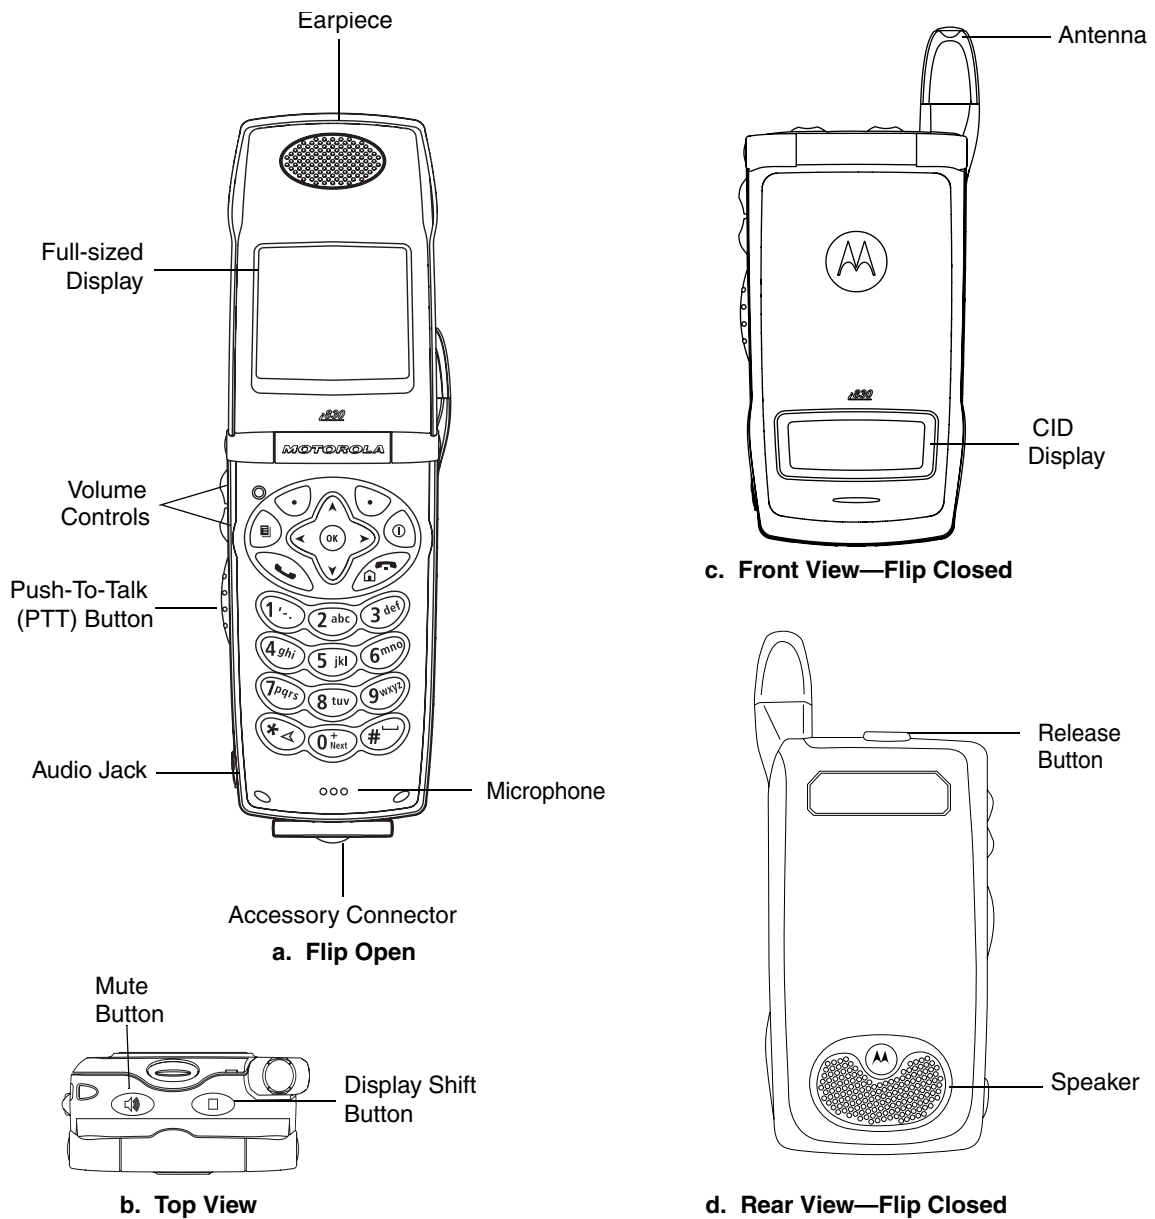






 

Figure 2-1. *i830* Component Views

## 2.2 Display Icons

Icons for this unit provide information that is useful for troubleshooting and testing purposes. All features can be accessed through the main menu. When using a feature, the icon for that feature appears in the upper left corner of the display. Depending upon features and options chosen, the following icons can appear on the unit's display.


### 2.2.1 Main Menu Icons


	<b>Net</b>	Browse the Web.
	<b>Java Apps</b>	Use Java applications on your phone.
	<b>Settings:</b> Display/Info Phone Calls DC/GC Options Volume Security Advanced	Customize your phone.
	<b>Ring Tones:</b> VibeAll list of ring tones Ring Tones menu	Assign ring tones and turn ringer off.
	<b>VoiceRecord</b>	Record and play audio messages.
	<b>My Info</b>	View personal phone information, including phone number and Direct Connect number.
	<b>GPS</b>	Find your approximate geographical location.
	<b>Contacts:</b> new contact form list of contacts Contacts menu	View, store, edit contacts.
	<b>Messages:</b> Voice Mail Net Alert Text Msgs	Access messages.
	<b>Call Forward</b>	Set call forwarding options.


	<b>Datebook:</b> new event form list of events Datebook menu	Schedule appointments.
	<b>Memo</b>	Store a number to access later.
	<b>Call Timers</b>	Phone usage information.
	<b>Recent Calls:</b> list of calls recent calls menu Call Setup menu	Lists recent calls.
	<b>Shortcuts</b>	Create shortcuts to screens.
	<b>Profiles:</b> new profile form list of profiles Profiles menu	Groups of settings you apply together.
	<b>Call Alert:</b> list of call alerts Call Alerts menu	Lists call alerts.


## 2.2.2 Status Icons


Status icons appear in the two rows at the top of the display. Some appear at all times. Others appear only when your phone is engaged in certain activities or when you have activated certain features.


 **Battery Strength**—Indicates that the battery is charging. Three bars indicates that the battery has been fully charged; two bars, not flashing: 2/3 charged; one bar, flashing: 1/3 charged; no bars: the battery needs to be charged.

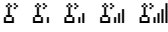 **Signal Strength**—Indicates the device is registered and the strength of the network signal. The antenna portion of the icon is always displayed. Up to 4 bars are displayed next to the antenna. The more bars depicted, the stronger the signal. One bar = approx. 19 SQE and >-103 RSSI, 4 bars = approx. 29 SQE and >-88 RSSI. When the unit is in a no-service state, or the signal is less than 19 SQE or <-103 RSSI, no bars appear next to the antenna.


 **Phone In Use** — your phone is active on a phone call.


 **Direct Connect In Use** — your phone is active on a Direct Connect call.


 **Talkgroup In Use** — your phone is active on a Group Connect call.


 **Active Phone Line** — 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.

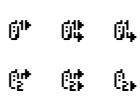


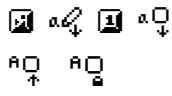
- 


**Call Forward** — your phone is set to forward calls.
- 

 
**Ringer Off** — your phone is set not to ring.
- 


**Speaker Off** — Sets Direct Connect and Group Connect sound to come through the earpiece rather than through the speaker. Your phone does not ring for DC and GC calls if Alert Type is set to SILENT or Vibrate.
- 

**Messages** — you have one or more messages.
- 

**Internet** — you are ready to browse the internet or are browsing the internet.
- 

**T9 Text Input** — you are using T9 Text Input to enter text.
- 

 
**Airplane Mode** — your phone is set to airplane mode.
- 


**Packet Data** — you are ready to transfer packet data or are transferring packet data using a data cable.
- 


**TTY**— Indicates that unit is connected to a TTY device and TTY mode is enabled. You can select either VCO (voice-carry-over) or HCO (hearing-carry-over) mode.


### 2.2.3 Call Icons

 
When you make a call, call icons appear in text area of the phone's display.


- 

Placing a phone call.
- 

Receiving a phone call.
- 

Phone call is active.
- 












Phone call is on hold.
- 

Phone call ended.
- 

Missed phone call.

## 2.2.4 Contacts Type Icons

Contacts stores up to 600 numbers or addresses. Each Contacts entry can store several numbers or addresses. Information stored in Contacts is saved on your SIM card. If you move your SIM card to another SIM-based Motorola phone, you can access information stored in Contacts from that phone. Each number or address stored must be assigned a Contacts type. Contacts type icons that appear on the display are as follows:

	<b>Mobile</b>	phone number
	<b>Direct Connect #</b>	Direct Connect number
	<b>Work1</b>	phone number
	<b>Work2</b>	phone number
	<b>Home</b>	phone number
	<b>email</b>	email address
	<b>Fax</b>	phone number
	<b>Pager</b>	phone number
	<b>Talkgroup</b>	Talkgroup number
	<b>IP</b>	IP address
	<b>Other</b>	phone number

## 2.2.5 Outbox Icons

Messages you have sent are stored in the outbox. These icons appear next to messages in the outbox:

	Sent and confirmed.
	Send attempted.
	Forwarded.
	Received by addressee.
	Not received by addressee.
	Send failed.
	Re-sent.
	Locked.

This page intentionally left blank.


---

## CHAPTER 3

# DISPLAYS, MESSAGES, AND ALERTS

To conduct basic troubleshooting and maintenance of the *i830* unit, you must become familiar with the display screens, errors, messages, and alert tones associated with the unit.

### 3.1 Power-Up Sequence

Extend the antenna for optimum power and press  momentarily to turn on the unit and begin the power-up sequence. The power-up sequence initiates a series of displays on the unit. As shown below, each display reflects a stage of the sequence. If the last display shows the idle screen, the power up was successful; if the last display shows *No Service*, the unit is out of range or there is a hardware or software problem.

If the vibrate function is enabled for incoming phone calls, voice mail, or message mail, the power-up sequence includes a 500 ms. vibrate cycle.

#### 1. Power-Up Display



**Note:** After Powering On the carrier logo will appear and next the T9 text input logo.

#### 2. No SIM Display



-OR-



**Note:** SIM PIN code can be canceled. (See programming menu section, page 5-7.)


#### 3. Connecting Display



#### 4. No Service Display



#### 5. Phone Ready Display (Idle Screen)

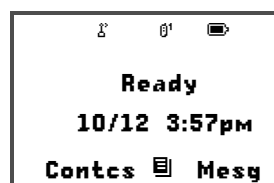

**Note:** Text that appears on Idle screen depends on carrier.

Figure 3-1. Power-Up Sequence Displays

## 3.2 Power-Down Sequence

To power down the unit, press  for one second or more.

## 3.3 Messages

### 3.3.1 Self-Test Errors

The following table contains the list of self-test non-reset errors. These errors are displayed as SELF CHECK ERROR YXXXX (YXXXX represents the identifier for that error).

Table 3-1. Self-Test Errors

Y	XXXX	Description of Error
0	0001	Non-reset error log
0	0002	Codeplug error log

### 3.3.2 Self-Test Reset Errors

The following table contains the list of self-test reset errors. These errors are displayed as SELF CHECK FAIL YXXXX (YXXXX represents the identifier for that error).

Table 3-2. Self-Test Reset Errors

Y	XXXX	Description of Error
0	0100	RAM failure
0	0200	Data lines failure
0	0400	Address line failure
0	0800	Codeplug corruption/invalid
0	1000	Flash checksum error
0	2000	Reset error logging
0	4000	Codeplug mismatch
F	4000	Ergo pre-self-test codeplug error
F	8000	Ergo pre-self-test invalid device or device failure
F	8002	Ergo pre-self-test invalid device or device failure
:	0800	FDI-related error


### 3.3.3 Service Messages

Service messages indicate the probable cause of a problem. The following table lists the messages, their probable causes, and recommended corrective actions.

Table 3-3. Service Messages

Message	Cause	Action
Charger Attached	While Power Down	
Device Attached	17-Pin connector plugged in while powered up.	
Device Detached	17-Pin connector removed while powered up.	
Device Not Compatible	Incompatible with unit's hardware	Acquire compatible software or hardware
Error	Unidentified error	Report problem to your service provider
Invalid Number	Invalid number entered or invalid voice-mail access number received	Re-enter number or report problem to service provider
Low Battery Unable to Locate Sats	Battery level is too low to obtain fix but is able to perform dispatch or interconnect communication	Charge or replace battery
No Entry	No numbers in phone list	Add phone numbers to list
No Service	Phone unable to register	Report problem to service provider
Number Not In Service	Invalid target ID	Re-enter ID or try a different ID
Please Try Again	1. Loss of service or system failure 2. Network problem	1. Ask provider how long problem will continue 2. Report problem to service provider
Service Conflict	Current service conflicts with previously activated service	Deactivate previous service and try current service again
Service Not Available	Not currently available on system	Ask provider when service will be available
Service Restricted	Service not subscribed to	Ask provider when service will be available
System Busy, Try Later	System is currently busy	Try call again later
Target Busy in Private	Target unit in a Private Call or Call Alert	Try call again later
Target Not Authorized	Target unit not authorized to receive call	Do not call unauthorized unit
Technical Error Unable to Locate Sats	Problem detected with the GPS circuitry	Reboot unit. If problem persists, contact Motorola
Unable to locate Sats	Unit does not have clear view of GPS satellites	Make sure user is out in clear sky and stationary. If problem persists, reboot unit.
Unknown User	Unit unknown to system	Report problem to provider
User Not Available	Target unit in Private, Group, or Alert call, or is not in service	Try call again later

### 3.4 Alert Tones

This unit can send alert tones to the earpiece, speaker, or external speaker. All tones are sent to the earpiece. Press  to determine where some of the tones are sent.

As shown in the following table, alert tones have specific frequencies and cadences/durations. They are grouped according to function; grouped tones have the same tone specifications.

Table 3-4. Alert Tones

Tone	Low	High	Freq	Cadence	When Tone Occurs
Automatic Callback	Ear	Spkr	1800Hz	2x (24ms on+24ms off) + 48ms on	Voice channel for prior request
Call Alert Acknowledgment Received	Ear	Spkr	1800Hz	2x (80ms off+80ms on)	Call Alert successfully sent
Call Alert No Ack Received	Ear	Spkr	900Hz	1x500ms on	Call Alert fails
Call Alert Received	Spkr	Spkr	2300Hz	4x (150ms off+150ms on) every 10 seconds	Call Alert received
Call Alert Sent	Ear	Spkr	1800Hz	2x (80ms off+80ms on)	Call Alert acknowledged by FNE
Call Waiting Received	Ear	Ear	440Hz	2x(300ms off+300ms on) every 5 seconds	Phone call received while another call is active
Clear to Send	Ear	Spkr	2300Hz	1x50ms on	Reception inhibited; clear to transmit
Data Ringer	Ear	Spkr	2091/2823Hz	14x (80ms on 2091Hz + 100ms on 2823Hz + 2.5 seconds off)	Unit receives an incoming circuit data call
DTMF (0-9, #, *)	Ear	Ear	DTMF	Continuous	DTMF is transmitted
Earpiece Volume Set	Ear	Ear	1000Hz	Continuous	Earpiece volume changed on quiet channel or in Programming Menu (PRGM)
Group Call Alert	Spkr	Spkr	2300Hz	2x (150ms off+150ms on)	Group call received
In Service	Spkr	Spkr	2300Hz	1x50ms on	Entering in-service mode
Interconnect Busy	Ear	Ear	480/620Hz	1s off + 1s on 480Hz; 1s off +1s on 620Hz continuous	Interconnect channel or line is busy
Invalid Key	Ear	Ear	900Hz	1x80ms on	Invalid key pressed
Low Battery in Idle	Spkr	Spkr	2300Hz	24ms on+24ms off + 24ms on+240ms off + 24ms on+24ms off + 24ms on+30ms off every 30 seconds	Battery below preset value. (Tone sounds from earpiece if in low audio during a dispatch or interconnect call.)
Keypad Volume Set	Ear	Ear	1800Hz	Continuous	Keypad volume changed on quiet channel or in Programming Menu
Message Mail Received in Idle	Spkr	Spkr	2400/2743Hz	8x(64ms on 2400Hz + 64ms on 2743Hz)every 30 seconds	Message mail received while unit is idle
Msg Mail Received in Interconnect	Ear	Ear	2400/2743Hz	8x(64ms on 2400Hz + 64ms on 2743Hz) every 30 seconds	Message mail received while unit is in interconnect mode

Table 3-4. Alert Tones (Continued)

Tone	Low	High	Freq	Cadence	When Tone Occurs
Message Volume Set	Spkr	Spkr	2400/ 2743Hz	8x(64ms on 2400Hz + 64ms on 2743Hz) continuous	Message volume changed on quiet channel or in Programming Menu
Net Alert	Ear	Spkr	880Hz, 1760Hz/ 330Hz, 990Hz	5x (50ms on 880Hz + 50ms on 1760Hz) 8x (50ms on 330Hz + 50ms on 990Hz) repeated every 750ms	Net alert received while in idle
One Minute Beep	Ear	Ear	2300Hz	1x 50ms on	During interconnect calls
Phone Fast Busy	Ear	Ear	480/ 620Hz	0.25s on+0.25s off 480Hz 0.25s on+0.25s off 620Hz continuous	Call failed (system busy, out of service, or trouble with network)
Phone Redial Alert	Spkr	Spkr	2091/ 2556Hz	14x(24ms on 2091Hz + 24ms on 2556Hz)	Phone redial successful
Phone Ring (U.S.)	Spkr	Spkr	2091/ 2556Hz  2230/ 2040Hz  2310/ 2820Hz  3240/ 2140Hz  3160/ 1980/ 2580Hz  2540/ 2300/ 2030Hz  2740/ 3200Hz  2500Hz  2580/ 3200/ 2040Hz	Available ringer tones: 14x(24ms on 2091Hz + 24ms on 2556Hz) + 2.5s off  14x(64ms on 2230Hz + 64ms on 2040Hz) + 2.5s off  3x(400ms on 2310Hz + 400ms on 2820Hz) + 2.5s off  14x(38ms on 3240Hz + 38ms on 2140Hz) + 2.5s off  1x(200ms on 3160Hz + 100ms on 1980Hz + 200ms on 2580Hz) + 2.5s off  1x(200ms on 2540Hz + 200ms on 2300Hz + 200ms on 2030Hz) + 2.5s off  1x(150ms on 2740Hz + 150ms on 3200Hz + 150ms on 2740Hz) + 2.5s off  1x(200ms on 2500Hz + 200ms off + 200ms on 2500Hz + 200ms off + 200ms on 2500Hz) + 2.5s off  1x(200ms on 2580Hz + 200ms on 3200Hz + 200ms on 2040Hz) + 2.5s off	Phone call received
Phone Ring Back	Ear	Ear	440/ 480Hz	2s on+4s off 440Hz; 2s on+4s off 480Hz	Called phone is ringing
Private Call Received	Spkr	Spkr	2300Hz	2x (88ms off+88ms on)	Private call received
Reject	Ear	Spkr	900Hz	1x500ms on	Requested service denied or failed
Ringer Volume Set	Spkr	Spkr	2091/ 2556Hz	24ms on 2091Hz + 24ms on 2556Hz continuous	Ringer volume changed
Sat No Fix	Spkr	Spkr	900 Hz	1x500ms on	Unable to fix on satellite



Table 3-4. Alert Tones (Continued)



 
Tone	Low	High	Freq	Cadence	When Tone Occurs
Self-Test Fail	Spkr	Spkr	900Hz	1x500ms on	Self test fails on power up
Speaker Volume Set	Spkr	Spkr	1000Hz	Continuous	Volume changed on quiet channel or in Programming Menu
System Busy	Ear	Spkr	480/620Hz	4x(0.25s on+0.25s off) 480Hz; 4x(0.25s on+ 0.25s off) 620Hz	All channels are busy
Talk Permit	Ear	Spkr	1800Hz	2x (24ms on+24ms off) + 48ms on	PTT transmission accepted
Talk Prohibit	Ear	Spkr	900Hz	Continuous	PTT transmission not allowed
TOT Warning	Ear	Spkr	900Hz	1x80ms on	Transmission rights expiring
Valid Key Press	Ear	Ear	1800Hz	1x80ms on	Valid key pressed or unit powered up
Voice Mail Received in Idle	Spkr	Spkr	2400/2743Hz	8x(64ms on 2400Hz + 64ms on 2743Hz) every 30 seconds	Voice mail received while unit is idle
Voice Mail Received in Interconnect	Ear	Ear	2400/2743Hz	8x(64ms on 2400Hz + 64ms on 2743Hz) every 30 seconds	Voice mail received while unit is in interconnect mode

### 3.5 Using the Optional Vibrate Function

The vibrate function (VibraCall) notifies the user of incoming phone or dispatch calls, DC/GC calls, messages, notifications, and call alerts.

If the unit is set for Vibrate in any mode, it will vibrate for 1/2 sec during the power-up sequence.

**To set unit to vibrate for all calls:**

1. Using the keypad, press the Menu key .
2. Scroll to **Ring Tones**, and then press .
3. Scroll to **Vibrate All**, and then press .
4. Scroll left or right to set **Vibrate All** on or off.
5. After you select a Vibrate mode, the unit vibrates for 1/2 sec while exiting the menu.

The following table describes the cadence for each vibrator mode:

Table 3-5. Vibrator Settings

Mode	Cadence
Vibrate All or Selectable Vibrate	2x(500ms on, 500ms off) + 500ms on + 2.5 sec. off
Ring Tones	Three Vibrate Only cadences, followed by an audible ring tone until answered or party hangs up
Off	Turns off the vibrator function

To set unit to vibrate for Direct Connect and Group Connect calls only:

1. From the main menu, select **Settings > 2-Way Radio > Alert Type**.
2. If **Alert Type** does not appear, from the main menu select **Ring Tones**. Make sure **Vibrate All** or **Silent All** is set to **Off**. Repeat step 1.
3. Press **OK** to change.
4. Scroll to **Vibe**.
5. Press **OK** to select.

This page intentionally left blank.

---

## CHAPTER 4

# PREPARING FOR BASIC LEVEL TESTING

### 4.1 Test Equipment

The following equipment is useful when testing an *i830* unit: a reference unit, a reference SIM card, and reference accessories. For a list of recommended test and programming equipment used to troubleshoot this unit, see *Appendix A: Ordering Replacement Parts and Kits*.

#### 4.1.1 Reference Unit

Use a *reference unit* (*i830* unit known to be in good working order) to verify the accuracy of some tests. You may want to set the Auto Answer Settings Menu setting so that the reference unit automatically answers incoming calls for testing purposes.

#### 4.1.2 Reference Accessories

Use *reference accessories* (accessories known to be in good working order) to verify the accuracy of some tests.

This page intentionally left blank.

---

## CHAPTER 5

# BASIC LEVEL CHECKS AND SELF TESTS

Before you perform basic troubleshooting and self tests on an *i830* unit, determine if any special conditions could affect testing and check the units for defective parts.

There are five categories of basic tests:

- Preventive maintenance
- Mechanical/electrical checks
- Troubleshooting
- Self tests
- Technician tests

Test procedures are listed in the order in which they should be implemented. Each test contains a description of what it does and the approximate time needed to perform it. For your convenience, a checklist is included that can be used to ensure that all the necessary tests are conducted.

### 5.1 Customer Care

It is sometimes helpful to contact your regional Customer Care representative to determine if the customer has service or billing issues or is known to be using the unit in a poorly covered area. The representative also can inform you if there are system outages or known unit defects.

### 5.2 Test Conditions

During testing, ensure the following antenna conditions are adhered to. Reset conditions can be comparatively difficult to diagnose.

#### 5.2.1 Antenna Condition

For intermittent or no transmit problems, ensure the antenna stays fully extended or fully collapsed at all times, never partially extended. If the antenna is loose or collapses halfway down, the unit can lose up to 20 dB of radiated power.

#### 5.2.2 Reset Condition

A reset condition can be the most difficult failure to duplicate because a reset can be caused by software, hardware, system, accessory, and coverage problems. A severe hardware failure usually can be detected immediately.

### 5.3 Basic-Level Test Checklist

Use the following checklist to ensure that all the necessary tests are performed and to provide a tracking mechanism in case the unit is sent to the next level of service. Check the appropriate box for each test performed and indicate whether or not the test was completed successfully.

Table 5-1. Basic-Level Test Checklist

Done	Test	Pass	Fail
	Shock and Pressure		
	SIM Card Swap		
	Accessory Swap		
	Lockup		
	Battery Connections		
	Voltage Recognition		
	GPS Receiver		
	Passcode		
	Programming Menu Settings		
	Call Performance		
	Audio Loopback		
	ESN and IMEI Matching		
	Level Set		
	Engineering Debug Check		
	Codeplug Repair Procedure		
	Codeplug Troubleshooting		
	Corrupted Software Repair Procedure		

## 5.4 Preventive Maintenance

Although the unit does not require a scheduled preventive maintenance program, a visual inspection and cleaning is recommended before testing begins.

**NOTE:** Do not use aerosol sprays, tuner cleaners, or other chemicals to clean the unit. Damage to the plastic surfaces might occur.

### To clean the unit (approx. 3 min.):

1. Prepare a **0.5%** solution of a mild dishwashing detergent and water.
2. Moisten a clean, soft cloth with solution and wipe surfaces.

**NOTE:** Do not allow solution to drip into unit openings, such as microphone, audio jack, etc.

3. Remove any dirt from the unit using a stiff, non-metallic, short-bristled brush.
4. Wipe and dry the unit with a soft, absorbent, lint-free cloth. Make sure that there are no damp spots on the connectors or in cracks and crevices.

## 5.5 Mechanical and Electrical Checks

Before conducting more complex tests, clean and check the unit for any mechanical defects that might cause or contribute to the problem.

The following tests constitute the mechanical and electrical checks of the unit:

- Shock and Pressure
- SIM Card Swap
- Accessory Swap
- Lockup
- Battery Connections
- GPS Receiver
- Voltage Recognition

### 5.5.1 Shock and Pressure Test

Use this test to check the ability of the unit to withstand shock and pressure.

**NOTE:** Perform this test with the rear cover securely in place and antenna completely pushed in.

**To perform the shock and pressure test (test time approx. 3 min.):**

1. Power up the unit.
2. Slap the front (display), sides, and back (battery) of the unit into the palm of your hand.

If the unit turns off, displays **Reset**, or goes red, retry this test with a battery known to be in good working condition. Verify that the battery contacts are clean.

If the original battery is bad, replace it. If the reset problem persists, replace the unit.

3. Use your thumbs to apply pressure to the front (display), sides, and back (battery) of the unit.

If the unit turns off, displays **Reset**, or the LED goes red, retry this test with a battery known to be in good working condition.

If the original battery is bad, replace it. If the reset problem persists, replace the unit.

4. Power down the unit. Send the defective unit to the iDEN Radio Support Center.

### 5.5.2 SIM Card Swap Test

Use this test to determine if the SIM card is defective, or if the unit is defective.

**To perform the SIM card swap (test time approx. 5 min.):**

1. Power off the unit, and then remove the battery.
2. Remove the SIM card from the unit (see Chapter 7 for removal instructions).



3. Clean the SIM card, if necessary, by wiping its surfaces with a clean, static-free cloth, and then check the contact areas in the unit for foreign material, damage, or other defects.
4. Replace the SIM card with the test (reference) SIM card. Ensure the test SIM card is clean.
5. Power on the unit, and verify that the test SIM card works with the unit.

If the unit works, the customer's SIM card is defective and should be replaced, or the problem is due to operator error, system, or carrier. If the unit does not work, the unit is defective and should be sent to the *iDEN* Radio Support Center.

**NOTE:** If a defective SIM card is replaced with a new card or test card, all personal information (voice notes, datebook entries, etc.) that was stored on the original card will be lost.

6. Install the customer's SIM card in a test (reference) unit.

If the test unit works, the customer's unit is defective and should be sent to the *iDEN* Radio Support Center

### **5.5.3 Accessory Swap Test**

Use this test to determine if the unit's accessories are defective.

**NOTE:** When adding or removing accessories, the full-sized screen displays "Device Attached" or "Device Detached" and CID screen displays "Device."

#### **To perform the accessory swap (test time approx. 5 min.):**

1. Remove the accessory and check the contact areas for foreign material, damage, or other defects.
2. Replace the problem accessory with the reference accessory.
3. Verify the reference accessory works with the unit.

If the reference accessory works, the customer's accessory is defective and should be replaced.


4. Verify the customer's accessory works with a reference unit.

If the accessory works, the customer's unit is defective and should be sent to the *iDEN* Radio Support Center.

### **5.5.4 Lockup Test**

Use this test to determine if the unit locks up when keys are pressed or when it is powered down.

#### **To perform the lockup test (test time approx. 6 min.):**

1. Power up the unit.
2. Press  to clear display inputs.

3. Press each of the alphanumeric keys to see if the unit responds. If the unit does not respond to a pressed key, remove the battery to cycle power on.

If the problem persists after several tries, replace the unit.

### 5.5.5 Battery Connections Test

Use this test to check the battery connections in the unit.

#### To perform the battery connections test (test time approx. 5 min.):

1. Remove the battery cover and battery from the unit.
2. Inspect the battery for physical damage.

If damage is evident, replace the battery.

3. Insert and remove the battery several times to check the battery connections and back plate of the unit.

If either components are damaged, replace the unit.

4. Check the battery contacts for foreign material. Use a gold contact cleaning pen (see *Appendix A: Ordering Replacement Parts & Kits* for part number) to clean the contact area on the battery.



**CAUTION:** Do not use a pencil eraser or similar material to clean the contacts. If you do, damage can occur to the contacts.

5. Check the battery cover to ensure it fits and attaches properly to the back of the unit. Replace, if necessary.
6. Use a non-metallic probe or similar object to slightly depress the battery contacts. Do not press contacts below flush with battery floor nor beyond their normal travel. They should spring back to their original position.


If the battery contacts do not spring back, they are damaged. Replace the unit.

### 5.5.6 Testing the GPS Receiver

The GPS receiver does not require alignment. The functionality of the receiver can be checked using the autonomous mode feature.

**Equipment Required:** A known good i830 radio, or a commercial GPS receiver.

#### To test this function:

1. Move the unit to an open sky area, preferably outside—away from tall buildings and foliage.
2. With the unit turned on, press .
3. Scroll until the **GPS** menu option is highlighted.
4. Press SELECT.

5. Scroll down on the **GPS** menu until the “POSITION” option is selected.
6. Press SELECT. The unit will display a “Position” information sheet.
7. Press RFRSH. The unit will respond with “*Scanning for Satellites*” or “*Satellite Data Is Outdated, Continue?*” depending upon whether the GPS Almanac is up-to-date or not.
8. If the unit responds with “*Satellite Data is Outdated, Continue?*” press YES, otherwise, no action is required. The unit is searching for satellites. Once it has obtained a position fix, the unit will display the “Position” information sheet again. This could take as long as 10 minutes.



**CAUTION:** The unit must be held in a fixed position during the time that it is searching for satellites.

9. Scroll down until the position coordinates are displayed. Compare these position coordinates to a known good *i830* unit or a commercial GPS receiver. If a commercial GPS receiver is used, the coordinates must be displayed according to the WGS84 standard

### 5.5.7 Voltage Recognition Test

Use this test to check the voltage-recognition circuit in the unit. To accomplish this test, the unit must first be registered on an *iDEN* system.

Compare the readings on the unit under test with the readings on a reference unit.

#### To perform the voltage recognition test (test time approx. 4 min.):

1. Perform the Battery Connections test.
2. Power up the unit with a fully charged battery that is known to be in good working order. Three voltage bars (4 Vdc) should appear on the Battery Strength icon.

Note that:

0 bars  $\cong$  0–10% of full charge

1 bar  $\cong$  11–34% of full charge

2 bars  $\cong$  35–64% of full charge

3 bars  $\cong$  65–100% of full charge

3. Complete a Direct Call and monitor the Battery Strength icon while the **Push- to-Talk (PTT)** button is pressed.
4. Power down the unit.

If this test is successful, place the unit’s battery in the reference unit and re-run the test.

## 5.6 Troubleshooting

Troubleshooting can help identify the problem and determine the next action to take (continue testing, replace parts, or send unit to the Radio Support Center). Refer to the *iDEN Customer Care Troubleshooting Guide* for information on how to perform common troubleshooting procedures.

## 5.7 Self-Test Procedures

An i830 unit allows you to conduct automatic self tests to ensure that it is working properly. Self-test procedures include gathering information from the unit's displays and testing the functionality of basic components. These procedures usually do not require test equipment other than a reference SIM card.


The following self-tests can be performed on an i830 unit:

- Passcode
- Programming Menu Settings
- Call Performance

### 5.7.1 Passcode Test

Use this test to determine the passcode for the unit.

**To perform the passcode test (test time approx. 5 min.):**

1. Power on the unit.
2. If the display reads *Unit Locked Enter Code*, enter **0000** or the 4-digit code provided by the customer. (If the customer has changed the passcode but does not remember the new code, read the codeplug to determine the passcode.)
3. If the passcode unlocks the unit, from the **Main Menu**, select **Settings > Security > Phone Lock**, and press  under **Off**.

If the unit does not unlock, repeat the test. If the problem persists, send the unit to the field level of service.

**NOTE:** If applicable, ensure that the unit's codeplug file is copied and retained for future use.

### 5.7.2 Programming Menu Settings Check

Use this test to verify that the unit's menu settings perform correctly.

**To perform the settings check (test time approx. 10 min.):**

**Display/Info:** The Display/Info menu controls how the keypad and display appear:

- **Wallpaper** — Wallpapers can be set at different time settings and in a random order.  
**Settings > Display/Info > Wallpaper > OK > Wallpaper.**  
**Settings > Display/Info > Wallpaper > OK > Auto Cycle.**
- **Palette** — Sets various background colors. **Settings > Display/Info > Palettes > OK.**
- **Text Size** — User can select displayed text size. **Settings > Display/Info > Text Size > OK.**
- **Home Icons** — When activated, displays Shortcut Icons on the idle screen.  
**Settings > Display/Info > Home Icons > OK.**

- **Backlight** — controls how long backlight stays on after you make or receive a call.
- **Clock** — controls whether the time and date appears on the idle screen, sets the format of the time and date, and sets the year.
- **Menu View** — User can select the menu display in either LIST or ICON view.  
**Settings > Display/Info > Menu View > OK.**
- **Large Dialing** — Displays transient large number text while dialing.  
**Settings > Display/Info > Large Dialing > OK.**
- **Contrast** — sets the contrast on the display. To set the contrast of the display:
  1. From the main menu, select **Settings > Display/Info > Contrast.**
  2. Press **OK** to change.
  3. Scroll left or right to set the contrast.
  4. Press **OK**.
- **Language** — sets the language that your phone displays.

### Phone Calls Features

The Phone Calls menu controls how your phone handles phone calls:

- **SetLine** — sets phone line 1 or phone line 2 as the active line for outgoing calls.
- **AnyKeyAns** — If this feature is on, you can answer calls by pressing any key on the keypad.
- **AutoRedial** — sets your phone to automatically redial calls you make when the system is busy.
- **CallWaiting** — To turn off Call Waiting for the next call you make or receive:
  1. From the main menu, select **Settings > Phone Calls > Call Waiting.**
  2. Press **OK** to change.
  3. Scroll to **Off.**
  4. Press **OK**. CallWaiting is turned back on when you end the call.
- **Auto Ans** — sets your phone to automatically answer an incoming call after a specified number of rings. When this feature is on, the phone answers by connecting you to the caller; it does not send the call to voice mail, unless you are out of coverage or on the line.
- **Flip Activation** — User can set the flip opening to answer and/or end a call.  
**Settings > Phone Calls > Flip Activation > OK > Flip to Ans.**  
**Settings > Phone Calls > Flip Activation > OK > Flip to End.**
- **Minute Beep** — causes beep to sound every minute of an active call.
- **CallDuration** — causes the duration of a call to appear on the phones display when the call ends.
- **TTY** — lets you use your phone with a TTY device. To use your phone to make phone calls using a teletypewriter (TTY) device:
  1. Connect one end of a 2.5 mm cable into the audio jack on your phone. Connect the other end of the cable to your TTY device.

2. Make sure that your phone's TTY feature is on and select the TTY mode you want to use.
  3. Use your phone to enter phone numbers and make calls.
- **Notifications** —To control whether your phone sounds message notification tones while you are on phone calls:
    1. From the main menu, select **Settings > Phone Calls > Notifications**.
    2. Choose the option you want:
      - Receive All** — Tones sound during calls for all types of messages.
      - Msg Mail Only** — Tones sound during calls for mail messages; tones for all other types of messages are held until you end calls.
      - Delay All**—Tones for all types of messages are held until you end calls.
    3. Press **OK**.
      - Tip:** To set notifications options during a call: Press **OK**. Select **Notifications**.

## 2-Way Radio Options

The Two-Way Radio menu controls how your phone handles Direct Connect (DC) and Group Connect (GC):

- **Tkgroup Silent** — controls whether you hear group calls or call alerts to your Talkgroup. To receive group calls made to a Talkgroup, you must join the Talkgroup. You can belong to only one Talkgroup at a time. When you join a new Talkgroup, you no longer belong to your previous Talkgroup. To join a Talkgroup:
  1. Press **#**. Then enter the Talkgroup number using the keypad.
  - or-
  2. Choose the Talkgroup name from Contacts or recent calls list.
- **Tkgroup Area** — lets you name Talkgroups and choose your Talkgroup area.
- **One Touch DC** — One Touch PTT sets your phone to call the most recent Private ID on the recent calls list, or to a Private ID you choose, every time you press the PTT button. To set your phone to call the most recent Private ID on the recent calls list:
  1. From the main menu, select **Settings > DC/GC Options > One Touch DC**.
  2. Scroll to **Last Call**.
  3. Press **OK**.
- **AlertType** — sets your phone to make no sound when you receive DC and GC calls. To set your phone to vibrate instead of making a sound when you receive DC and GC calls, even if you want your phone to ring for other features:
  1. From the main menu, select **Settings > DC/GC Options > Alert Type**.  
If **Alert Type** does not appear, from the main menu select **Ring Tones**. Make sure **VibrateAll** or **SilentAll** is set to **Off**. Repeat step 1.
  2. Press **OK** to change.
  3. Scroll to **Vibe**.
  4. Press **OK** under Select.  
If your phone does not include a vibrate feature, you can still set your phone make no sound. Scroll to **Silent** in step 3.

## Personalize

- **Menu Options** — User can reorder menu items and add/remove stored applications.  
**Settings > Personalize> Menu Options > OK > Reorder Menu.**  
**Settings > Personalize> Menu Options > OK > Add/Remove Apps.**
- **Up Key** — At idle, user can press UP key as shortcut to selected application.  
**Settings > Personalize> Up Key > OK.**
- **Down Key** — At idle, user can press DOWN key as shortcut to selected application.  
**Settings > Personalize> Down Key > OK.**
- **Left Key** — At idle, user can press LEFT key as shortcut to selected application.  
**Settings > Personalize> Left Key > OK.**
- **Right Key** — At idle, user can press RIGHT key as shortcut to selected application.  
**Settings > Personalize> Right Key > OK.**
- **Center Key** — At idle, press Ⓞ as shortcut to selected application.  
**Settings > Personalize> Center Key > OK.**
- **Left Sftkey** — Customize the left soft key to the user selected application.  
**Settings > Personalize> Left Sftkey > OK.**
- **Right Sftkey** — Customize the right soft key to the user selected application.  
**Settings > Personalize> Right Sftkey > OK.**
- **Power Up** — User selects startup default application upon powering up the radio.  
**Settings > Personalize> Power Up > OK > App.**






## Volume Features

The Volume menu sets the volume of sounds your phone makes:

- **Line1** — sets ringer volume for phone line 1.
- **Line2** — sets ringer volume for phone line 2.
- **Messages** — sets the volume of message notifications.
- **Earpiece** — sets the volume of sound coming out of the earpiece.
- **Speaker** — sets the volume of sound coming out of the speaker.
- **Keypad** — sets the volume of sound associated with pressing keys and buttons.
- **Java Earpiece** — Sets the Earpiece volume when selected java application is on.
- **Java Speaker** — Sets the Speaker volume when selected java application is on.
- **Data** — sets the volume of sounds that notify you that you are receiving a circuit data call.



## Security Features

 
The Security menu lets you turn security features on and off and change passwords:

- **Phone Lock** — turns on a feature that locks your phone, either immediately or automatically after a set period of inactivity. An unlock code is required to enable this feature, to unlock the phone, and to set a new Unlock code. Contact your service provider for your default unlock code.
- **KeypadLock**— locks the phone’s keypad, either immediately or automatically after a set period of inactivity. To lock the keypad:
  1. From the idle screen, press .
  2. Press .  
If you press a key while the keypad is locked, instructions for unlocking the keypad display briefly. To unlock the keypad:
  3. From the idle screen, press .
  4. Press .  
While the keypad is locked, you can respond to incoming calls, messages, and alerts just as you do when the keypad is not locked. When finished, press  to return to the idle screen. The keypad remains locked.
- **SIMPIN**— enables and disables your phone’s SIM PIN security feature. When the SIM PIN requirement is on, you are prompted to enter your PIN each time you turn on your phone.


**Note:** If a SIM PIN is required, your phone will not function until the SIM PIN is entered, except for making emergency calls. When the PIN requirement is off, your phone can be used without entering a PIN.

**Important:** When the SIM PIN requirement is off, the personal data on your SIM card is not protected. Anyone can use your phone and access your personal data.

1. From the main menu, select **Settings > Security > SIM PIN**.
  2. Scroll to **On** or **Off**.
  3. Press .
  4. Enter the current SIM PIN.
  5. Press .
- **GPS PIN** — enables and disables your phone’s GPS PIN security feature. To turn the GPS Enabled security feature on or off:

1. From the main menu, select **Settings > Security > GPS PIN**.
2. Scroll to **On** or **Off**.
3. Press .
4. Enter the current GPS PIN.

**Note:** When you receive your phone, your GPS PIN is 0000.

5. Press .  
To change your GPS PIN:
1. From the main menu, select **Settings > Security > Change Password > GPS PIN**.
2. Enter the current GPS PIN.

**Note:** When you receive your phone, your GPS PIN is 0000.



3. Press **OK**.
  4. Enter the new 4- to 8-digit GPS PIN.
  5. Press **OK**.
  6. Enter the new 4- to 8-digit GPS PIN to confirm.
  7. Press **OK**.
- **Change Password** — changes your phone unlock code, security code SIM PIN, and GPS PIN.

### Advanced Features

The Advanced menu contains advanced and rarely used Settings features.

- **Alert Timeout** — controls the amount of time a tone continues to sound when you receive a message notification or call alert.
- **Headset/Spker**—If you use a headset or similar device with your phone, you can set your phone to send incoming sound to the headset only, or to the headset and the speaker at the same time:
  1. From the main menu, select **Settings > Advanced > Headset/Spker**.
  2. Press **OK**.
  3. Scroll to **HdsetOnly** to send incoming sound to the headset only.  
**-or-**  
Scroll to **Hdset&Spker** to send incoming sound to the headset and the speaker at the same time.
  4. Press **OK**.
- **Connectivity** — **Network ID** sets the phone's network IDs and their roaming options under the direction of your service provider; **Master Reset** lets your service provider to reset your service in the event of a security or provisioning problem.
- **Reset Defaults** — **Reset Settings** returns all settings to their original defaults; **Reset All** returns all settings to their original defaults and erases all stored lists. Use only under the direction of your service provider.
- **Return to Home** — controls how long the recent calls list displays after calls.
- **Airplane Mode** — User option to stop unit from receiving/transmitting radio frequency.  
**Settings > Advanced > Airplane Mode > OK > Off.**  
**Settings > Advanced > Airplane Mode > OK > On.**  
**Settings > Advanced > Airplane Mode > OK > [Help].**
- **Phone Only** — prevents your phone from making or receiving Private calls or group calls.
- **BaudRate** — sets the baud rate at which your phone communicates with a laptop computer, PC, or similar device.

### 5.7.3 Call Performance Test

Use this test to verify the unit's ability to complete interconnect and dispatch calls.

**NOTE:** To prevent FM noise interference during testing, be sure to separate the test units by an appropriate distance.

**Required equipment:** reference unit

**To perform the call performance test (test time approx. 7 min.):**

1. Power up the unit. Wait until registration is complete before continuing.
2. Place an interconnect call from the problem unit to the reference unit.
3. Ensure that both units have a signal strength of 3 bars or more.
4. Press **Menu > Settings > Volume** (Speaker Volume), and use the **Volume** keys to set the speaker volume of the problem unit to 3 bars.
5. Verify that the problem unit performs within audio-quality standards.

If defects such as distortion, hum, or screeching exist, replace the unit.

6. Place a dispatch call to another unit in the group.

If defects such as distortion, hum, or screeching exist, replace the unit.

7. To automate this test, turn on the Auto Answer menu setting (**Menu > Settings > Phone Calls**) in the reference unit and place the unit next to a good source of voice audio, such as a tape-recorded speech.

This page intentionally left blank.

---

## CHAPTER 6

# BASIC LEVEL TEST MODES AND PROCEDURES

To complete basic testing of an *i830* unit, you must enter a test mode to retrieve data from the unit, and perform the technician tests in the correct sequence with the appropriate equipment.

Test procedures are listed in the order in which they should be implemented. Each test contains a description of what it does, the approximate time needed to perform it, and the type of equipment required (if any).

**NOTE:** The unit must be powered up and registered before performing most tests.

## 6.1 Test Modes

Some tests require that a certain mode be entered to conduct the test and/or retrieve data from the unit. The following test modes are used with this unit:

- Engineering debug mode (includes trace mode)
- Test mode

**NOTE:** Do not enter these modes until the unit has been powered up and the power-up sequence has been completed.

### 6.1.1 Entering Debug Mode

Use this procedure to access the debug mode.

#### To enter debug mode:

1. Power up the unit. Wait until registration is complete before continuing.

**NOTE:** Steps 2 through 5 must be performed quickly (no more than one second between each key press).

2. Press #.
3. Press \*.
4. Press **Menu**.
5. Press the right **Scroll** key. You now are in debug mode.

If you press the option key under **Trace** while in debug mode, you can enter trace mode. To exit trace mode, re-enter debug mode, press the option key under **Trace** again, and then press the option key under **Exit**.

In trace mode, the unit switches every five seconds between debug mode and normal operation to allow you to monitor and sample a variety of signals and signal characteristics, particularly in the SQE/Carrier and multi-data displays.

To exit debug mode, press the option key under **Back**.

### 6.1.2 Display Screens

Display screens on this unit provide information that is useful for troubleshooting purposes. These displays appear only when the unit is placed in debug mode (see “Entering Debug Mode” on page 6-1).

To navigate through the screens, press the appropriate scroll key to highlight the desired screen, and then press the View option key. To select a choice within a screen, press the Select option key. To exit from a choice or screen, press the Back option key.

Table 6-1. Display Screens

Name	Description
Unit Info • Phone Model  • CP Ver  • USR Ver  • CSD Ver  • Software  Tegic  Flash Packs	Displays the unit model number and product sub ID, such as <i>i830</i> and <i>A</i> .  Displays the Codeplug Version. The first half of the line displays the codeplug structure and default version; the second half displays the codeplug bandmap.  Version of carrier specific modification to the product code plug. Programmed at shipment.  Displays the Customer Static Data version. The first number indicates the customer. The second number indicates the structure revision. The third number indicates the data revision.  Displays the current software version programmed in the unit, as well as the software type (RSS model) and build date.  Text 9 code version/LDB version.  Version of the preferred language: French, Spanish, Hebrew, Korean, or Portugese and the associated Font Pack.
Total Usage	Displays the number of minutes the unit has used a traffic (dispatch and interconnect) or a Packet Data channel since manufacture.
Tx Status	First line displays the SQE/Carrier data: Outbound signal quality, Frequency band, current carrier code, and color. Second line displays Tx power cutback in RSSI. Third line displays current temperature and the difference between the current temperature and temperature 2 seconds ago.
Rx Status	First line displays the SQE/Carrier data: Inbound signal quality, Frequency band, current carrier code, and color. Second line displays Rx power cutback in RSSI. Third line displays AGC Step Attenuator State, Channel Code.
N6:1 Intrenct	Parameter details for the 6:1 Interconnect Feature enabling transmission of RF-originated messages through the telephone system. Line 1 shows <b>MS</b> , the Mobile Subscriber's ability to support 6:1 Interconnect and <b>FNE</b> , the Fixed Network Equipment's ability to support 6:1 Interconnect respectively. Numbers 0 or 1 indicate No or Yes respectively. Line 2 shows <b>I</b> , Interleave of the current channel, <b>O</b> , Offset of the current channel, and <b>S</b> , Sub-slot of the current channel. Values for Interleave are 1 – 24, Offset values are 0 – 23, and Sub-slot can be A, B or N. Line 3 shows <b>ECC</b> , Extended Color Code and <b>PO</b> , Primary Control Channel Offset of the current carrier. Values for ECC are 0 – 16. Values for PCCH Offset are 0 - 11. During Trace Mode, radio activity such as interconnect, dispatch call, packet data session, registration, or location update information will automatically update every 2 seconds.

Table 6-1. Display Screens (Continued)

Name	Description
GPS	Displays the GPS location, time info, assist, navigation, summary, GPS version.
IMEI/SIM ID	Displays the electronic serial number and SIM ID serial number. The IMEI is the global name assigned to the mobile station at manufacturing time and should correspond to the serial-number tag of the unit. The SIM ID is the SIM electronic serial number and should correspond with the number stamped on the SIM card. Pressing <b>OK</b> allows the IMEI/SIM ID to be traced.
Registr Log	Displays the Dispatch Log, Interconnect Log, Packet Data Log, Mobile IP Log, and Phone Rst Log. Registration Log information is updated when the user deselects and selects the Registr Log choice.
Err/Chan Codes	Displays the physical channel that the unit is connected to or the radio link procedure that is currently active. Also, displays error codes of errors encountered during normal operation if Err/Chan codes is On. At power up, the Err/Chan Codes is Off.
Current Freq	Displays current frequency and band. Pressing <b>OK</b> allows the current frequency and band to be traced.
Dispatch IDs	Displays the Dispatch Group ID affiliated with the unit in the current dispatch-location area. Also, displays the Dispatch Individual ID affiliated with the unit in the current dispatch location. Pressing <b>OK</b> allows the dispatch IDs to be displayed periodically.
Band Info	Displays primary and secondary bands.
Bandmap	Displays the currently selected regional bandmap. Pressing <b>OK</b> allows the bandmap to be displayed periodically.
Hardware	Displays the AFC Offset and Channel Number. Pressing <b>OK</b> allows the hardware parameters to be traced.
Fatal Err/#	Displays the Fatal Error log. This log contains a count of any fatal errors logged during the unit's automatic self test. Optioning clear empties the log.
Flags	Displays the error log. This log contains any errors logged by the unit software. Pressing <b>Menu</b> when it appears displays the Clearall screen in which the user can clear all the logged errors.
Resets	Displays the Reset Error log. This log contains any errors logged when the user resets the unit during operation. The most recent reset appears at the top of the list. Pressing <b>Menu</b> when it appears displays the Clearall screen in which the user can clear all the logged errors.
Coin Cell	Displays the Charger and Battery Voltage.

### 6.1.3 Entering Test Mode

Use this procedure to access test mode.

#### To enter test mode:

1. Power up the unit. Wait until the power-up sequence is complete before continuing.

**NOTE:** Steps 2 through 7 must be performed quickly (no more than one second between each key press).

2. Press **#**.
3. Press **\***.
4. Press **Menu** three times.

5. Press the left **Scroll** key.
6. Press **Menu** twice.
7. Press the left **Scroll** key. You now are in test mode.

To exit test mode, press the option key under **Exit**. The unit waits for a few seconds, resets, and then re-registers the unit.

## 6.2 Test Mode Test Procedures



Enter debug or test mode to perform the following tests:

- Audio Loopback Test
- ESN and IMEI Matching Test
- Level Set Test
- Engineering Debug Check

### 6.2.1 Audio Loopback Test

Use this test to check the functionality of the microphone and the audio quality of the earpiece. The loopback test checks the unit's audio by passing a test signal from the Codec microphone input to the Codec Rx output.

**To perform the audio loopback test (test time approx. 3 min.):**

1. Enter test mode.
2. With the Test Mode screen displayed, press .
- The right option key changes to **Edit**.
3. Press the option key under Edit.
- The right option key changes to **Change**.
4. Press the **Change** option key.
5. Using the bottom scroll key, scroll down the list until **AUDIO1 or 800AUD1** is displayed.
6. Press the **Select** option key.
7. Press the **Back** option key.
8. Press .
9. Press the **Start** option key to begin the actual audio test in the TX On mode.
10. Talk into the microphone. The audio from the earpiece should sound clear.

If there is a problem with the microphone or the earpiece, power down the unit and repeat the test. If the problem persists, send the unit to the field-level Support Facility.

11. Press the **Tx Off** key, and repeat the previous step.
12. Press the **Stop** key to end the test.

### 6.2.2 ESN and IMEI Matching Test

Use this test to verify that the electronic serial number (ESN) matches the International Mobile Equipment Identifier (IMEI) on the Serial Number label located on the chassis of the unit.

**To perform the matching test (test time approx. 6 min.):**

1. Power up the unit. Wait until the power-up sequence is complete before continuing.
2. Enter debug mode. The **Unit Info** display appears.
3. Scroll down until the **IMEI/SIM ID** choice is highlighted, then press **View** to view the **IMEI/SIM ID** display.
4. Write down the digits shown in the IMEI line.
5. Verify that this number matches the IMEI on the Serial Number label. The last zero on the label will be missing.

If the numbers do not match, send the unit to the field level of service.

### 6.2.3 Engineering Debug Check

Use this test to monitor (measure) the data in an *i830* unit.

**NOTE:** The following procedure describes the sequence of displays accessed via the down scroll key. If you press the up scroll key, the sequence appears in reverse order.

**To monitor the data in the unit:**

1. Power up the unit. Wait until the power-up sequence is complete before continuing.
2. Enter debug mode. The **Unit Info** display appears.
  - a. Press **View** to view the **Phone Model** display, and then press **Select** to view the phone model, such as *i830*.
  - b. Press **Back** to return to the **Unit Info** display, and then scroll down (down scroll key) to highlight the **CP Ver** choice.
  - c. Press **Select** to view the Codeplug Version. The first half of the line displays the codeplug structure and default version; the second half displays the codeplug bandmap.
  - d. Press **Back** to return to the **Unit Info** display, and then scroll down to highlight the **CSD Ver** choice.
  - e. Press **Select** to view the Customer Static Data version. The first number indicates the customer. The second number indicates the structure revision. The third number indicates the data revision.



- f. Press **Back** to return to the **Unit Info** display, and then scroll down to highlight the **Software** choice.
  - g. Press **Select** to view the current software version programmed in the unit, as well as the software type (RSS model) and build date.
3. Press **Back** twice to return to the **Trace Mode** display.
4. Scroll down to highlight **Total Usage**, and then press **View** to view the **Total Usage** display. This screen displays the number of minutes the unit has used a traffic (dispatch and interconnect) or a Packet Data channel since manufacture.
5. Press **Back** to return to the **Trace Mode** display.
6. Scroll down to highlight **Tx/Rx Status**, and then press **View** to view the **Tx/Rx Status** display. The first line displays the SQE/Carrier data (outbound signal quality, frequency band, current carrier code, and color code). The second line displays the Tx/Rx power (current adjusted transmit output power and receiver input power) of the unit. The third line displays the current temperature and the difference between the current temperature and the temperature two seconds ago.
7. Press **Back** to return to the **Trace Mode** display.
8. Scroll down to highlight **GPS**, and then press **View** to view the **GPS** display.
  - a. **Location** selection displays the number of satellites used to obtain the position fix, the current cell site latitude and longitude, the subscriber unit latitude and altitude information, as well as the last calculated horizontal and vertical accuracy.
  - b. **Time** selection contains *i*DEN time information used to determine accurate GPS time.
  - c. **Assist** selection contains the subscriber unit latitude, longitude and horizontal accuracy in meters as well as an indication of whether the data is valid or not.
  - d. **Navigation** selection contains the heading as well as velocity and velocity error in kilometers/hour.
  - e. **Summary** selection contains time and longitude/latitude expressed in degrees. Accuracy in meters is also displayed.
  - f. **GPS Version** contains information about the custom Sirf software used in the unit.
9. Press **Back** to return to the **Trace Mode** display.
10. Scroll down to highlight **IMEI/SIM ID**, and then press **View** to view the **IMEI/SIM ID** display. The IMEI is the global name assigned to the mobile station at manufacturing time and should correspond to the serial-number tag of the unit. The SIM ID is the SIM electronic serial number and should correspond with the number stamped on the SIM card.
11. Press **Back** to return to the **Trace Mode** display.
12. Scroll down to highlight **Registr Log**, and then press **View** to view the **Registr Log** display. This screen displays the Dispatch Log, Interconnect Log, Packet Data Log, Mobile IP Log, and Phone Rst Log. Registration Log information is updated when the user deselects and selects the Registr Log choice.

13. Press **Back** to return to the **Trace Mode** display.
14. Scroll down to highlight **Err/Chan Codes**, and then press **On** to view the **Err/Chan Codes** display. This screen displays the physical channel that the unit is connected to or the radio link procedure that is currently active. Also, displays error codes of errors encountered during normal operation if Err/Chan codes is On. (At power up, Err/Chan Codes is Off)
15. Press **Back** to return to the **Trace Mode** display.
16. Scroll down to highlight **Current Freq**, and then press **View** to view the **Current Freq** display, which shows the current frequency and band.
17. Press **Back** to return to the **Trace Mode** display.
18. Scroll down to highlight **Dispatch IDs**, and then press **View** to view the **Dispatch IDs** display. This screen displays the dispatch group id affiliated with the unit in the current dispatch-location area. Also, displays the dispatch individual id affiliated with the unit in the current dispatch location.
19. Press **Back** to return to the **Trace Mode** display.
20. Scroll down to highlight **Band Info**, and then press **View** to view the **Band Info** display. This screen displays the primary and secondary control channels: Pri Band: 02 for 800 MHz; Sec Band: 02 for 800 MHz and 04 for 900 MHz.
21. Press **Back** to return to the **Trace Mode** display.
22. Scroll down to highlight **Bandmap**, and then press **View** to view the **Bandmap** display. This screen displays the currently selected regional bandmap.
23. Press **Back** to return to the **Trace Mode** display.
24. Scroll down to highlight **Hardware**, and then press **View** to view the **Hardware** display. This screen displays RF Xtal (RF Crystal), a factory-tuned parameter that adjusts the output frequency; Xtal Offset (RF Crystal Warp offset), which is derived during frequency compensation; and Level Set (Level Set value), which regulates the transmit output power of the unit.
25. Press **Back** to return to the **Trace Mode** display.
26. Scroll down to highlight **Fatal Err/#**, and then press **View** to view the **Fatal Err/#** display. This screen displays the Fatal Error log. This log contains a count of any fatal errors logged during the unit's automatic self test.
27. Press **Back** to return to the **Trace Mode** display.
28. Scroll down to highlight **Flags**, and then press **View** to view the **Flags** display. This screen displays the error log, which contains any errors logged by the unit software.
29. Press **Back** to return to the **Trace Mode** display.
30. Scroll down to highlight **Coin Cell**, and then press **View** to show the Preset Charging Voltage on line 1 and Current Battery Voltage on line 2.
31. Press **Back** to return to the **Trace Mode** display.

### 6.3 Technician Test Procedures

Technician tests usually require special equipment to test the functionality of the components in the unit.

The following tests check or repair the functionality of the unit:

- Codeplug Repair Procedure
- Codeplug Troubleshooting
- Corrupted Software Repair Procedure

### 6.4 Using iDEN Radio Service Software (RSS)

With a PC, RSS software loaded, and correct cable, a technician can:

- Read specific information about an iDEN unit’s settings.
- Read or modify specific user information.
- Read or modify SIM Data.
- If using the CARRIER version of RSS, can change a unit’s interleave values by accessing the “User Ergonomics” folder and selecting the **Interleave** tab (see Figure 6-1).

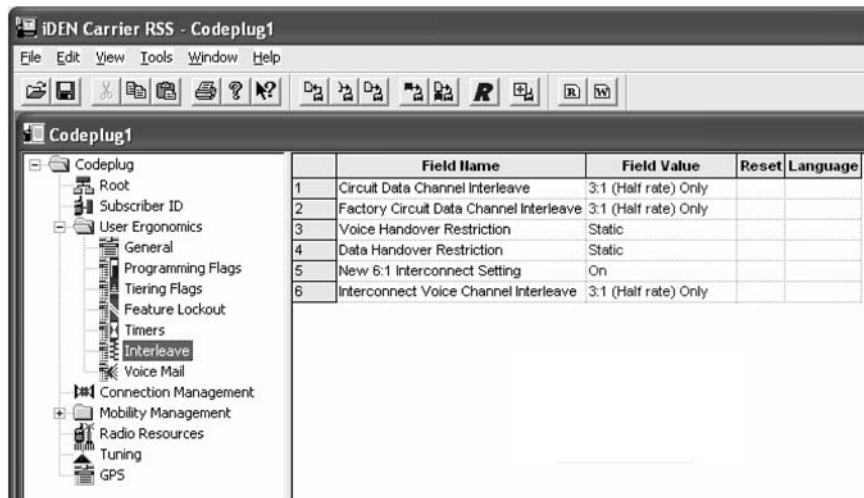


Figure 6-1. User Ergonomic/Interleave Window

### 6.4.1 Testing with a Recommended Communications System Analyzer

- If using the 6:1 capable R-2660A Communications System Analyzer in the iDEN mode, a 6:1 capable unit can be set for Full Rate operation in RSS via the User Ergonomic/Interleave window.
- If using the 3:1 capable R-2660B or prior, a 3:1 capable unit can be set for Half Rate operation in RSS via the User Ergonomic/Interleave window.

### 6.4.2 Connecting the Unit to RSS

Equipment required for utilizing RSS:

- Windows-based computer workstation with respective RSS installed.
- Correct serial port/RS-232 Data Cable for iDEN unit. For better performance, check “QuickComm” in the RSS Options dialog box (see Figure 6-2).
- Correct USB Data Cable for iDEN unit (see Figure 6-3).



Figure 6-2. Options Dialog Box

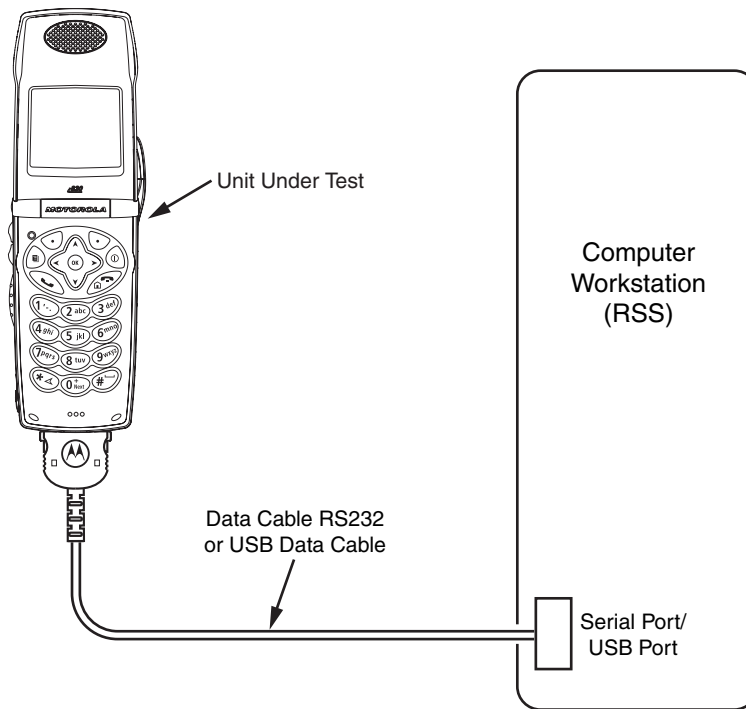


Figure 6-3. Data Cable Programming Setup

**If unit does not respond to RSS, check the following:**

- USB Cable: Check "USB Port" under "Write Subscriber Software" in the RSS Options dialog box (see Figure 6-2).
- Baud Rate: Set unit at or above 19200 or Auto.
- Bad connections: Check for dirty or broken contacts, loose connectors, corrosion on contacts, etc.
- Bad cables: Check for loose connectors, missing insulation, stretched cabling, broken conductors, etc.
- Bad battery: Check for dirty, broken, corroded, or loose contacts, insufficient charge, etc.
- Perform "FLASHstrap" to determine if unit is capable of communicating with RSS:
  1. Power down the unit.
  2. Press and hold the two "Option" keys.
  3. Power up unit.
  4. Hold keys until "FLASHstrap" data appears in display.

### 6.4.3 Analyzing Code Plug Error Messages

A SELF CHECK ERROR 0800 or SELF CHECK FAIL 0400 display message indicates the unit's Code Plug is corrupted. Utilize the correct version of iDEN's Radio Service Software to analyze the unit.

1. Attempt to “Recover” the unit in RSS if code plug was previously saved or a backup code plug is available.
2. If not recoverable, return the unit to Motorola for repair.

### 6.4.4 Code Plug Help Topic in Windows

1. Set up your test equipment configuration. See “Connect Unit to RSS” for proper set up.
2. Start the RSS program.
3. Click on the Help choice on the menu bar, and then select Contents. The RSS online Help is displayed.
4. Click on the Troubleshooting link, and follow the detailed directions.

To prevent the loss of call lists, refer to the Radio Service Software Help Section for instructions on reading and saving Code Plug information. The RSS Help Section also contains information related to the following error messages:

- Unable to read the code plug
- Unable to write code plug
- Unable to communicate

### 6.4.5 Unit Programming

Motorola provides software Update Utilities from online resources. Go to <http://businessonline.motorola.com> for upgrade information on the following iDEN products:

- *i90c, i60c, i95cl.*
- *i88s, i58sr, i85s, i55sr, i50sx, i80s.*
- *i30sx, i35s.*
- *i205, i305, i730, i530.*

This page intentionally left blank.

---

## CHAPTER 7

# PREPARING FOR FIELD LEVEL TESTING

Field level testing requires external equipment and support. To conduct field level troubleshooting and testing of an *i830* unit, you must become familiar with the screen readouts of the recommended test equipment.

Display screens provide information that is useful for troubleshooting purposes. Refer to Chapter 3 for information on the displays, errors, alert tones, and messages associated with this unit.

## 7.1 Preparing Equipment for Testing

To ensure accurate testing of the unit, it is important that the test equipment function properly.

### 7.1.1 Calibrating Equipment

Test equipment should be internally calibrated before being used for testing. Note that the internal calibration does not substitute for a factory calibration. For more information, refer to *R-2660 Digital Communications System Analyzer Operator's Manual*.

### 7.1.2 Checking the RF Cable

Check the cable connection and quality to ensure that the test results are true. Cable length is critical to consistent Rx sensitivity and Tx power measurements. Use a high-quality, shielded, 50-ohm, coaxial cable that is approximately 1.5 feet in length. Place the unit to be tested at least 6 inches from the R-2660 Communications System Analyzer. The cable loss should be less than 2 dB.

### 7.1.3 Strong-Signal Environments

When using the R-2660 Communications System Analyzer to test a unit in a strong-signal environment ( $-75$  dBm or stronger), change the bandmap of the unit.

For Registration/Call testing: Power up the unit. Immediately after hearing the beep, press **Start** on the R-2660. The unit will lock onto the first strong signal.

### 7.1.4 Protecting Static-Sensitive Devices

This unit contains static-sensitive devices that must be protected when opening the unit, or storing and transporting any printed-circuit board. Consider the following information to create a proper ground:

- Ground the working surface of your service bench. If possible, use the Motorola Static Protection Assembly (P/N 0180386A82) to ground your service bench. This assembly contains a wrist strap, two ground cords, a table mat, and a floor mat.



- Wear a conductive wrist strap in series with a 100 k $\Omega$  resistor to ground.
- Do not wear nylon clothing when handling any printed-circuit board.
- Prior to touching any printed-circuit board, touch an electrical ground to remove any static charge that might have accumulated.

Refer to Service and Repair Note SRN-F1052 for more information. This note is available through:

**Motorola Literature Distribution Center**

2290 Hammond Drive  
Schaumburg, IL 60173  
847-576-2826

The following should be considered when storing or transporting a circuit board:

- Place the printed-circuit board in conductive, anti-static material.
- Do not insert the printed-circuit board into conventional plastic “snow” trays used for transporting other devices.

## 7.2 Connecting an iDEN Unit to the R-2660

The R-2660 Communications System Analyzer enables you to monitor and perform tests on iDEN units. Use *Radio Service Software (RSS)* to program a new software version or to update user information in the codeplug. Refer to “Connecting the Unit to the RSS Workstation” and the *Radio Service Software User’s Guide* for information on the setup and use of RSS.

**NOTE:** You can use the RSS online Help for locating specific information about RSS dialog boxes and fields. To access online Help, press **F1** while you are viewing an RSS screen.

If you are using the R-2660A Communications System Analyzer in the iDEN mode, which is 6:1 capable, use RSS to program an i830 unit for **Full Rate** operation. Use the **6:1 Interconnect** softkey for all interconnect testing.

If you are using the R-2660B or later, which is 3:1 capable, use RSS to program an i830 unit for **Half Rate** operation. Use the **3:1 Interconnect** softkey for all interconnect testing.

In the carrier version of RSS (but not the agent version), you can change interleave values. To access the fields where you can change these interleave values, go to the User Ergonomics dialog box, and then click on the **Interleave** tab.

**NOTE:** After servicing a unit, use RSS to reprogram the unit back to its original operating state.

Refer to the *R-2660 Digital Communications System Analyzer Operator’s Manual* for more information on how to set up this equipment for iDEN mode testing.

Figure 7-1 shows a typical R-2660 test setup.

**Equipment Required:** R-2660, reference SIM card, SMA to N-type RF coaxial cable, battery eliminator, 5.0-12.0 Vdc power supply.

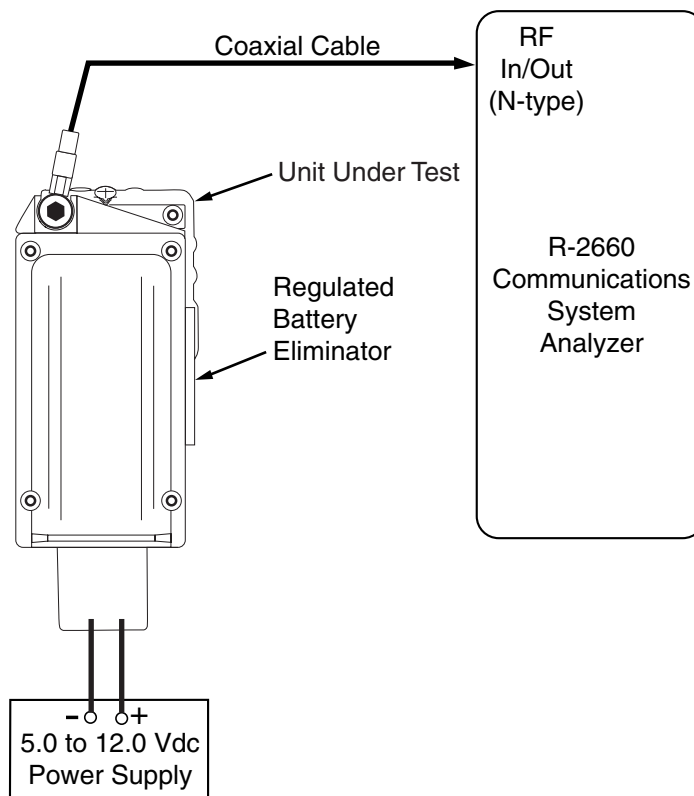


Figure 7-1. Typical R-2660 Setup

**To connect the unit to the R-2660:**

1. Ensure the unit is powered off, and then turn on the R-2660.
2. Remove the battery cover and battery from the unit, and insert the reference SIM card.
3. Attach the battery eliminator to the back of the unit.
4. Connect the SMA connector of the RF cable to the RF connector on the battery eliminator.
5. Connect the N-type connector of the RF cable to the R-2660 RF In/Out connector.
6. Attach the power leads on the battery eliminator to the DC power supply.



**CAUTION:** Be very careful to observe polarity when connecting power to the battery eliminator. Also, be sure to protect the test setup from any potential overvoltage condition especially when using an unregulated battery eliminator.

7. Turn on the power supply, and adjust output based on the type of battery eliminator:  
 Regulated battery eliminator — between 5.0 and 12.0 Vdc  
 Unregulated battery eliminator — 4.0 Vdc. Maintain a range between 3.5 to 4.2 Vdc only.  
 With the correct setting, the regulated battery eliminator will provide 4.0 Vdc to the subject unit.

8. If power supply is capable, set current limit = 4.0 A.
9. Power up the subject unit.

Refer to the *R-2660 Digital Communications System Analyzer Operator's Manual* for more information on how to use this equipment.

### 7.3 Operating the R-2660

Most of the technician tests performed with the R-2660 Communications System Analyzer require that the analyzer use the Initial Registration test mode.

**To enter Initial Registration mode:**

1. Turn on the R-2660.
2. Press **DISP** to place the cursor in the Display zone portion of the screen.
3. Use the arrow keys to move the cursor to the **Mode** field.
4. Press **More** until *iDEN MOBILE* appears in the **Mode** field.
5. Press the *iDEN MOBILE* softkey. The RF zone displays **DUPLEX** in the **RF Control** field.
6. Use the arrow keys to move the cursor to the **Meter** field in the display zone.
7. Press **More** until **INITIAL REG** appears in the **Meter** field.
8. Press the **INITIAL REG** softkey. The display zone displays **DISPATCH** in the **Registration Type** field.
9. Press **RF** to move to the RF zone.
10. Enter the appropriate values in the following RF zone fields. These values might be different, depending on your bandmap. Use the arrow keys to move between fields and the keypad to enter values.

Table 7-1. RF Zone Fields and Values

Field	Value
Carr. #	Choose the appropriate carrier number from your bandmap. The <b>Mon. Freq.</b> field displays the associated frequency.
Mon. Freq	Choose the appropriate monitor frequency from your bandmap. The <b>Carr. #</b> field displays the associated carrier frequency.
Offset	800 MHz = +45 MHz; 900 MHz = +39 MHz
Format	<i>iDEN</i>
Mon.	40 dB RF I/O
Gen	-070 dBm RF I/O


11. Press the **DISP** key to return to the Display zone. You now are ready to begin testing.

## 7.4 Disassembling and Reassembling the Unit

Motorola recommends the service technician follow a prescribed disassembly sequence to access specific items or components of the unit. This product is an efficiently designed package that incorporates the physical overlap and integration of some modular components. Refer to the Disassembly Sequence flowchart for a suggested path to reach specific components.

**NOTE:** In some cases, the technician may not need to remove certain components to reach others.

### 7.4.1 Disassembly Sequence Flowchart

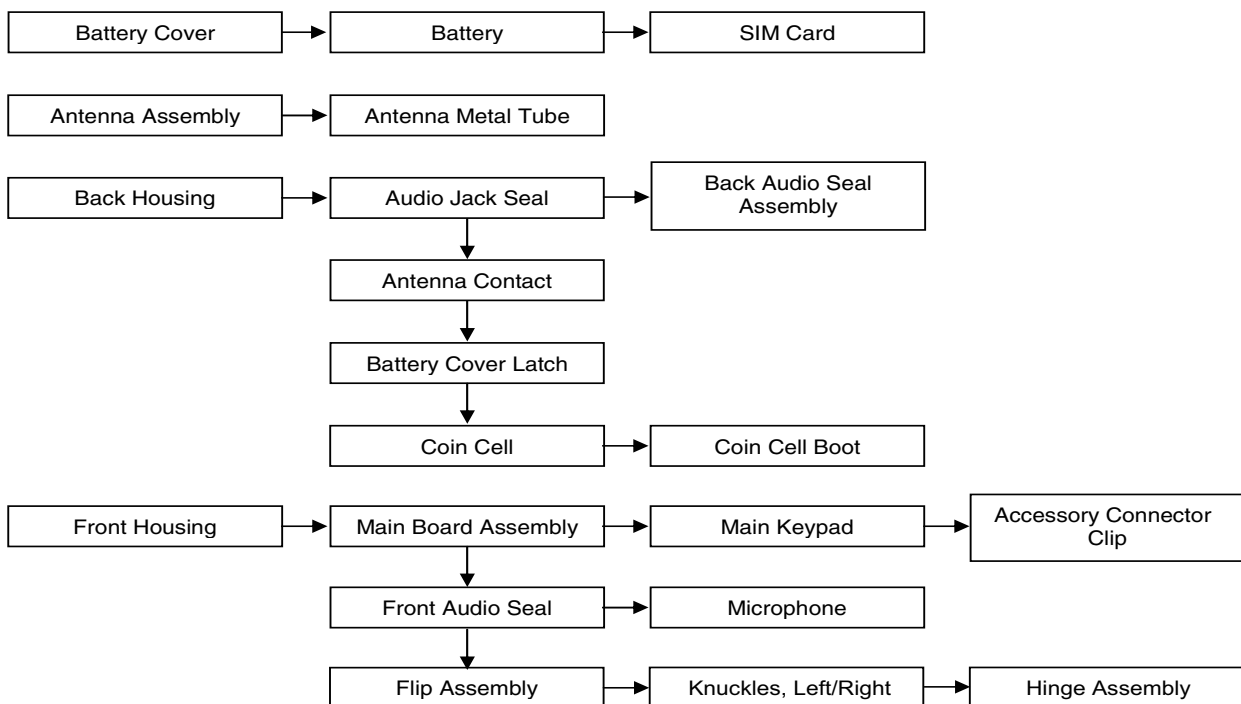

## 7.5 Assembly/Disassembly Procedures

**NOTE:** Installation procedures to be performed in reverse of disassembly except where noted.

Screws used to assemble the *i830* are: 1 antenna screw, T-4 drive; 4 flip assembly screws, T-5 drive; and 4 housing screws and 1 flip anchor screw, T-6 drive.

## 7.6 Battery Cover

### 7.6.1 Remove:

1. Place thumb or fingernail against release button (see Figure 7-2).
2. Push button until battery cover releases and pull cover away.
3. Push away bottom of cover to release bottom clips.



Figure 7-2.

### 7.6.2 Install:

1. Place bottom clips of cover into their respective slots (see Figure 7-3).
2. While keeping clips engaged, close cover up and over release button until battery cover fully snaps into place.



Figure 7-3.

## 7.7 SIM Card

### 7.7.1 Remove:

1. Open SIM card door by lifting lip at square corner (see Figure 7-4).
2. Grasp exposed square corner of SIM card and tug while slightly bending SIM card above edge enough to slide SIM card out.



**CAUTION:** Excessive bending can damage the SIM card.

### 7.7.2 Install:

1. Align and insert SIM card into SIM card door (see Figure 7-5).
2. Close door to snap shut. Press to ensure closure. To verify that both side latches are engaged, press on each edge.

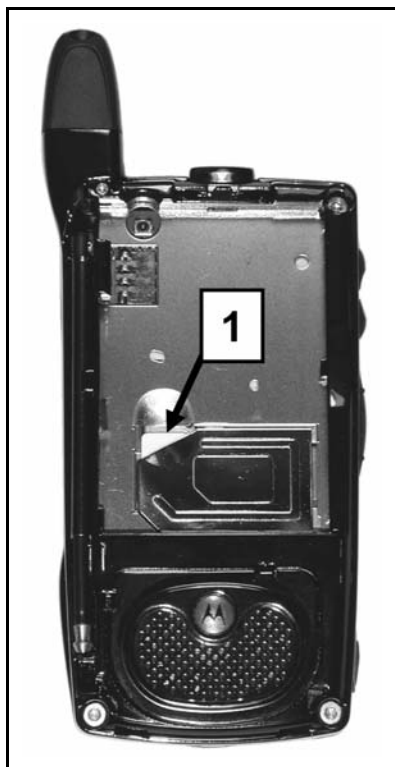


Figure 7-4.



Figure 7-5.

## 7.8 Antenna

**Required Tools:** T-4 Torx bit, black stick.

### 7.8.1 Remove:

1. Locate screw and insert T-4 bit, turn counterclockwise to remove (see Figure 7-6).
2. Fully extend antenna whip. Insert point of black stick onto collar latch and push just enough to release collar.



**CAUTION:** Overpressing collar latch will cause damage.

3. Hold unit stationary while tugging at collar until antenna assembly releases.

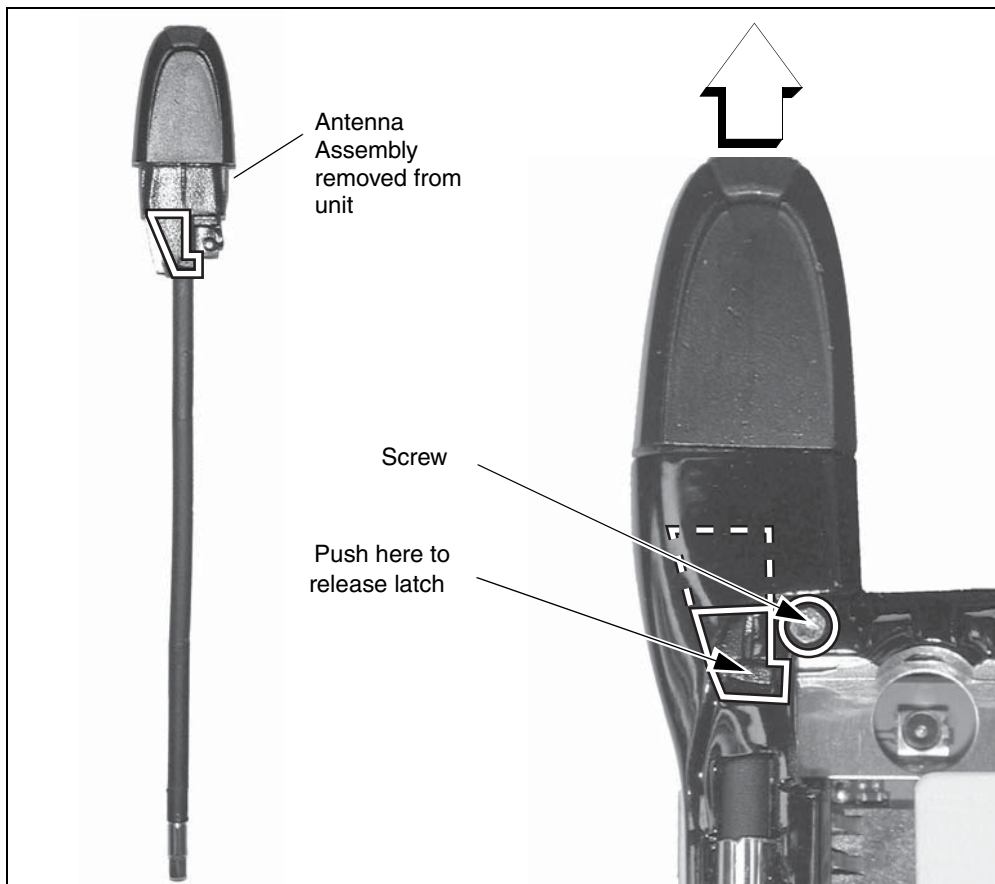


Figure 7-6.

### 7.8.2 Install:

1. Check that the metal tube is not crimped or bent.
2. Torque screw to 0.3 in. lb.

## 7.9 Back Housing

**Required Tools:** T-6 Torx bit, black stick.

**Preparation:** Remove battery cover, battery, and antenna (refer to the *iDEN i830 Digital Multi-Service Data-Capable Phone User's Guide*). Open audio jack seal and accessory connector seal.

### 7.9.1 Remove:

1. Remove antenna metal tube by wedging out with flat end of black stick. Note orientation of metal tube's fluted end towards top of unit.
2. Remove four T-6 screws—one in the metal tube channel (see Figure 7-7).
3. Gently separate the housing halves. Do not stress flex connector near PTT key.
4. Remove audio jack seal. Wedge stick 1/16" under edge of flex pad to unseat speaker/vibe/PTT/SB flex connector (see Figure 7-8).

**NOTE:** Do not touch contact areas with fingers or metal tools.

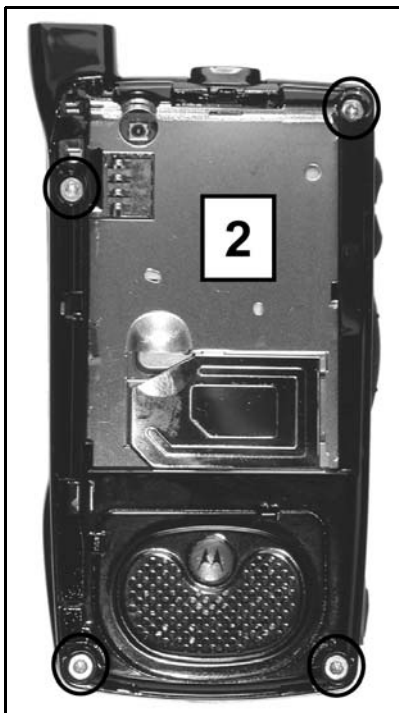


Figure 7-7.

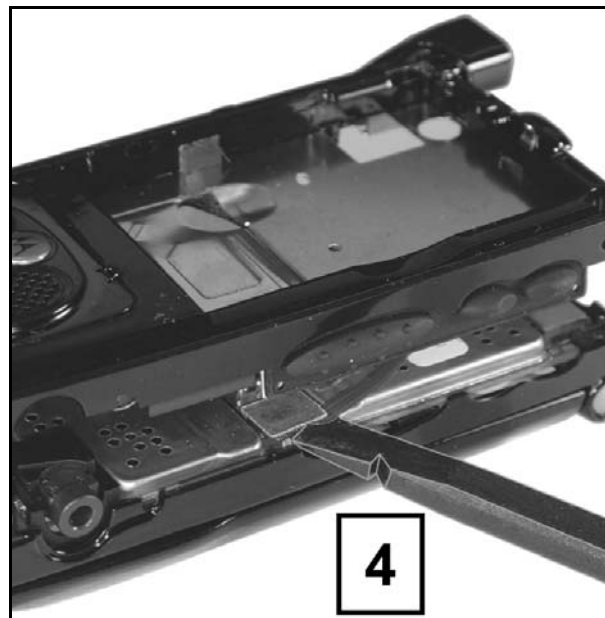


Figure 7-8.

### 7.9.2 Install:

1. Replace flex connector carefully to avoid crushing contacts.
2. Replace four T-6 screws.

**NOTE:** If front housing is new, torque screw 2.1 in. lb; if front housing is old, torque screw 1.8 in. lb.

3. Install metal tube with fluted end towards top of unit.



## 7.10 Coin Cell

**Required Tools:** Black stick.

### 7.10.1 Remove:

1. Locate coin cell at flex strip near speaker (see Figure 7-9).
2. Bend back flex strip carefully with stick. Do not crease or fold flex (see Figure 7-10).
3. Note polarity of cell (see Figure 7-11). Wedge point of black stick under coin cell using pry point identified by arrow (see Figure 7-10).



**CAUTION:** Do not damage sensitive contacts under coin cell.

4. Service the coin cell boot if needed (see Figure 7-12).

### 7.10.2 Install:

Insert coin cell at 45° angle to the seat. Push high end until fully seated.



Figure 7-9.

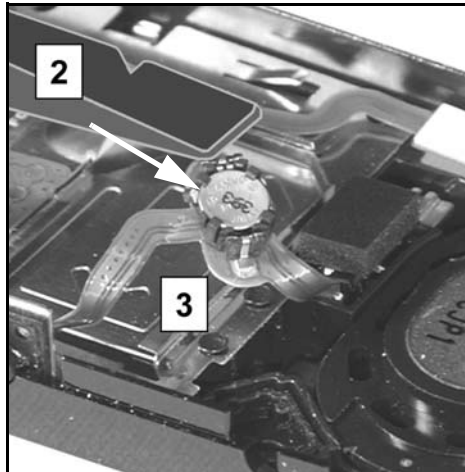


Figure 7-10.

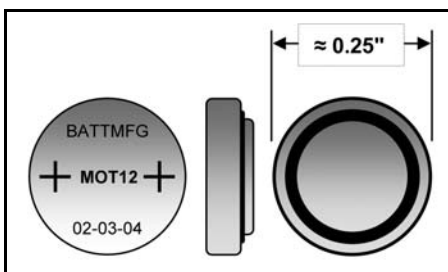


Figure 7-11.



Figure 7-12.

## 7.11 Main Board, Microphone, and Seal

**Required Tools:** Black stick.

### 7.11.1 Remove:

1. Insert tip of black stick under narrow side of 50-pin flex connector  $\leq 1/16"$ . Gently pry upwards, then repeat on other narrow side until connector releases (see Figure 7-13).
2. Remove microphone by inserting sharp point of black stick  $1/16"$  through notch in microphone seat to pry up on microphone perimeter (see Figure 7-14a).



**CAUTION:** Do not damage sensitive contacts under microphone (see Figure 7-14b).

3. Remove microphone seal from front housing by gently prying up along length of seal until adhesive releases (see Figure 7-15).

### 7.11.2 Install:

During installation, ensure slot in seal is properly aligned with matching post (see Figure 7-15). Press firmly to activate adhesive.

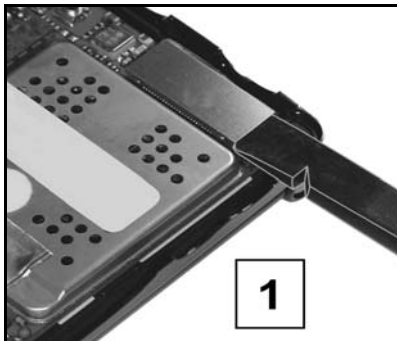


Figure 7-13.

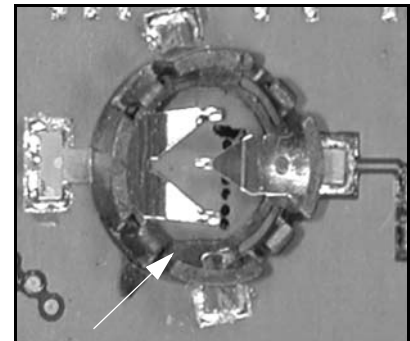
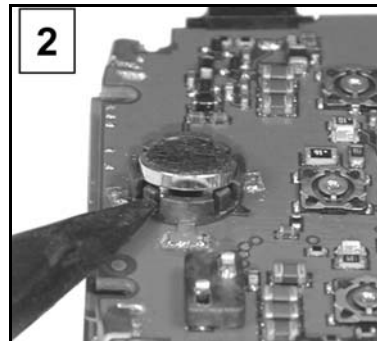


Figure 7-14a & b.

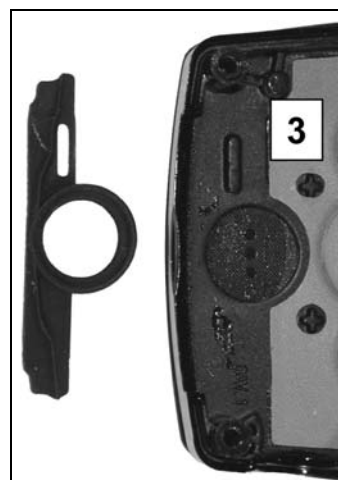


Figure 7-15.

## 7.12 Clip and Keypad

**Required Tools:** Black stick.

**Preparation:** Ensure flip is in closed position to facilitate disassembly.

### 7.12.1 Remove:

1. Remove accessory connector clip by swinging out from position on one side (see Figure 7-16).



**CAUTION:** Minimize contact of adhesive with hands and tools.

2. Remove keypad by pushing on “O” button with flat end of black stick from exterior. Push enough to get flat edge of stick under keypad from interior (see Figure 7-17).
3. Wedge stick under keypad and work along sides of housing interior and around bosses until keypad adhesive released (see Figure 7-18).

### 7.12.2 Install:

Entire keypad adhesive must be firmly pressed for re-use.

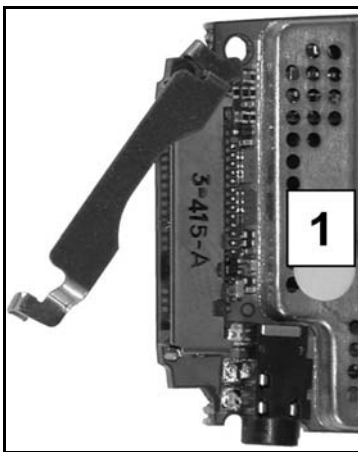


Figure 7-16.



Figure 7-17.



Figure 7-18.

## 7.13 Flip Assembly

**Required Tools:** T-6 Torx Bit.

**Preparation:** Ensure flip is in closed position to facilitate disassembly.

### 7.13.1 Remove:

1. Remove T-6 screw holding flip assembly to front housing (see Figure 7-19).
2. Hold knuckle ends of flip together while working flex connector from slot in housing until flip assembly is free (see Figure 7-20).
3. Note position and rotation of cam follower to facilitate reinstall (see Figure 19.).
4. Replace hinge assembly or cam follower as needed.

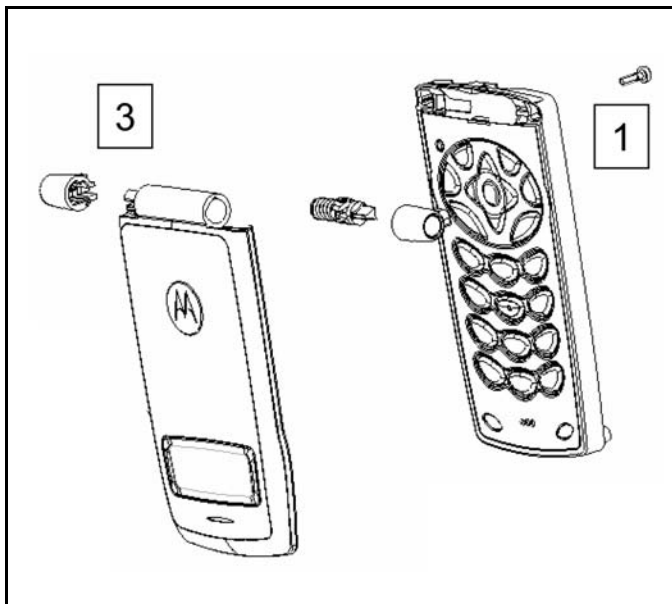


Figure 7-19.

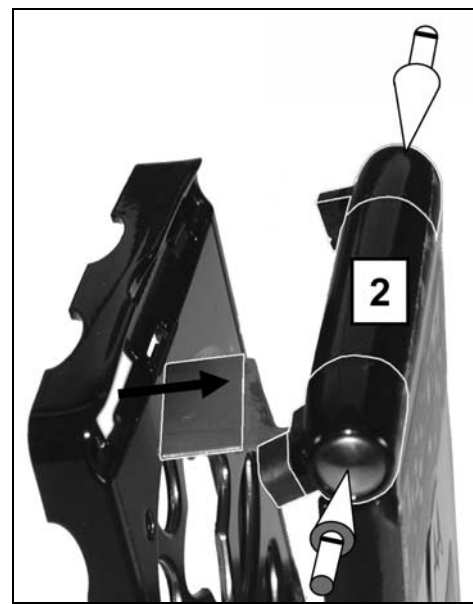


Figure 7-20.

### 7.13.2 Install:

**Required Tools:** T-6 Torx bit.

1. Ensure alignment of cam follower with flex strip (see Figure 7-21).
2. Align groove on right knuckle with cam follower (see Figure 7-22).
3. Turn right knuckle 90° to align with left knuckle (see Figure 7-23).

4. Hold flip knuckles together while working flex connector into slot in front housing until flip knuckles are seated.
5. Torque screw to 1.8 in. lb (2.1 in. lb new).

**NOTE:** Hold flip housing firmly against flip until knuckle screw is at full torque to ensure proper alignment.

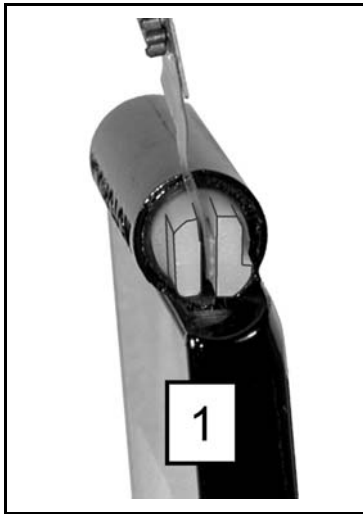


Figure 7-21.

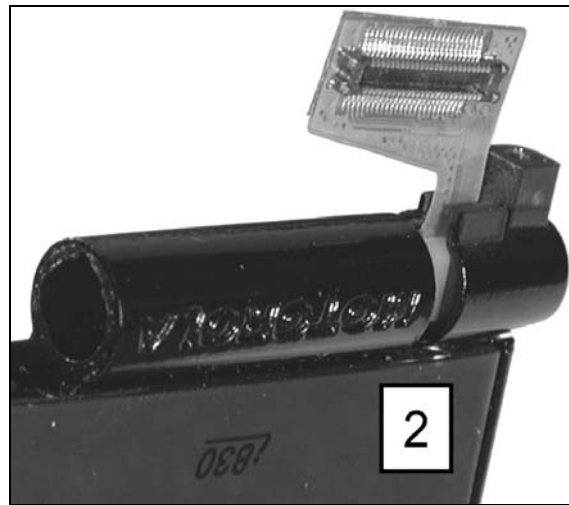


Figure 7-22.



Figure 7-23.

## 7.14 Exploded View and Parts List

This section contains the component parts list and exploded view for the *i830* unit.


### 7.14.1 Component Parts List

Table 7-2. Component List

#	Description		Part Number	Reference
1-5	Front Housing Assembly with Flip	Bronze Silver	1585425F01 1585425F06	
1	Flip Housing Assembly	Bronze Silver	1585180F01 1585180F05	
2	Left Knuckle	Bronze Silver	1585184F01 1585184F06	
3	Hinge Assembly		5585195F01	
3a	Hinge Spindle		5585194F02	(Not Shown)
4	Right Knuckle	Bronze Silver	1585178F01 1585178F06	
5	Front Housing Assembly	Bronze Silver	1585179F01 1585182F01	
5A	Flip Bumpers		7585277F01	
6	Front Audio Seal		3285248F01	
7	Microphone		5085283F01	
8	Main PCB			For reference only
9	Back Housing Assembly*	Bronze Silver	1585346F01 1585346F03	
10	Seal, Audio Back Assembly			3285236F01
11	Seal, Audio Jack			3285234F01
12	Pad, Vibrator			7585855F01
13	Spkr/Vibe/PTT/Flex System			For reference only
14	Antenna Contact			3985123F02
15	Coin Cell			6087603L01
16	Antenna Tube			3785685E05
17	Speaker Grill Felt			3585263F01
18	Speaker Grill Bracket	Bronze Silver		1385253F01 1385253F05
19	Battery Cover Latch			5585211F01
20	Retainer Screw			0385693E01
21	Antenna		8585327F01	
22	Battery, 650mA		NNTN4930A	
	Battery, 850mA		NNTN5195A	
23	Battery Cover Assy, 650mA	Bronze Silver		See Table A1
	Battery Cover Assy, 850mA	Bronze Silver		See Table A1
24	Screws, K18 x 5		0385273D04	

\*Items 10 through 20 are part of the Back Housing Assembly.

### 7.16.2 Exploded View

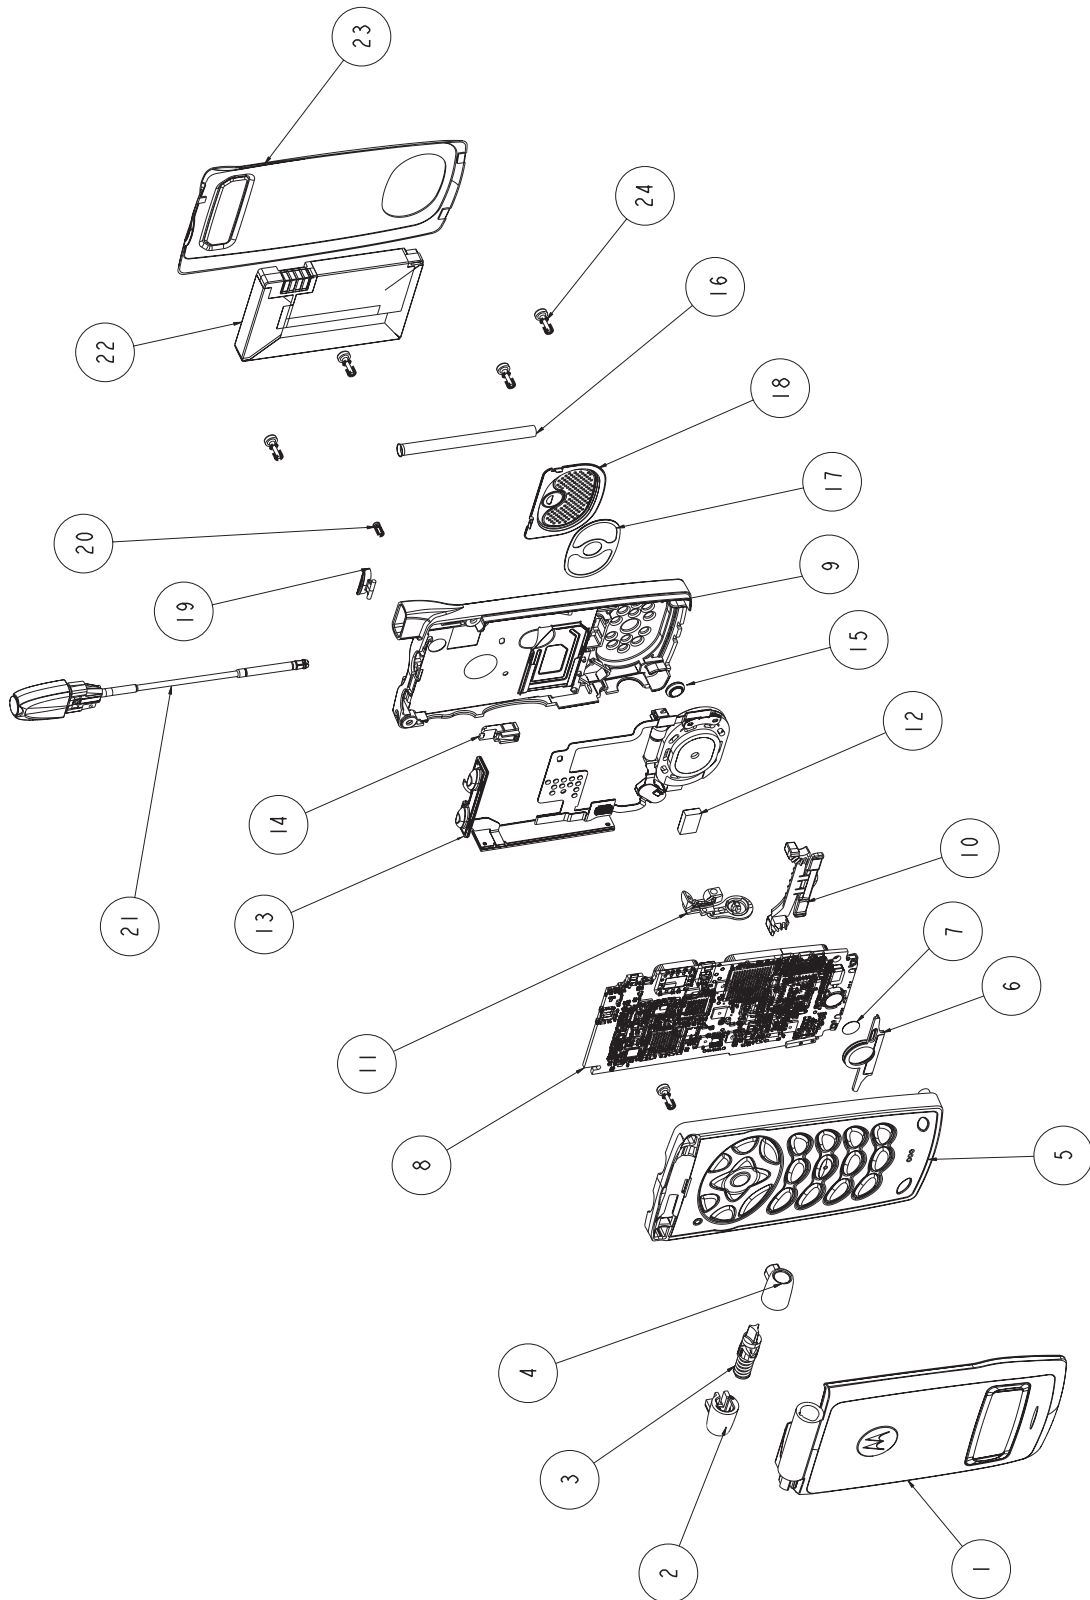



This page intentionally left blank.

---

## CHAPTER 8

# FIELD LEVEL TEST MODES AND PROCEDURES

To perform field level testing on the *i830* unit, you must enter a test mode to retrieve data from the unit, and perform the technician tests in the correct sequence with the appropriate equipment.

**NOTE:** All tests should be performed in an RF interference-free environment.

Test procedures are listed in the order in which they should be implemented. Each test contains a description of what it does and the type of equipment required (if any).

**NOTE:** The unit must be powered up and registered before performing most tests.

## 8.1 Test Modes

Some tests require that a certain mode be entered to conduct the test and/or retrieve data from the unit. The following test modes are used with the *i830* unit:

- Engineering debug mode (includes trace mode)
- Test mode

**NOTE:** Do not enter these modes until unit registration has been completed.

### 8.1.1 Entering Test Mode

Use this procedure to access test mode.

**To enter test mode:**

1. Power up the unit. Wait until registration is complete before continuing.

**NOTE:** Steps 2 through 7 must be performed quickly (no more than one second between each key press).

2. Press **#**.
3. Press **\***.
4. Press **Menu** three times.
5. Press the left **Scroll** key.
6. Press **Menu** twice.
7. Press the left **Scroll** key. You now are in test mode.

To exit test mode, press the option key under **Exit**. The unit waits for a few seconds, resets, and then re-registers the unit.

The following tests are performed in test mode:

- TX Power Test
- BER Tests
  - 800BER1
  - 800BER2
  - 800BER3
  - 800BER4
  - 900BER1
  - 900BER2
  - 900BER3

**NOTE:** The Power, MPX, and MOD test parameters are for factory use only and should not be adjusted by field service personnel. The default values for these parameters are as follows:

- Power: 0 dB
- MPX: 1:6
- MOD: QAM16

## 8.2 Required Test Equipment

Use the following list to identify the test equipment required to perform the technician tests. Refer to the appendix for test equipment part numbers and descriptions.

- Battery eliminator
- Data cable RS232 or USB data cable
- R-2660 Digital Communications System Analyzer
- RF Adapter
- Variable 5.0 to 12.0 Vdc power supply (3.0 A capability)

## 8.3 Field-Level Test Checklist

Use the following test checklist to ensure that all the necessary tests are performed and to provide a tracking mechanism in case the unit is sent to the next level of service.

Check the appropriate box for each test performed and indicate whether or not the test was completed successfully.


Table 8-1. Field-Level Test Checklist

Done	Technical Tests	Pass	Fail
	Registration/Call		
	SQE		
	TX Power		
	800BER1 800BER2 800BER3 800BER4 900BER1 900BER2 900BER3		
	Power-Up		
	Keypad		
	Audio		
	Reset		
	Reset Log		
	GPS Receiver		

## 8.4 Registration/Call Test


Use this test on a unit having any of the following symptoms: No Service failures, Please Wait... Registering failures. (Use a reference unit to get a baseline.)

**Note:** For 900 MHz verification, please perform the BER Test. May require ordering additional option for test. Contact Motorola Customer Service (see Appendix A).

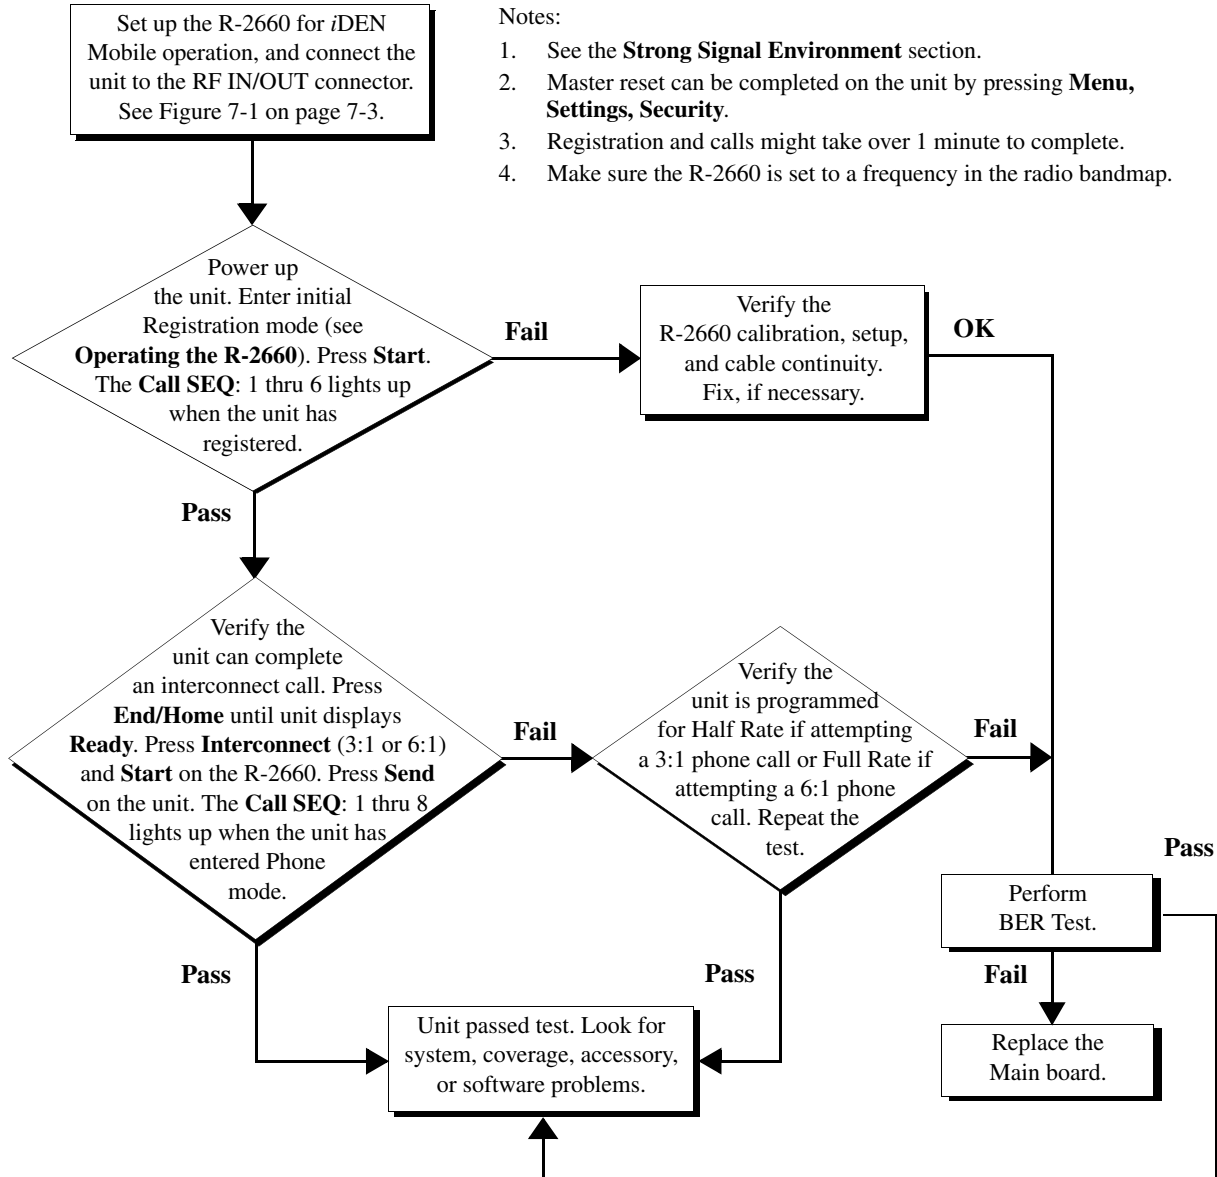


## 8.5 SQE Test

Use this test on a unit having any of the following symptoms: No service failures or poor SQE/RSSI (poor performance in known good coverage area).

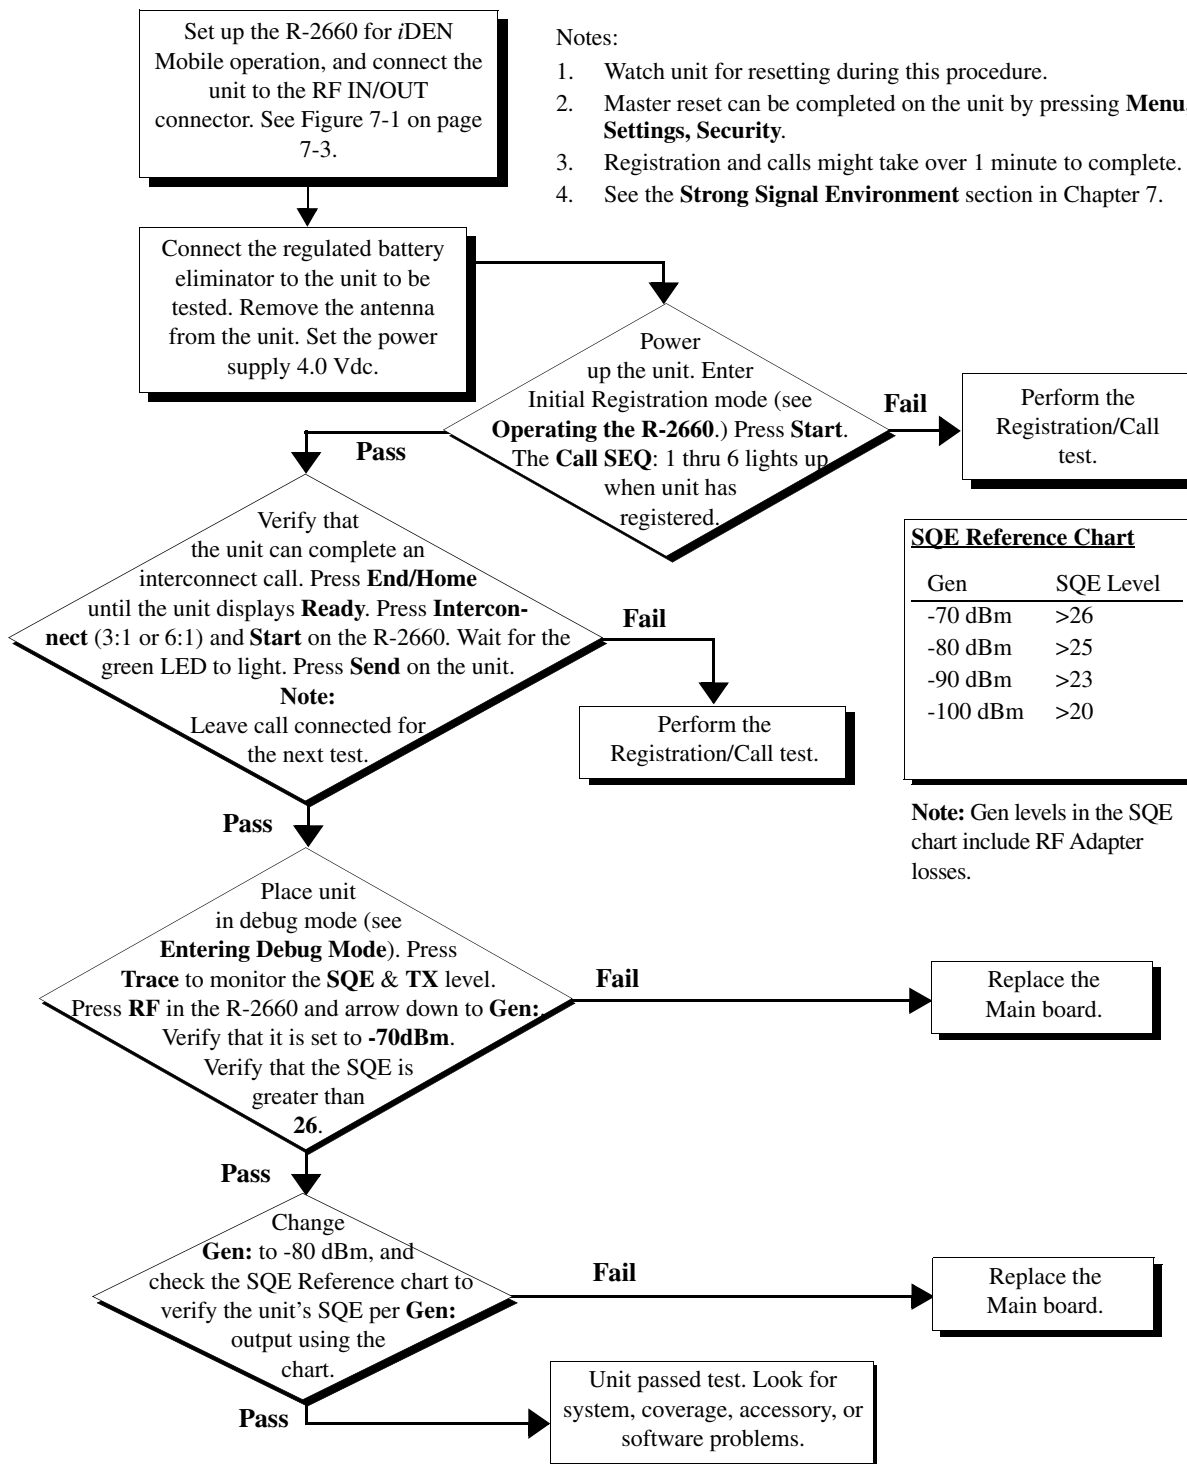

## 8.6 TX Power Test

Use this test on a unit having bad transmission (TX) or intermittent service failures. (This is a transmitter test only.)

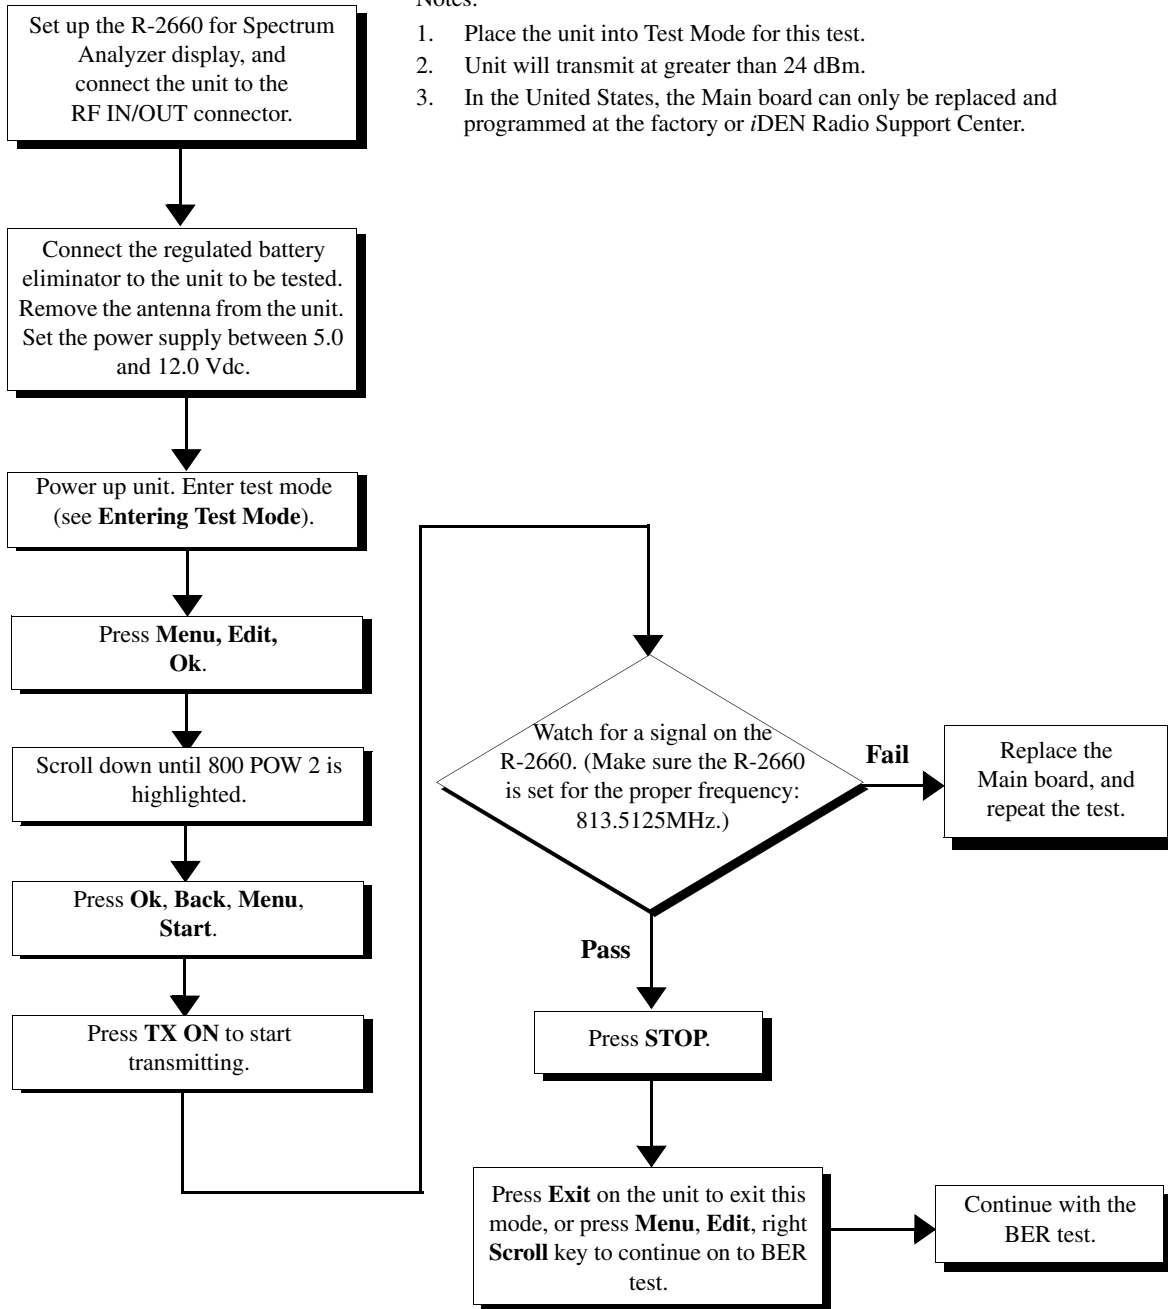


Notes:

1. Place the unit into Test Mode for this test.
2. Unit will transmit at greater than 24 dBm.
3. In the United States, the Main board can only be replaced and programmed at the factory or iDEN Radio Support Center.

## 8.7 BER Test


Use this test on a unit having any of the following symptoms: resets (RAAAA Type), No Service failures.

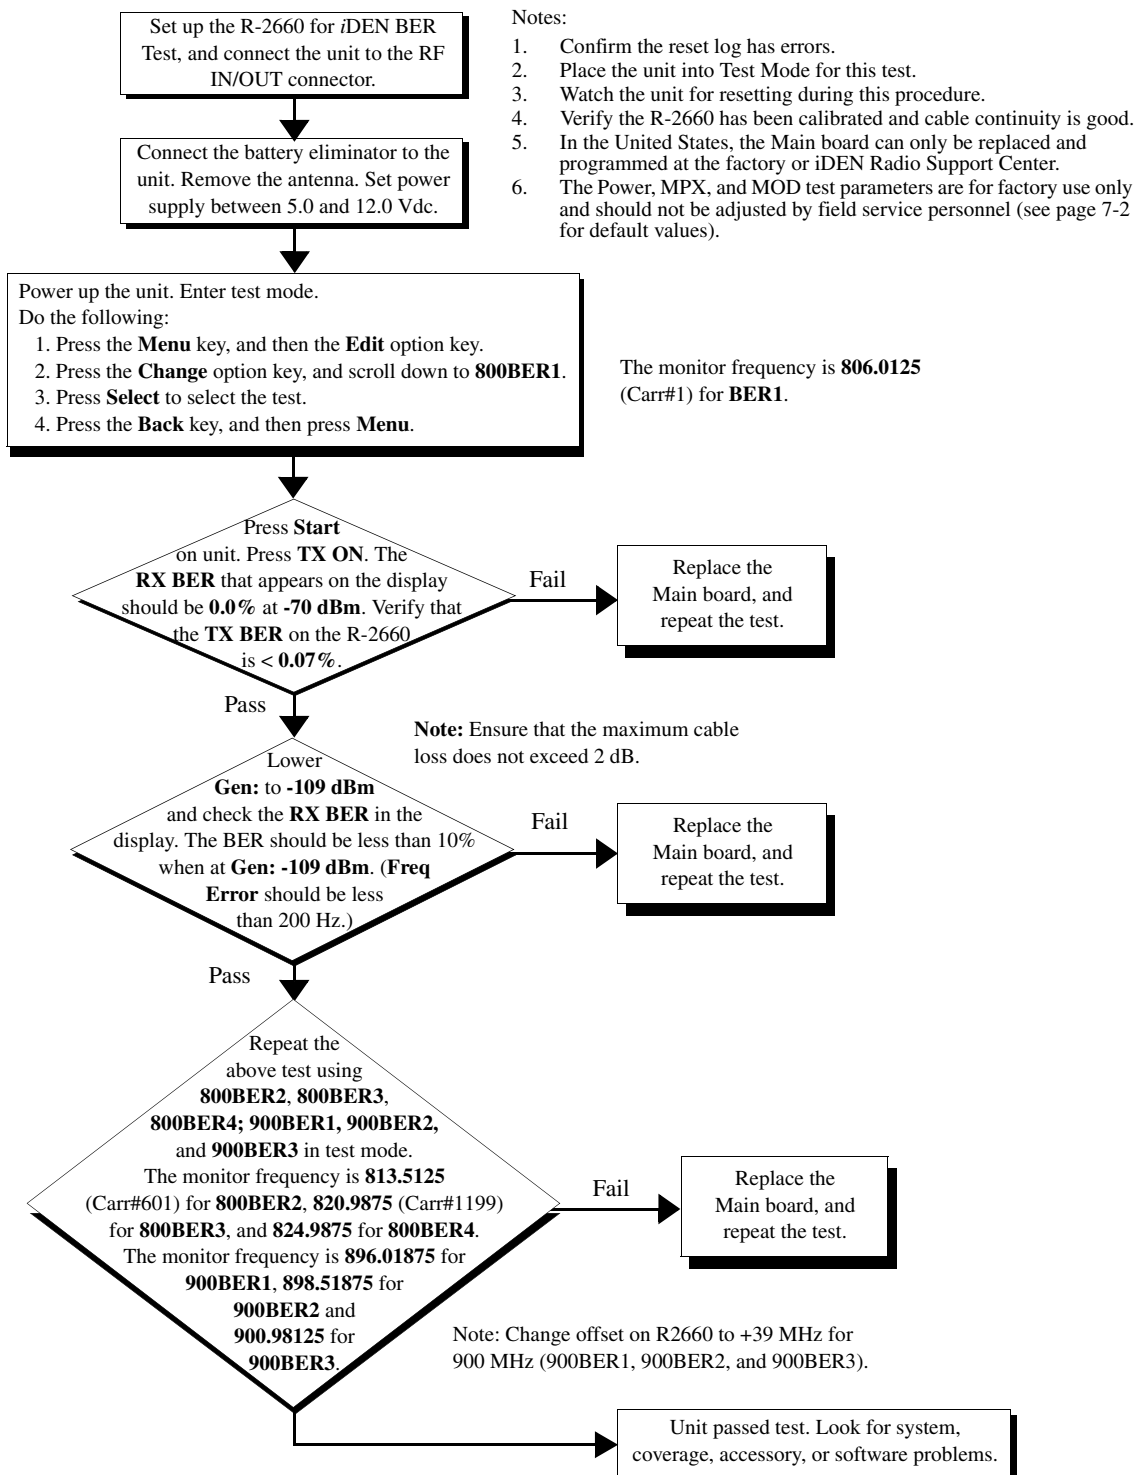




## 8.8 Power-Up Test

Use this test to check power-up. Symptoms: dead battery, short battery life, or unit does not power up.

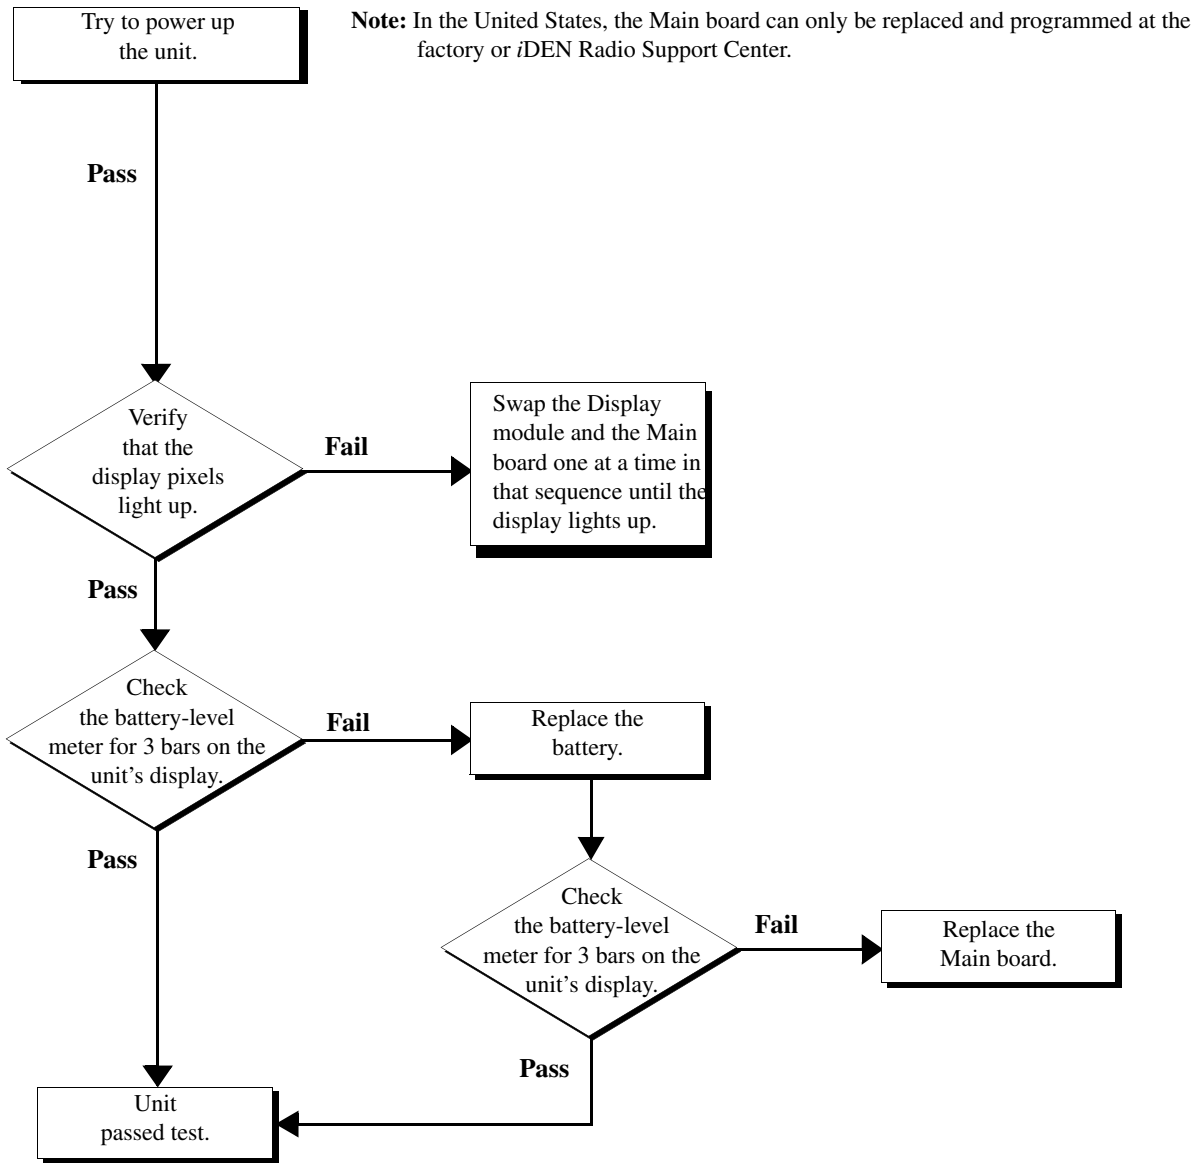


## 8.9 Keypad Test

Use this test to check the operation of the unit's keypads and display. Symptoms: unit locked, or stuck key.

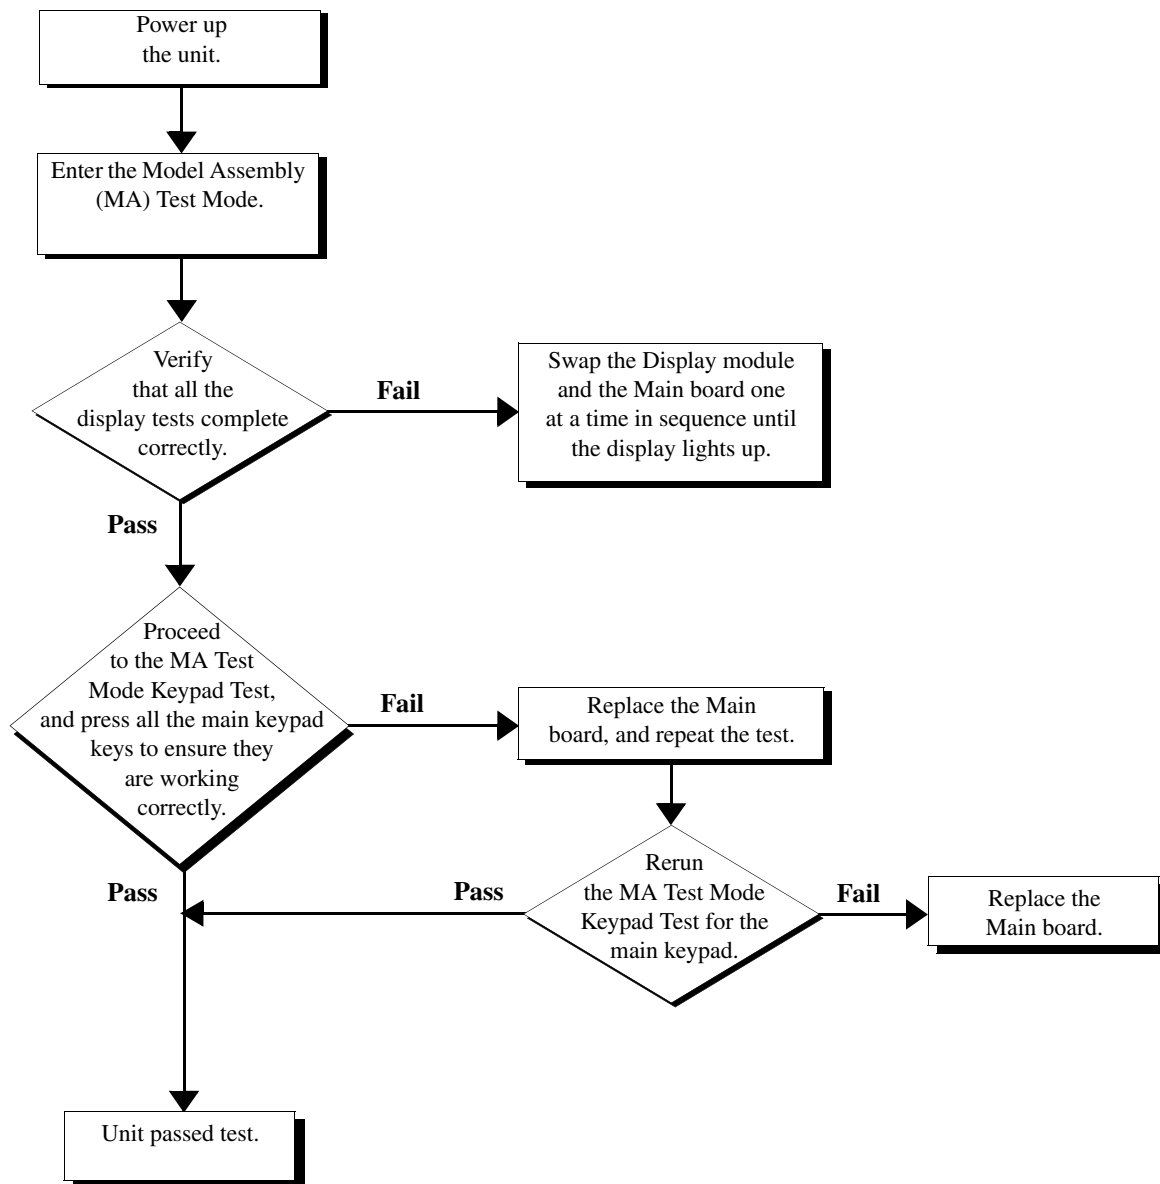


## 8.10 Audio Test

Use this test to check the audio portion of the unit.

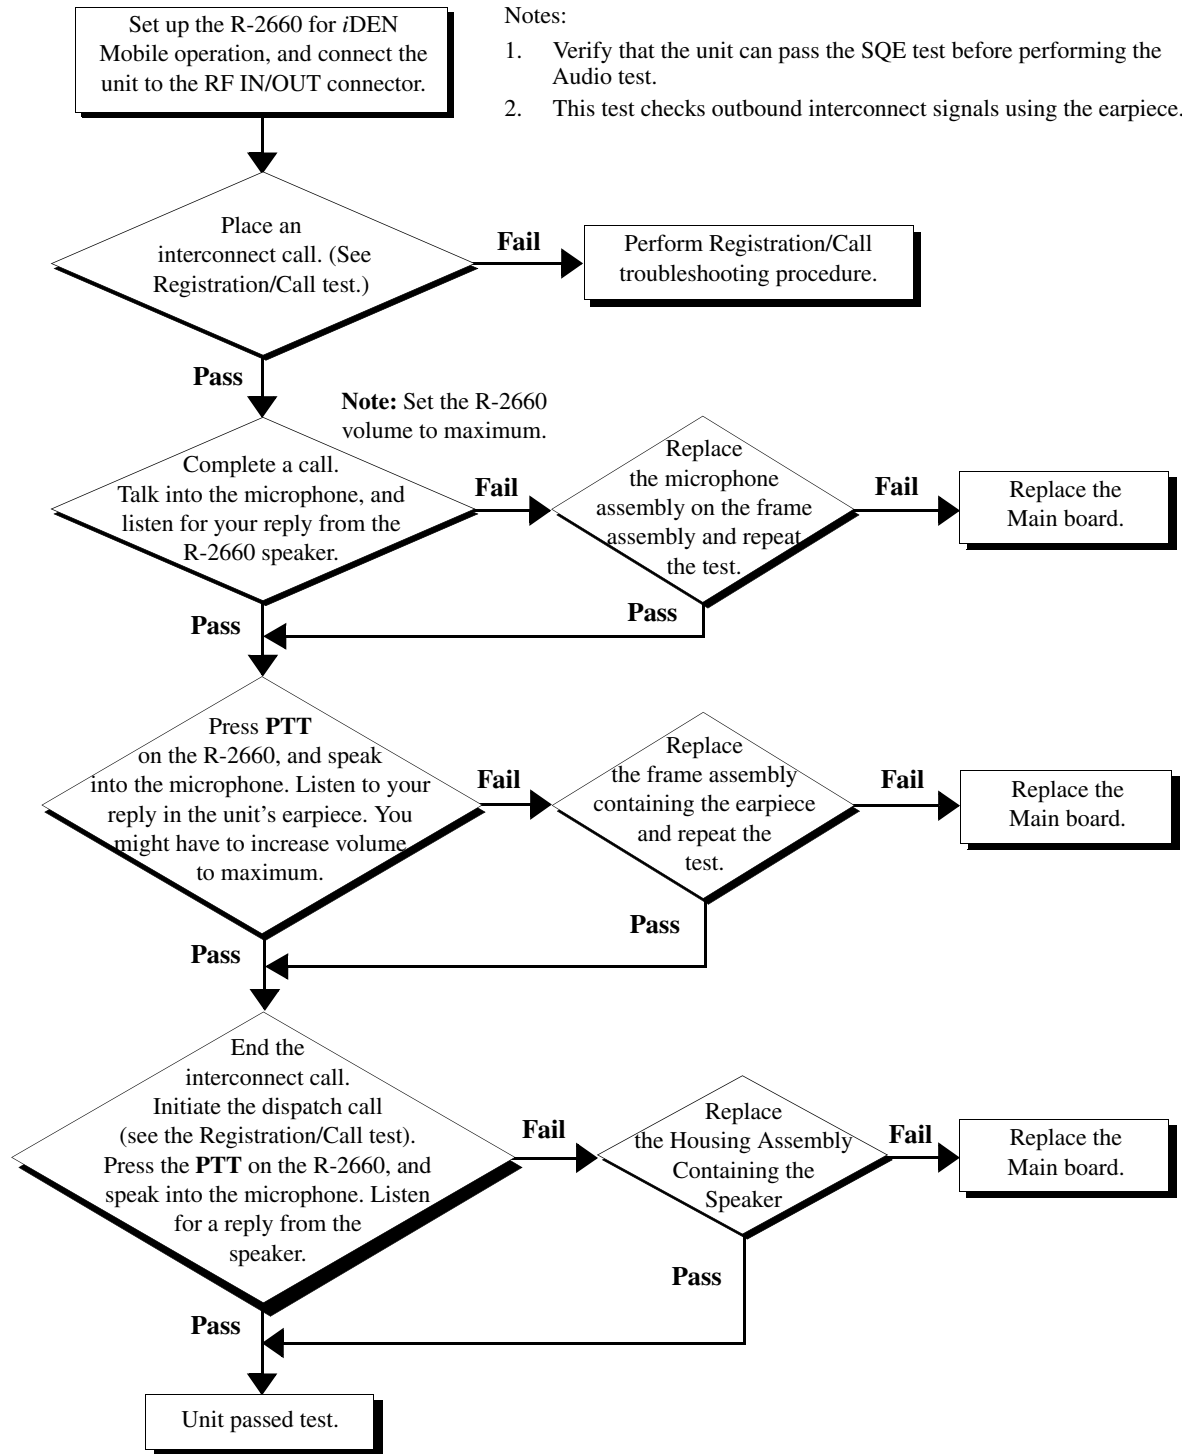

## 8.11 Reset Test

Use this test on a unit having any of the following symptoms: unit resets, or unit powers off and then back on.

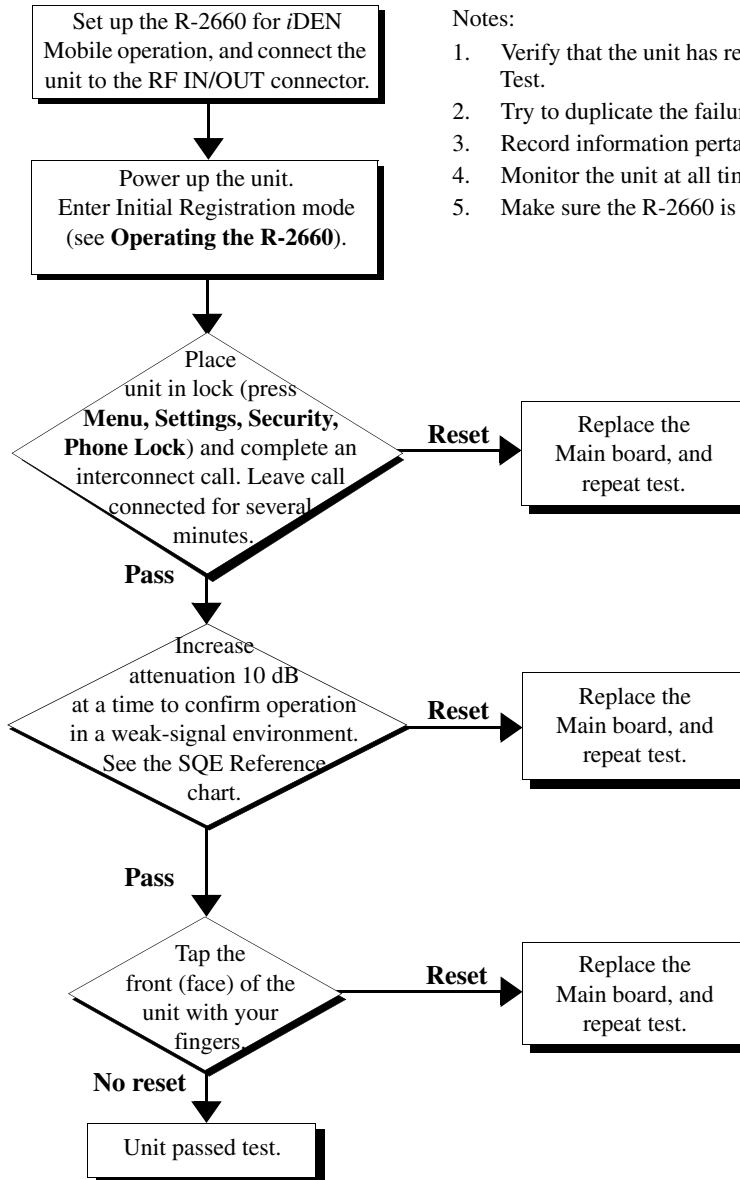

Notes:

1. Verify that the unit has resets entries in the Reset log. See the Reset Log Test.
2. Try to duplicate the failure.
3. Record information pertaining to the failure.
4. Monitor the unit at all times for visual resetting.
5. Make sure the R-2660 is set to a frequency in the unit bandmap.

### SQE Reference Chart

Gen	SQE Level
-70 dBm	>26
-80 dBm	>25
-90 dBm	>23
-100 dBm	>20

**Note:** Gen levels in the SQE chart include RF Adapter losses.

## 8.12 Reset Log Test

Use this test to check the reset log in the unit.

### To perform the reset log test:

1. Power on the unit and wait until registration is complete.
2. If the unit does not have the latest software version, reflash (reprogram) the unit.  
If the unit attempts to reset, perform the Reset test (see page 8-11).
3. Enter debug mode (see page 6-1). The **Unit Info** display appears.
4. Scroll down and highlight **Resets**, and then press **View** to view the **Resets** display.
5. Look for and record any reset errors. Refer to the iSB Bulletin for reset classifications.

If the log contains reset errors, perform the Reset test.

6. Place a dispatch call.
7. Look for, and record, any reset errors.

If the unit attempts to reset, perform the Reset test.

8. Place an interconnect call.
9. Look for and record any reset errors.

If the unit attempts to reset, perform the Reset test.

**NOTE:** If the customer agrees, set the Auto Lock feature. This feature helps detect reset conditions.


## 8.13 Model Assembly (MA) Test Mode Test

Model Assembly Test Mode is an embedded series of operational tests of the unit's user interface and functional features. Motorola iDEN recommends MA Test Mode be performed after any servicing of the unit.

MA Test mode is achieved by starting from a power-down condition:

1. Press and hold three number keys simultaneously with the Power key, such as 1-2-3, 4-5-6, 7-8-9.
2. Release once the opening screen appears in the main display.
3. Follow instructions as they appear pressing the indicated keys.
4. No instruction? Press any key or Scroll right.
5. No reaction? Power down the unit and start MA Test again.

Screen displays depicted as follows:

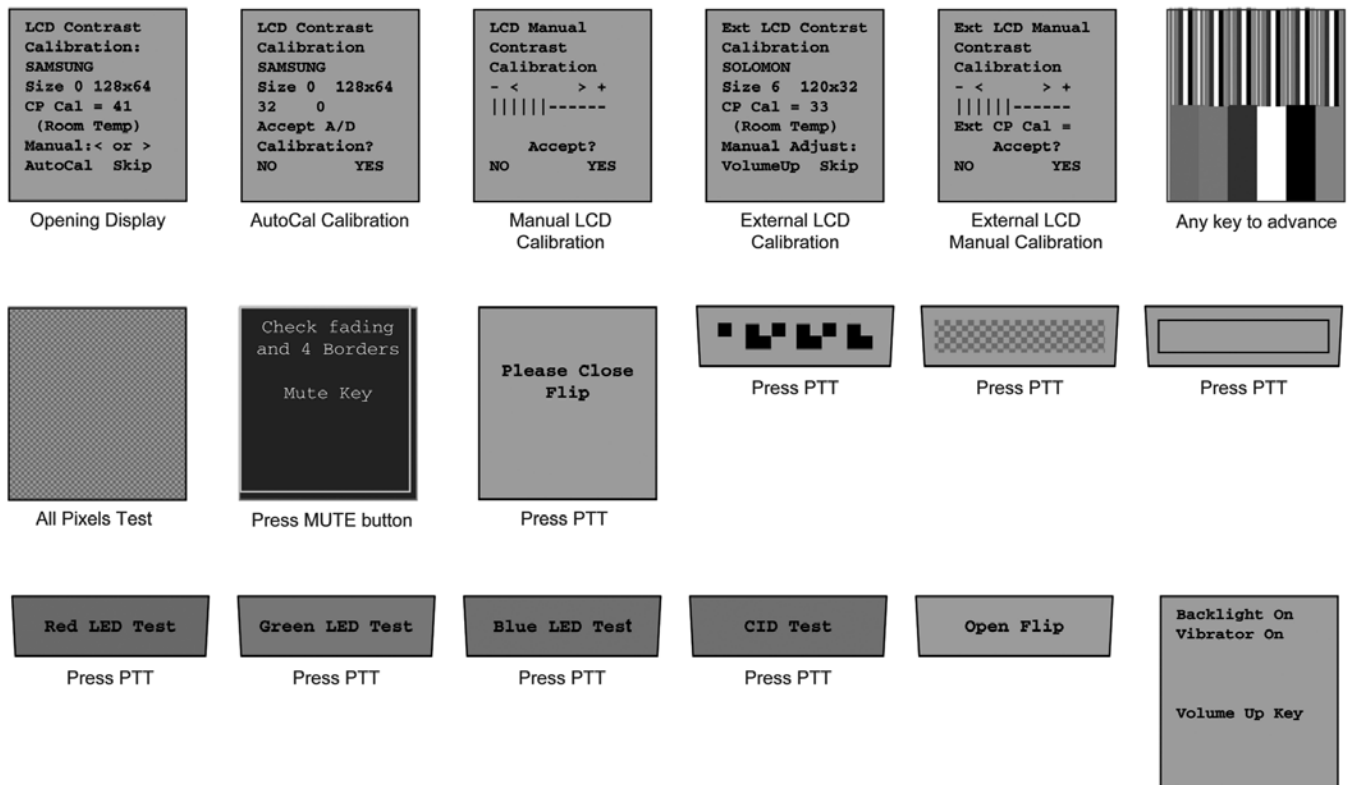

## 8.13 Model Assembly (MA) Test Mode Test (Continued)

Speaker Tone  
  
Volume Down

Earpiece Tone  
  
PTT

Aud Loopback

Speak into Mic

Aud Loopback  
Mic Detect  
Failed  
  
Press a key  
To retest.

Aud Loopback  
Mic Detect  
Test Passed

Scroll Right

Photosensor:  
Place radio  
In light.  
  
OK

Press left option

Photosensor:  
Cover  
photosensor.  
  
OK

Press left option

Photosensor:  
Test failed,  
Retry?  
  
NO YES

SIM Absent  
  
Continue?  
NO YES

KEYPAD TEST:  
SB  
MNU ^  
SND < 0 END  
v  
1 2 3  
4 5 6  
7 8 9  
\* 0 #

Insert Audio  
Jack

Audio Jack  
Not Detected

Insert Audio  
Jack

Insert audio test  
cable

Generating T  
AUD LV = 015  
Test Passed  
Press Audio  
Jack BUTTON

Press PTT.  
Dispatch Beeps

OR

Audio Jack  
Not Detected


Press any key.  
Re-insert jack or  
power down

Key Test OK  
POWER OFF

Press power off

## 8.14 GPS Receiver

Use this test on a unit to check functionality of the GPS.

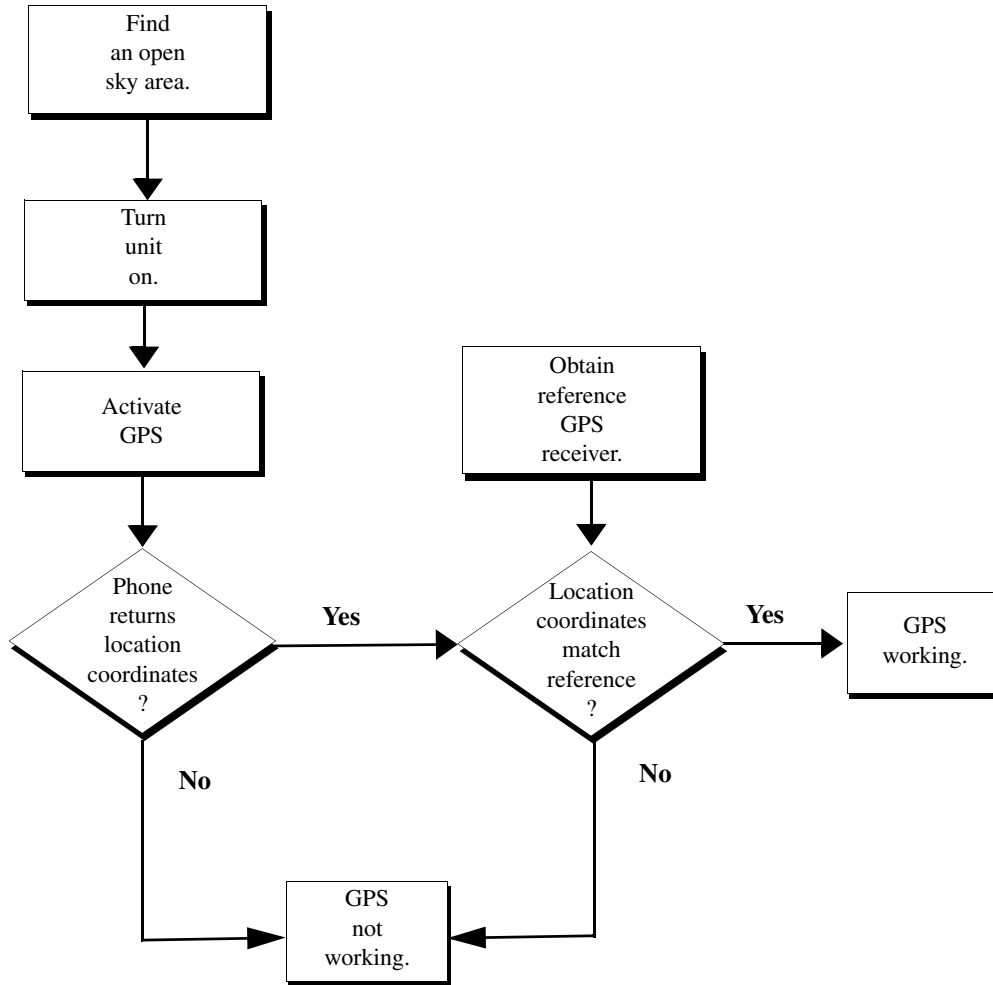





This page intentionally left blank.

---

## APPENDIX A

# ORDERING REPLACEMENT PARTS AND KITS

Parts should be replaced with identical replacement parts. Replacement parts and kits for i830 units can be ordered directly from the Motorola Accessories and Aftermarket Division (AAD) at 1-800-422-4210 and listen to the prompts; or FAX 800-622-6210.

### A.1 Customer Service

For warranty and customer service assistance, call:

1-800-453-0920 U.S./Canada  
1-954-723-3000 FAX  
1-954-723-4910 International (outside U.S./Canada)

### A.2 Replacement Parts

When ordering replacement and accessory parts, the complete part number should be included. If the correct part number cannot be located, call Motorola Parts Identification at 1-800-422-4210.

### A.3 Domestic Orders

Send written orders for replacement parts, test equipment, or manuals to:

**Motorola, Inc.**  
Accessories and Aftermarket Division  
Attn: Order Processing  
1313 E. Algonquin Road  
Schaumburg, IL 60196

Call, fax, or telex orders to:  
1-800-422-4210  
1-847-538-8198 FAX  
280127 TELEX

### A.4 International Orders

For international orders:

**Motorola, Inc.**  
Accessories and Aftermarket Division  
Attn: International Order Processing  
1313 E. Algonquin Road  
Schaumburg, IL 60196

Call, fax, or telex orders to:

1-847-538-8023

1-847-576-3023 FAX

403305 TELEX

## A.5 Replacement Kits

When ordering replacement kits, the complete kit number should be included. If the correct number cannot be located, call Motorola Parts Identification at 1-800-422-4210. Refer to the exploded view and parts list in Chapter 7.

Table A-1. i830 Replacement Kits

Description	Kit Number
<b>Batteries:</b>	
Slim Li Ion Battery	NNTN4930A
High Capacity Li Ion Battery	NNTN5195A
<b>Battery Doors:</b>	
Slim (5mm) Battery Door	NNTN5526A
Standard (8mm) Battery Door	NNTN5527A
<b>Desktop Chargers:</b>	
Q-Series Dual Pocket Desktop Charger Base	NNTN4742A
Q-Series Dual Pocket Desktop Charger Kit	NTN2073A
Q-Series Desktop Charger Insert	NNTN4996A
<b>Rapid Travel Chargers:</b>	
Wall Mount Charger (USA) (Black)	NNTN4963A
Wall Mount Charger (USA) (Two-Tone) (Aftermarket)	NNTN4680A
Wall Mount Charger (Brazil) (Black)	NNTN4842A
Wall Mount Charger (Korea) (Black)	NNTN4843A
Wall Mount Charger (Israel) (Black)	NNTN4958A
Wall Mount Charger (China) (Black)	NNTN4959A
Wall Mount Charger (Argentina) (Black)	NNTN4844A
<b>Mid Rate Travel Chargers:</b>	
Mid-Rate Economy Charger	NNTN4841A
Mid-Rate Charger (Argentina)	NNTN4947A
Mid-Rate Charger (Brazil)	NNTN4948A
Mid-Rate Charger (China)	NNTN4949A
Mid-Rate Charger (Israel)	NNTN4950A
<b>Vehicle Power Adapters:</b>	
Vehicle Charger (Black)	NNTN5165A
Vehicle Charger (Two-Tone)	NNTN4679A

Table A-1. i830 Replacement Kits (Continued)

Description	Kit Number	
<b>Wearable Solutions:</b>		
Holster	NNTN5002A	
Carry Case	TBD	
<b>Car Products:</b>		
Easy Install Car Kit	NNTN4744A	
Hard Install Car Kit Base	NNTN4846A	
Hard Install Car Kit Cradle	NNTN4999A	
Universal Dash Mount Holder	NNTN5113A	
<b>Data Products:</b>		
USB Cable	NKN6559A	
RS232 Cable	NKN6560A	
<b>Audio:</b>		
Light Duty Remote Speaker Mic	NSN6066A	
Surveillance Ear Piece	TBD	
PTT headset (over the ear)	NNTN5004A	
PTT headset (over the head)	NNTN5005A	
PTT headset (ear bud) (Black)	NNTN5006A	
PTT headset (ear bud) (Chrome)	NNTN5330A	
<b>Klaus Power Plug Adapters:</b>		
Euro Plug	SYN7456A	
UK Plug	SYN7455A	
Aus/NZ Plug	SYN8127A	
Korean Plug	SYN7460A	
<b>Escutcheon Labels:</b>	<b>Bronze</b>	<b>Silver</b>
Label, i830 Escutcheon - Avantel	—	NNTN5550A
Label, i830 Escutcheon - DNA Comms	—	NNTN5552A
Label, i830 Escutcheon - EZENFREE	NNTN5555A	—
Label, i830 Escutcheon - Israel	—	NNTN5554A
Label, i830 Escutcheon - Jordan/NewGen	NNTN5553A	NNTN5553A
Label, i830 Escutcheon - Korea	—	NNTN5551A
Label, i830 Escutcheon - Mexico	—	NNTN5535A
Label, i830 Escutcheon - Motorola	NNTN5536A	NNTN5650A
Label, i830 Escutcheon - Movicom	NNTN5651A	NNTN5549A
Label, i830 Escutcheon - Nextel	NNTN5534A	NNTN5716A
Label, i830 Escutcheon - Southern Linc	NNTN5547A	NNTN5717A
Label, i830 Escutcheon - Telus	NNTN5548A	NNTN5647A

Table A-1. i830 Replacement Kits (Continued)

Battery Covers with Escutcheon:	Bronze	Silver
i830 Battery Cover - Avantel	—	NTN2110COLA
i830 Battery Cover - DNA Comms	—	NTN2110DNAA
i830 Battery Cover - EZENFREE	NTN2104AEZF	—
i830 Battery Cover - Israel	—	NTN2111ISRA
i830 Battery Cover - Jordan/NewGen	NTN2104AJOR	NTN2110JORA
i830 Battery Cover - Korea	—	NTN2110KORA
i830 Battery Cover - Motorola	NTN2104AMOT	NTN2110MOTA
i830 Battery Cover - Movicom	—	NTN2110MOVA
i830 Battery Cover - Nextel	NTN2104ANEX	NTN2110NEXA
i830 Battery Cover - NII	—	NTN2110NIIA
i830 Battery Cover - Southern Linc	NTN2104ASOL	NTN2110SOLA
i830 Battery Cover - Telus	NTN2105ATEL	NTN2111TELA

## A.6 Recommended Test Equipment and Tools

The following table lists the standard test equipment recommended for troubleshooting i830 units at the field level of service.

Table A-2. Recommended Test Equipment and Tools

Description	Part Number
Battery Eliminator, Regulated	NNTN5170A
Battery Eliminator, Unregulated	NNTN5169A
Black Stick	SLN7223A
Cable, Audio Jack Test	NNTN5171A
Cable, SMA to N-Type RF	Contact Motorola
Communications System Analyzer	Motorola R-2660
Data Cable, RS-232 (Serial Port)	NKN6560A
Data Cable, USB	NKN6559A
Digital Volt-Ohm Meter	Keithly 2001 or eq.
Pliers, Needle-nose	6680384A33
Power Supply, 0-15VDC, 0-3A	S1348D
Screwdriver, mini flat-tipped, 1/8	6680343A16
SIM Card, Reference	NTN9208
Torx Bit, T-4	
Torx Bit, T-5	
Torx Bit, T-6	6680387A70
Torx Driver, calibrated	RSX4043
Wrist Strap, Static ground	NTN9812

## A.7 Recommended Programming Equipment

The following tables list the programming equipment and software recommended for troubleshooting *i830* units at the field level of service.

Table A-3. Recommended Programming Equipment

Name	Part Number	Description
Cable, Data, RS232 Cable, Data, USB	NKN6560A NKN6559A	Connects unit directly to the computer for programming the codeplug and subscriber code
Cable, Data (2.5mm)	TTY	Connects unit to a teletypewriter (TTY) device for making phone calls.
Cable, Data (for GPS interface)	GPS	Connects unit to a laptop or other device for sending location information.
Computer, IBM PC-Compatible (RSS Workstation)	N/A	Pentium microprocessor with: 32MB RAM min.; 4MB hard disk space min.; Two serial ports and one parallel port; network-capability; Microsoft Windows 2000, Windows 98, or Windows NT 3.5.1 or later

Table A-4. Recommended Software

Name	Part Number	Description
Radio Service Software (RSS) Carrier Version Super Agent Version	RVN4121 RVN4122	Programs the unit
<i>iDEN</i> CompanionPro		Allows "Contacts" information stored on an <i>i830</i> unit's SIM card to be used with an <i>i2000</i> , <i>i2000plus</i> , or any other GSM phone.
<i>iDEN</i> Wireless Data Services Software		Programs a laptop, handheld device, or desktop computer to use the <i>i830</i> unit as a modem to transfer circuit or packet data.
Interactive Map Software (such as that made by DeLorme or Microsoft) that supports NEMA 3.0 format		Allows <i>i830</i> unit's GPS feature to provide approximate location data to a laptop computer or other device.



This page intentionally left blank.





---

# INDEX

## A

accessories A-2  
    reference 4-5  
Accessory Swap test 5-4  
alert tones 3-4  
allocating time 1-2  
altering RF signals 1-1, 1-2  
antenna considerations 5-1  
Audio Loopback test 6-4  
Audio test 8-10

## B

bands  
    primary 6-3  
    secondary 6-3  
base station 1-4  
basic test procedures 6-1  
basic level test  
    checklist 5-2  
Battery Connections test 5-5  
BCCH  
    See broadcast control channel  
BER test, RX 8-7  
bit stream 1-3  
broadcast control channel (BCCH) 1-4  
bursts, RF transmission 1-3

## C

cables, checking 7-1  
calibrating test equipment 7-1  
Call Performance test 5-12  
calling area coverage 1-4  
channel modes  
    dual band 1-4  
channels, voice 1-4  
checklist, basic-level test 5-2  
checklist, field-level test 8-2  
checks, mechanical 5-3  
cleaning a unit 5-2  
Codeplug Repair procedure 6-9  
codeplug troubleshooting 6-10  
coding technique 1-3  
Communications System Analyzer  
    See R-2660  
compression, voice 1-3

conditions, test 5-1  
connecting to RSS workstation 6-8  
conventions, manual xiv  
Customer Care, contacting 5-1  
customer service, contacting A-1

## D

debug mode 6-1  
digital  
    bit stream 1-3  
    modulation 1-1  
dispatch mode 1-4  
displays  
    icons 1-3  
    LED indicators 1-3  
    power-up 3-1  
    testing mode 6-2

## E

Engineering Debug check 6-5  
environment, strong-signal 7-1  
equipment, recommended  
    programming equipment A-7  
    test A-6  
error  
    self-test non-reset 3-2  
    self-test reset 3-2  
ESN and IMEI Matching test 6-5

## F

field level  
    test modes and procedures 8-1  
field level test  
    checklist 8-2  
Flash test 6-10  
frequency range, unit 1-1  
function, vibrator 3-7

## H

handoff 1-4

## I

indicators  
    display 1-3  
Initial Registration mode 7-4  
interconnect mode 1-4

**K**

- Keypad test 8-9
- kits
  - ordering A-1
  - replacement A-4

**L**

- Lockup test 5-4

**M**

- mechanical checks
  - Accessory Swap 5-4
  - Audio Loopback 6-4
  - basic 5-1
  - Battery Connections 5-5
  - Lockup 5-4
  - Shock and Pressure 5-3
  - Voltage Recognition 5-6
- menu settings 5-7
- messages, service 3-3
- mode
  - debug 6-1
  - dispatch 1-4
  - Initial Registration 7-4
  - interconnect 1-4
  - test 6-1, 6-3, 8-1
- model
  - numbering system vii
  - specifications viii
- Model Assembly (MA) Test Mode Test 8-13
- model information vii
- modes
  - 800 MHz 1-4
  - 900 MHz 1-4
  - QAM 1-1
  - QPSK 1-2
- modes of operation 1-1
- modulation
  - digital 1-1
  - QPSK 1-2
  - Quadrature Amplitude 1-1

**N**

- numbering system, model 1-vii

**O**

- Omni station 1-4
- operating the R-2660 7-4
- ordering replacement kits and parts A-1
- overview, iDEN technology 1-1

**P**

- pages 1-4

- parts
  - accessories A-2
  - ordering A-1
  - replacement A-2
- Passcode test 5-7
- PCCH
  - See primary control channel
- power-down sequence 3-2
- power-up sequence 3-1
- Power-Up test 8-8
- preventive maintenance 5-2
- primary control channel (PCCH) 1-4
- procedures
  - See tests
- programming
  - unit 6-8
- programming equipment
  - recommended A-7
  - RSS A-7
  - RSS workstation A-7
- Programming Menu Settings Check 5-7
- Public Switch Telephone Network (PSTN) 1-4
- publications, related xiv

**Q**

- QAM
  - See Quadrature Amplitude Modulation
- QPSK
  - See Quadrature Phase Shift Keying
- Quadrature Amplitude Modulation
  - modes 1-1
  - signal spectrum 1-2
  - technique 1-1
- Quadrature Phase Shift Keying, technique 1-2
- QuickComm feature 6-9

**R**

- R-2660
  - operating 7-4
  - user's manual xiv
  - using RSS 7-2
- radio frequency
  - See RF
- Radio Service Software
  - See RSS
- Radio Service Software (RSS) 6-8
- reference
  - accessories 4-5
  - unit 4-5
- registration mode 7-4
- Registration/Call test 8-4
- related publications xiv
- repetition rate 1-4

replacement  
   kits A-4  
   parts A-2  
 replacement parts  
   domestic orders A-1  
   international orders A-2  
   listing A-2  
 reset condition 5-1  
 reset errors 3-2  
 Reset Log test 8-12  
 Reset test 8-11  
 RF  
   allocation 1-2  
   altering signals 1-1, 1-2  
   checking cables 7-1  
   transmission bursts 1-3  
 RSS  
   See Radio Service Software  
   using 6-8  
   version A-7  
   workstation A-7  
 RSS workstation  
   connecting to 6-9  
**S**  
 safety information iii  
 Sectored station 1-4  
 SELF CHECK ERROR 3-2  
 SELF CHECK FAIL 3-2, 6-10  
 self-test  
   non-reset errors 3-2  
   reset errors 3-2  
 self-test procedures  
   basic 5-1  
   Call Performance 5-12  
   ESN and IMEI Matching 6-5  
   Passcode 5-7  
   Programming Menu Settings Check 5-7  
 service  
   messages 3-3  
 service, customer A-1  
 settings, menu 5-7  
 Shock and Pressure test 5-3  
 signal spectrum, Quadrature Amplitude Modulation 1-2  
 signal, altering RF 1-1, 1-2  
 SIM card  
   purpose 1-5  
   replacing 7-7  
   test 4-5  
 SIM Card Swap Test 5-3  
 slot number 1-3  
 specifications, model viii  
 SQE Test 8-5  
 static-sensitive devices, protecting 7-1  
 strong-signal environments 7-1

**T**

TDMA  
   See Time Division Multiple Access  
 technician tests  
   Audio 8-10  
   Codeplug Repair Procedure 6-9  
   Codeplug Troubleshooting 6-10  
   Corrupted Software Repair Procedure 6-10  
   Engineering Debug Check 6-5  
   Keypad 8-9  
   Model Assembly (MA) Test Mode 8-13  
   Power-Up 8-8  
   procedures 6-8  
   Registration/Call 8-4  
   Reset 8-11  
   Reset Log 8-12  
   RX BER 8-7  
   SQE 8-5  
   TX Power 8-6  
 technology  
   digital modulation 1-1  
   voice compression 1-3  
 test  
   conditions 5-1  
   environments 7-1  
   modes 6-1, 8-1  
   procedures 8-1  
 test equipment A-6  
   additional 4-5  
   calibrating 7-1  
   checking cables 7-1  
   preparing 7-1  
   R-2660 7-2  
   recommended A-6  
   reference accessories 4-5  
   reference unit 4-5  
   required 8-1  
 test mode 6-3, 8-1  
 test modes and procedures  
   field level 8-1  
 testing mode displays 6-2  
 tests  
   Accessory Swap 5-4  
   Audio 8-10  
   Audio Loopback 6-4  
   basic procedures 6-1  
   Battery Connections 5-5  
   Call Performance 5-12  
   Codeplug Repair Procedure 6-9  
   Codeplug Troubleshooting 6-10  
   Corrupted Software Repair Procedure 6-10  
   Engineering Debug Check 6-5  
   equipment preparation 7-1  
   ESN and IMEI Matching 6-5  
   Keypad 8-9  
   Lockup 5-4  
   Model Assembly (MA) Test Mode 8-13  
   Passcode 5-7  
   Power-Up 8-8  
   preparing for 7-1  
   Programming Menu Settings Check 5-7

## INDEX

---

### tests, continued

- Registration/Call 8-4
  - Reset 8-11
  - Reset Log 8-12
    - See also mechanical checks
    - See also self-test procedures
    - See also technician tests
  - RX BER 8-7
  - Shock and Pressure 5-3
  - SQE 8-5
  - TX Power 8-6
  - Voltage Recognition 5-6
- time allocation 1-2
- Time Division Multiple Access
  - overview 1-2
  - RF signal time allocation 1-2
- tones, alert 3-4
- tools, recommended A-6
- transmission bursts 1-3
- troubleshooting 5-7, 6-10
- TX Power test 8-6

## U

### unit

- alert tones 3-4
- cleaning 5-2
- connecting to RSS workstation 6-9
- displays in testing mode 6-2
- dual band 1-4
- equipment preparation 7-1
- errors 3-2
- icons 1-3
- LED indicators 1-3
- mechanical checks 5-3
- messages 3-3
- power-down sequence 3-2
- power-up sequence 3-1

- preparing for testing 7-1
  - programming 6-8
  - reference 4-5
  - self tests 5-7
  - troubleshooting 5-7, 6-10
- using RSS 6-8

## V

- Vector Sum Excited Linear Prediction (VSELP) 1-3
- vibrator
  - function 3-7
  - modes 3-7
  - settings 3-7
- voice
  - channels 1-4
  - compression 1-3
- Voltage Recognition test 5-6
- VSELP
  - See Vector Sum Excited Linear Prediction



© 2004 by Motorola, Inc.  
8000 W. Sunrise Blvd.  
Ft. Lauderdale, FL 33322  
Printed in U.S.A. 1/04.  
All Rights Reserved.



68P80400P67-O