











SEND A MULTIMEDIA MESSAGE



- Open Message  in the Navigation bar > Compose. The message creation screen is displayed
- To enter text, tap on center of screen. Use the Keypad icon to hide the keyboard
- Tap a button in media toolbar at bottom of screen to insert media object
- Tap  to insert a picture
- Tap  to insert a sound file
- Tap  to activate camera, take photo, and insert
- Tap  to attach a contact, event, or file
- Tap To to select number or address from your address book or tap the direct line in the To field
- Tap Send to send the message


SEND A TEXT MESSAGE WITH FLIP CLOSED

- Press rocker switch in to open the quick menu
- Press rocker down to highlight "WRITE MESSAGE", and press in to select
- Use keypad to type in number in "To:" field, or use quick-menu to select recipient from Contact List
- Press the keypad keys to enter the message using predictive text
- Press the Send Key  > OK >  to send

NOTE: Press the Clear Key  to the left to delete character. Press "W" and/or "0" to change text entry mode. Press the End Key  or the Home Key  to exit message


USE THE CAMERA

- Open the flip and press the Camera key  to activate the camera
- Press the Camera key  to capture photo
- To adjust the Brightness Lighting conditions and style (black and white, etc) tap one or more of the icons at the top right of the screen


TIP Press  to zoom in/out and adjust image size. Also, tap the screen to remove the icons for an unobstructed view

USE THE MEDIA PLAYER

TO PLAY A FILE

- Open Application Launcher  > Player > Menu > Open > File
- Navigate to file to be played

TO PLAY FROM A URL

- Open Application Launcher  > Player > Menu > Open > URL, enter URL for file to download, and play a supported media file from website

TO PLAY FROM A PLAYLIST

- Open Media Player > Playlist, select required playlist. Please see manual for more information on downloading media to the phone and creating playlists


TIP Demonstration media files may be found in the "Preload" folder

RECORD A VIDEO CLIP

- Open Application Launcher  > Video > Record > Done

TIP Depending on available memory, up to 2 hours video may be recorded
Depending on available memory, up to 2 hours video may be recorded

PREVIEW A PHOTO OR VIDEO

- To preview a video, Tap (green arrow icon) to play
- From Camera/Video, tap Menu  > Album or use File Manager to select image/video

MODIFY RINGTONE

- Open Application Launcher  > Setup > Ringer Alert Style. Use rocker to select style to edit > Edit

ASSIGN A RING ALERT

FLIP CLOSED

- Rotate Rocker Switch to select the ring style

FLIP OPEN



- Open Application Launcher  > Setup > Ringer Alert Style > Edit > Ringtone Line 1 > Select Ringtone > OK > Save

CONNECT WITH BLUETOOTH

SEARCH FOR OTHER DEVICES

- Open Application Launcher  > Bluetooth > Menu  > Turn Bluetooth on > Search for available devices

MAKE PHONE VISIBLE TO OTHER DEVICES

- Open Application Launcher  > Turn Bluetooth on > Menu  Discoverable (may take up to 3 minutes for connection to be made)

SYNCHRONIZE USING TETHERED SYNC

You can use a Bluetooth wireless connection or a USB cable connection to transfer and synchronize data between your phone and a PC.

- To transfer data between your phone and PC, you must install the Motorola Mobile PhoneTools software and the software is essential to synchronize data between your phone and PC

Alternatively, you can use a Motorola-Original USB cable to connect your phone and PC. Plug the USB cable into the USB connector port on the phone and plug the other end into the USB port on the PC.

- To synchronize data between your phone and PC, select the Sync option from the Motorola Mobile PhoneTools software running on the PC


NOTE: Not all devices are compatible with a cable connection. Check your PC to determine the type of cable you need



A780

GETTING STARTED


KNOW YOUR MOTOROLA A780

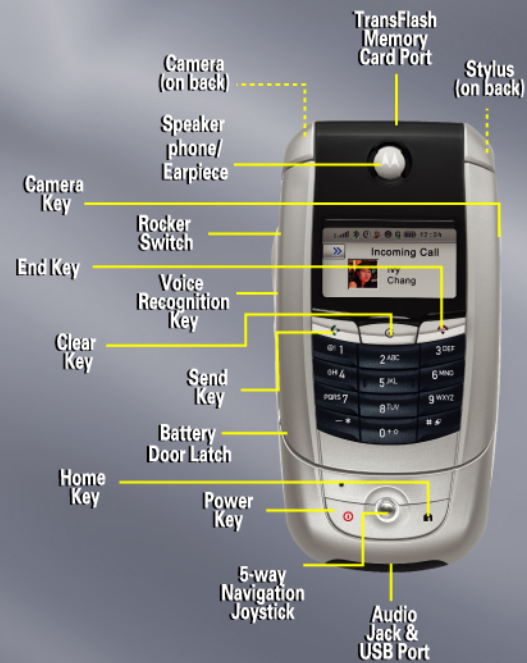


Press and hold the Power Key for 2 seconds to turn the phone on. The flip must be open to turn the phone on or off.



INSTALL THE BATTERY

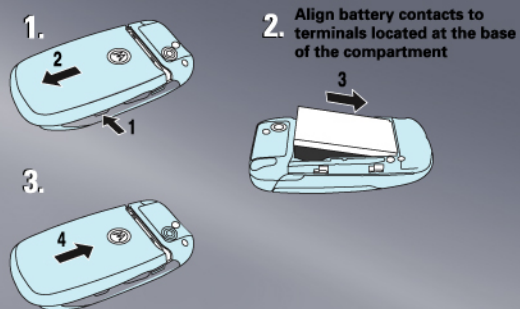

INSTALL/REMOVE SIM

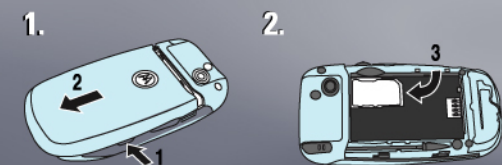

INSTALL/REMOVE MEMORY CARD

- Insert Memory card into the memory slot and use the memory card to store and retrieve multimedia objects

TransFlash Memory Card Port



TIP FOR CONNECTING TO CHARGER

- May take up to 10 seconds for phone to indicate charging

USE THE TOUCHSCREEN DISPLAY

- Access all the phone's features by tapping on icons buttons, and text with the stylus
- Tap & hold stylus on screen to show the " Press & Hold" menu

GLOBAL NAVIGATION BAR

- Application Launcher Screen
- Address Book
- Message SMS/MMS
- Phone

NOTE: There are different screens with many applications in the Application Launcher

BUTTON BAR

- Return
- Menu
- Exit

MAKE A CALL WITH FLIP CLOSED

- Dial the number using the external keypad
- Press the Send Key to make the call



To quickly find a contact, press keypad and type name of person to call (A=2, N=6 etc). Press . to highlight name, and then press . to call

ANSWER A CALL WITH FLIP CLOSED

- Press the Send Key to answer a call
- Press the End Key to end the call

- For quick access to Recent Calls press the Send Key

FLIP CLOSED QUICK MENU

- Press rocker switch in to open the quick menu
- Press rocker up or down to highlight item, and press in to select
- Press the End Key or the Home Key to exit menu



www.hellomoto.com

MOTOROLA and Stylized M Logo are registered in the US patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows, ActiveSync and Windows Media are registered trademarks of Microsoft Corporation; and Windows XP and Windows Mobile are trademarks of Microsoft Corporation. © Motorola, Inc. 2004.

Part no: 6802915J56

Printed in Singapore

TEPL-01/2005