



www.hellomoto.com
www.attwireless.com/smartphone

EVERYTHING YOU KNOW. ANYWHERE YOU GO.

The Motorola MPx200 is the ideal tool for the always active on-the-go mobile professional. Synchronization with your Windows based PC helps you stay in control and simplify your life. You have the freedom to review your Outlook e-mails, Contacts, and Calendar while on the road.

Your new Motorola MPx200 with AT&T Wireless service is the perfect companion to Microsoft Office.

- It includes pocket Outlook so you can take your Inbox, Calendar, Contacts and Tasks List with you when you're on the go to stay connected to your most important data.
- With ClearVue Office from Westtek you can access Word, Excel and PowerPoint files including those you get in e-mail attachments.
- With JetGet Print software from Westtek you can print Office documents via the Motorola MPx200 infra-red port.

NOTE: Please find Instructions for downloading ClearVue Office and JetGet Print on the credit card sized promotion card included in your MPx200 box.

9

LEARN WHAT'S NEW WITH MICROSOFT OFFICE 2003

- It's easier to learn by placing greater functionality right at your fingertips.
- The security and reliability is the best ever! Improved protection against spam, viruses, system crashes and unauthorized viewing or tampering.
- It includes powerful new tools for communication and collaboration.
- Learn more at www.microsoft.com/windowsmobile/smartphone/Office

10

MICROSOFT LOGO HERE

IN BOX CONTENTS

- Motorola MPx200 phone
 - Battery
 - Charger
 - Desktop charger cradle
 - Mini USB data/sync cable
 - Stereo headset
 - Mono headset
 - Companion CD including:
 - Microsoft Active Sync
 - Applications and games for your MPx200
 - AT&T Wireless SIM card
 - Product and service user data
 - User Manual
 - AT&T Wireless Welcome Guide
- need additional items, if any**

11

mMODE

mMode from AT&T Wireless is an entirely new world on your wireless phone. mMode lets your e-mail, get ring tones and games, or try the Web mMode style — news, sports, music and shopping... all right on your wireless phone. It can even give your directions when you're lost and help you locate the nearest ATM, restaurant, movie theatre and more.

From the Home screen, select mMode [insert mMode icon] and press the action key. Follow the on-screen instructions for set up.

For more information, visit attwireless.com/mMode.

12

SYNCHRONIZING YOUR PHONE WITH YOUR PC

Including Corporate E-mail

You can keep your personal data up-to-date by synchronizing your phone with your PC. This data can include your Microsoft Outlook Inbox, Calendar, Contact, and Tasks.

You will need ActiveSync version 3.7 installed on your PC. If you do not have ActiveSync v3.7 already installed, you can find the ActiveSync application on the companion CD included in the MPx200 box (can be used for upgrades or new installs). Once you have installed ActiveSync on your PC, you can synchronize your data in 2 ways:

1. Desktop synchronization uses a cable connection from the phone to your PC. To connect your MPx200 with your computer, plug the USB data cable provided in the MPx200 box into your USB port on your PC and then connect the other end to either the desktop charger cradle or directly to the phone using the sync/charger socket. The first time you connect your phone to your PC, ActiveSync on your PC will start-up the New Partnership

13

Wizard that will help you set up a partnership between your phone and PC. Your first synchronization will begin after the wizard completes. The New Partnership Wizard only launches on your first connection, subsequent syncs will automatically occur when you connect your device to your PC. Each time you synchronize your phone, it will be updated with the most current data from your PC.

Note: See the User's Guide for information on synchronizing via an infrared connection.

2. Wireless synchronization does not require a cable connection between the phone and your PC. It activates a wireless connection to transfer the data directly from your company's Exchange server to the phone. To enable this service, see your company's IT administrator.

The method described above transfers your Microsoft Outlook e-mail from your PC or server to your phone, If you would like to access additional e-mail accounts, see **ADDITIONAL E-MAIL OPTIONS.**

14



 
MPx200 GETTING STARTED

Insert/Remove SIM Card	1
Install and Charge the Battery	2
Register	3
Your Subscriber Identity Module (SIM)	3
Getting to Know Your MPx200 and Making a Call	4
Getting to Know the MPx200 Home Screen	5
Send an E-mail or SMS	6
Additional E-mail Options	7
Everything You Know. Anywhere You Go	9
Learn What's New with Microsoft Office 2003	10
In Box Contents	11
mMode	12
Synchronizing Your Phone with Your PC	13

GETTING STARTED




Step 1: INSERT/REMOVE SIM CARD

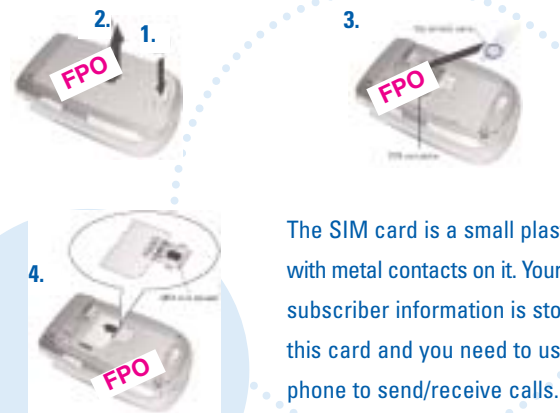

The SIM card is a small plastic card with metal contacts on it. Your personal subscriber information is stored on this card and you need to use it in the phone to send/receive calls. The SIM may be pre-installed.

 Step 2: INSTALL AND CHARGE THE BATTERY

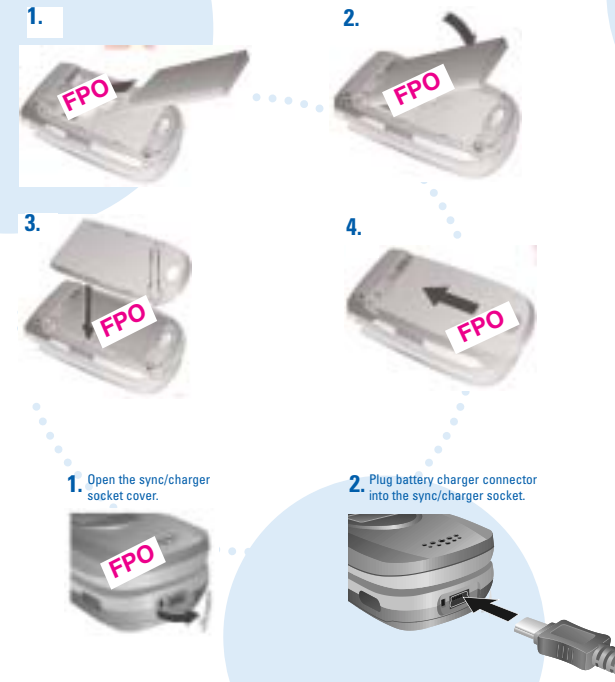

Charge the battery before first time use.

Step 3: REGISTER

While your battery is charging, turn on your wireless phone and leave it on. This registers your phone on the AT&T Wireless network and allows you to receive a welcome message which displays your new wireless phone number. If you do not receive this message, please call AT&T Wireless Customer Care at 1 866 293-4634.

If your company has been provisioned for the AT&T Wireless AirLoader service, you will receive an additional SMS text message from AT&T Wireless when you turn on your phone. You will be prompted to download a configuration file. Click "Yes" and make sure the "Open file after download" option is checked to download and install the configuration file to the device. When prompted for your user name and password, use your "standard" network logon credentials as defined by your company.

YOUR SUBSCRIBER IDENTITY MODULE (SIM)

Locking Your Phone Using the SIM Card Code

You can protect your wireless phone from misuse by others by locking your AT&T Wireless SIM card with a SIM code. Your PIN will be set to 1111 at delivery. For maximum security, change your PIN to a new four- to eight-digit number. See your wireless phone manufacturer's user guide for more data.

Charge the battery before first time use.

Step 4: GETTING TO KNOW YOUR MPx200 AND MAKING A CALL

Turn on/off phone

- Press and hold the power button. [need icon]

Answering a call

- Open phone or press Talk key. [need icon]



 
- [need icon] Left Soft Key
- [need icon] Jog Dial
- [need icon] Send Key
- [need icon] Home
- [need icon] Power
- [need icon] Infrared Port

- Making a call**
- From the Home screen, dial a number and press the Talk key. [need icon]
- End a call**
- Close phone or press End key. [need icon]

- Main Display**
- Direction Key** [need icon]
- Right Soft Key** [need icon]
- Action**
- End Key** [need icon]
- Back** [need icon]

TIP To return to the Home Screen press the Home key. [need icon]

Step 5: GETTING TO KNOW THE MPx200 HOME SCREEN

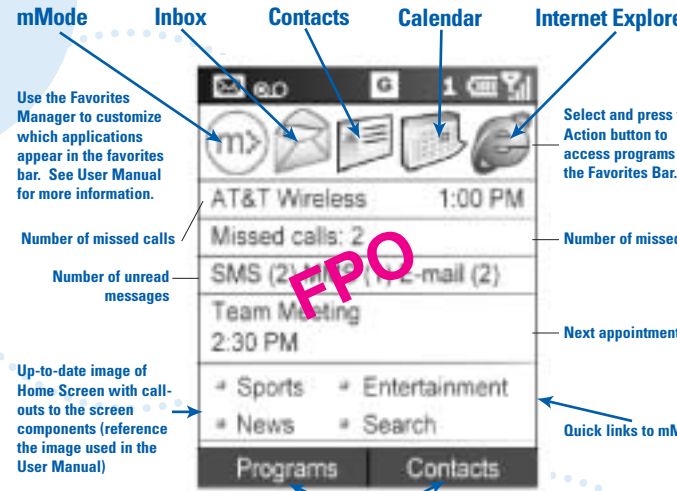

- mMode**
- Inbox**
- Contacts**
- Calendar**
- Internet Explorer**
- Use the Favorites Manager to customize which applications appear in the favorites bar. See User Manual for more information.
- Number of missed calls
- Number of unread messages
- Up-to-date image of Home Screen with call-outs to the screen components (reference the image used in the User Manual)
- Select and press the Action button to access programs from the Favorites Bar.
- Number of missed calls
- Next appointment
- Quick links to mMode
- Soft Keys

Access the Home Screen at any time by pressing the Home Key [Home Key icon]

To access a list of common commands and profiles such as power off and silent mode, press and hold the Home key. [Home Key icon]

Use the Direction Key to move the selection focus up, down, left, or right. The cursor will highlight your current selection.

Use the blue Action button to confirm your selection. The Action button's functionality is similar to pressing the "Enter" button on a PC keyboard.

Charge the battery before first time use.

SEND AN E-MAIL OR SMS

- Press the PROGRAMS soft key, select Inbox and press the Action button (or from the Home screen, press the Inbox icon from the Favorites menu)
- Press the NEW soft key
- To enter the recipients address:
 - Select a recipient from your phone's Contacts: With the blinking cursor in the To: box, press the Action button. Select a contact from the list and press the Action button again.
 - Enter a recipients mobile number directly: The cursor should be in the To: box. Make sure that you are in the correct entry mode, numeric for SMS and alpha for e-mail. The current entry method is listed in top right corner of the screen and can be alpha (abc), numeric (123), or predictive text (t9). To change the entry mode, press and hold the * key to scroll through the input modes. Once you are in the correct entry mode, enter the recipient's address.

- Press DOWN on the direction key twice and enter a subject in the Subj: field, using the phone keypad. If you wish to change text entry method, press and hold the * key.

Charge the battery before first time use.

ADDITIONAL E-MAIL OPTIONS

- Press DOWN on the direction key into main body of message, enter your message, and then press the SEND soft key. You can enter up to 160 characters. The current number of characters in your message is listed in the upper left hand corner. For instance, if you have entered 27 characters, you will see 27/160 in the upper left. Messages longer than 160 characters will be split into multiple messages. SMS charges will apply for each message.
- Note: You will see both your SMS and e-mail stored in the same Inbox folder.

Personal E-mail (POP3/IMAP4 accounts such as Qwest, Earthlink, or Comcast accounts)

MPx200 Inbox - The Inbox can only be configured to access one e-mail type – Outlook data or POP3/IMAP4. If you are using your Inbox to access your Outlook data, you can access your personal e-mail account by using mMode as described below. If you prefer to use the Inbox for your personal e-mail account (and do not need to sync Outlook data), visit attwireless.com/smartphone for instructions and a list of supported e-mail service providers.

Charge the battery before first time use.

mMode - You can access your personal e-mail account using mMode. From the Home screen, select mMode [insert mMode icon] and press the action key. Select Message Center > E-mail > Add New E-mail. Follow the on-screen instructions for set up. For more information, visit attwireless.com/mMode.

Office Online - If real-time access to your office e-mail and calendar is important to you, but you don't have IT support, then Office Online is an ideal solution for you.

Office Online allows you real-time access to your office email, calendar and your company's Global Address List - all from your phone. You can access one corporate account (Microsoft Outlook™ or Lotus Notes™) and up to 9 additional POP3 accounts. To sign up from your phone, from the HOME screen, press the PROGRAMS soft key, select Office Online and press the ACTION button. For more information, visit www.attwireless.com/officeonline

Charge the battery before first time use.