

 
Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V620 GSM wireless phone.



Welcome - 1

Check It Out!

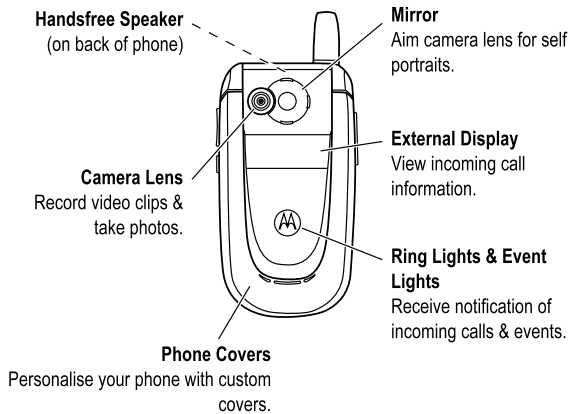

Feature	Description
Record Video Clip	Record a video clip: Press > Multimedia > Videos > (New Video) , point lens at subject, press CAPTURE () to begin recording, press STOP () to stop recording.
Play Video Clip	Play a video clip: > Multimedia > Videos > <i>video clip</i>

Feature	Description
Take Photo	Press > Multimedia > Camera , point lens at subject, press CAPTURE () to take a photo.
Send Photo	Send a photo to a phone number or email address: Take photo, then press STORE () > Send In Message .
Set Photo as Picture ID	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press STORE () > Apply as Phonebook Entry .
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos: > Messages > New Message > New Multimedia Msg
Wireless Connection	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device: > Settings > Connection > Bluetooth Link > Setup > Power > On , press BACK (), press > Handsfree > (Look For Devices)
Ring Lights	Choose ring lights for incoming calls: > Settings > Ring Styles > Ring Lights
Event Lights	Activate event lights for incoming text and voicemail messages, alarms, and other events: > Settings > Ring Styles > Event Lights

www.motorola.com

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003, 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Contents

Safety and General Information	8
Getting Started	15
About This Guide	15
Installing the SIM Card	16
Battery Use	17
Installing the Battery	19
Charging the Battery	20
Turning Your Phone On	21
Turning Your Phone Off	21
Adjusting Volume	22
Making a Call	22
Answering a Call	23
Viewing Your Phone Number	23
Highlight Features	24
Recording and Playing Video Clips	24
Taking and Sending a Photo	28
Sending a Multimedia Message	30
Receiving a Multimedia Message	33
Using a Bluetooth® Wireless Connection	33
Using Ring Lights	35
Setting Event Lights	36
Changing Phone Covers	36
Learning to Use Your Phone	39
Using the Display	39
Using the 5-Way Navigation Key	44
Using Menus	44

Contents - 5

Entering Text	46
Using the Smart Key	57
Using the External Display	57
Using the Handsfree Speaker	58
Changing a Code, PIN, or Password	59
Locking and Unlocking Your Phone	59
If You Forget a Code, PIN, or Password	60
Using the Phonebook	61
Setting Up Your Phone	64
Setting a Ring Style	64
Changing the Call Alert	65
Setting the Time and Date	65
Setting a Wallpaper Image	66
Setting a Screen Saver Image	67
Changing Phone Skin	68
Setting a Phone Theme	68
Setting Answer Options	69
Setting Display Brightness	70
Adjusting the Backlight	70
Setting Display Timeout	70
Storing Your Name and Phone Number	71
Calling Features	72
Turning Off a Call Alert	72
Viewing Recent Calls	72
Redialling a Phone Number	74
Using Automatic Redial	74
Returning an Unanswered Call	74
Using the Notepad	75
Putting a Call On Hold or Mute	76
Using Call Waiting	76

Using Caller ID (Incoming Calls)	77
Calling an Emergency Number	77
Dialling International Numbers	77
Calling With 1-Touch Dial	78
Using Voicemail	78
Changing the Active Line	80
Phone Features	81
Main Menu	81
Settings Menu	82
Feature Quick Reference	83
Calling Features	83
Messages	84
Phonebook	85
Personalising Features	87
Instant Messaging	88
Chat	89
Email	90
Menu Features	90
Special Dialling Features	91
Call Monitoring	92
Handsfree Features	93
Data and Fax Calls	94
Bluetooth® Wireless Connections	94
Network Features	96
Personal Organiser Features	96
Security	98
News and Entertainment	98
Specific Absorption Rate Data	101
Index	103

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.





 
Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

 
- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

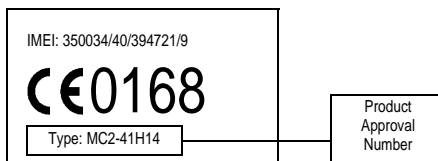

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Getting Started

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.


To obtain a copy of this guide, see the Motorola Web site at:

<http://hellomoto.com>.

Selecting a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows:

Find the Feature ▾ > Recent Calls > Dialed Calls

This example shows that, from the home screen, you must press the menu key ▾ to open the menu, scroll to and select  Recent Calls, then scroll to and select **Dialed Calls**.

Press the 5-way navigation key  to scroll and highlight a menu feature. Press **SELECT**  to select the highlighted menu feature.

Getting Started - 15

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories

 


This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt

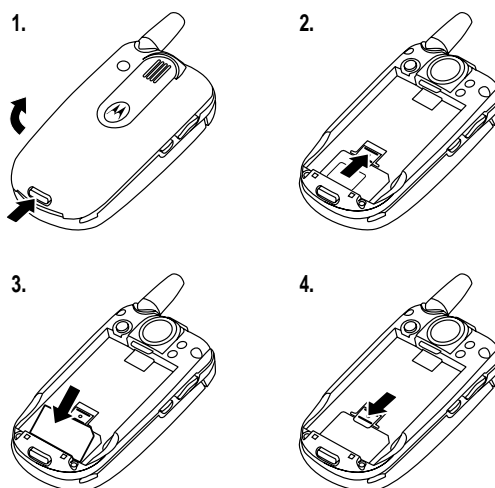

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

 
Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery



™ Your phone is designed to use only Motorola Original batteries and accessories.

Note: Your phone is shipped with a protective clear plastic liner covering the battery door latch. Remove the liner to ensure that the battery door attaches and closes properly.

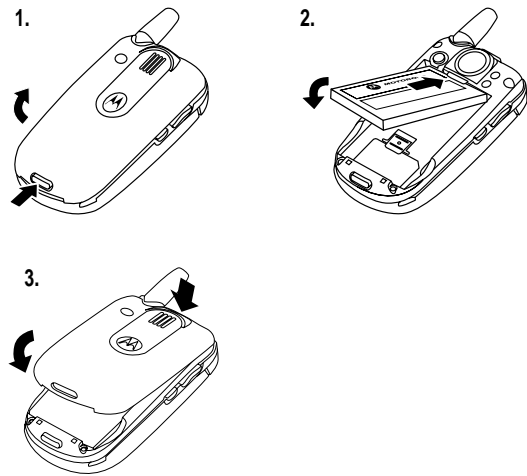


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

 - 1 Insert the travel charger plug into your phone with the release tab facing up. Make sure that both of the plug's connector hooks engage to lock the plug in place.

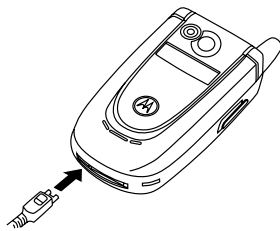

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.

Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

 
Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

Turning Your Phone On

Action

- 1 Open your phone.
- 2 Press and hold the power key for 2 seconds to turn the phone on.

Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.

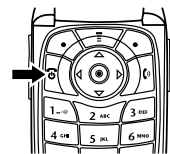

- 3 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 4 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Turning Your Phone Off

 
Action

Press and hold the power key for 2 seconds to turn the phone off.

Adjusting Volume

Press the up or down volume keys to:

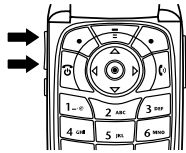

- silence an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)



Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.

Making a Call


You must be in the home screen to dial a phone number (see page 39).

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and "hang up" the phone when you are finished




Tip: You can also close the phone flip to end the call.

Answering a Call



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer**.)

If the phone flip is **not** active:

Press	To
1  or ANSWER ()	answer the call
2 	end the call and "hang up" the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 71. If you do not know your phone number, contact your service provider.

Highlight Features

You can do much more with your phone than make and receive calls!

Recording and Playing Video Clips


You can record a video clip with your phone, and send it to other wireless phone users in a multimedia message.

Recording a Video Clip


To activate your phone's video camera:

Find the Feature > Multimedia > Videos > (New Video)

The active viewfinder image appears on your display.

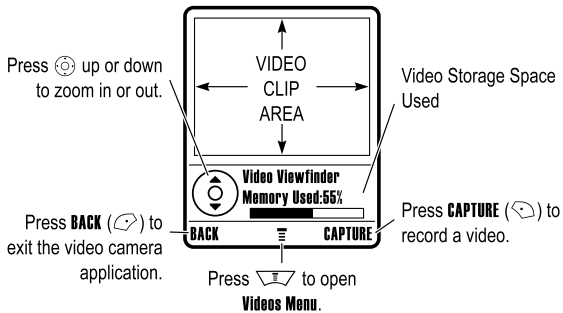 

 The video clip displays in the video clip playback screen.

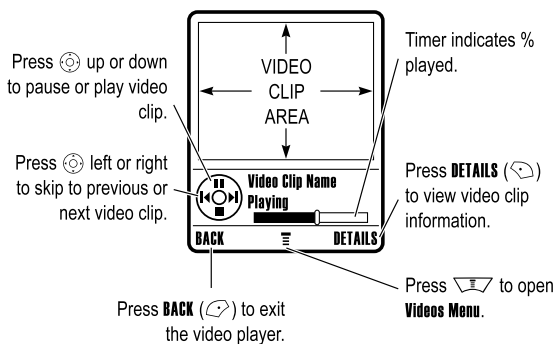

Adjusting Video Settings

Press to open the **Videos Menu** during video recording or playback. When recording the following options are available:

Option	Description
Go To Videos	View video clips stored on your phone.
Videos Setup	Open the setup menu to adjust video settings.
View Free Space	View memory space available for storing video clips.

Point the camera lens at the video subject, then:

Press	To
1 CAPTURE ()	begin video recording
2 STOP ()	stop video recording
3 STORE ()	view storage options If you choose to store the video, continue to step 4.
or	
DISCARD ()	delete the video and return to active viewfinder
4 ()	scroll to Send in Message or Store Only
5 SELECT ()	perform the storage option

Playing a Video Clip

To play a video clip stored on your phone:

Find the Feature > Multimedia > Videos > video clip

When in playback the following options are available:

Option	Description
New	Record a Video Clip.
Details	View video clip information.
Delete	Delete the selected video clip or all marked video clips.
Move	Move selected video clip or marked video clips to another device, and delete original video(s) from phone memory.
Copy	Copy selected video clip or marked video clips to another device, and leave copy of video(s) on phone.
Mark/Unmark or Mark All/Unmark All	Mark one or more video clips that you want to move, copy, send, or delete.
Assign To Category	Assign the video clip to a defined category.


Taking and Sending a Photo

To activate your phone's camera:

Find the Feature

> Multimedia > Camera

The active viewfinder image appears on your display.

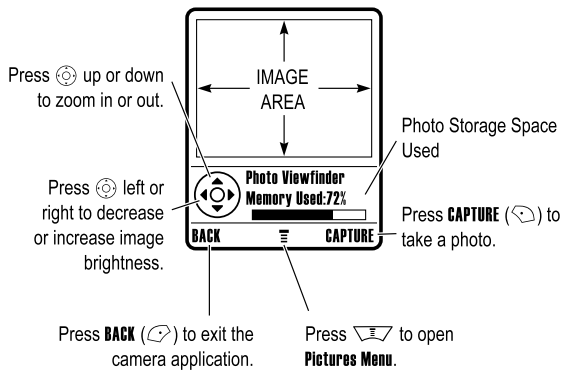 

Point the camera lens at the photo subject, then:

Press	To
1 CAPTURE ()	take a photo
2 STORE ()	view storage options If you choose to store the photo, continue to step 3.
or	
DISCARD ()	delete the photo and return to active viewfinder

Sending a Multimedia Message



A *Multimedia Messaging Service (MMS)* multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.

Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text.

Find the Feature

> Messages > New Message > New Multimedia Msg

Press	To
1 keypad keys	enter text on the page
2	open the MMS Menu
3	scroll to Insert
4 SELECT ()	display a list of items you can insert
5	scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info
6 SELECT ()	select the file type
7	highlight the file you want
8 SELECT ()	insert the file To add another page to the message, continue to step 9.
9	open the MMS Menu to insert a new page

Press	To
3	scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry
4 SELECT ()	perform the storage option

Using the Auto Timer

Activate the camera and then press > **Auto-Timed Capture**. Press left or right to set a 5 or 10 second timer delay, then press **START** () . Close the flip, and use the mirror to aim the camera lens. When you hear the camera click, open the flip to see your photo.

Adjusting Camera Settings







Press to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.

Press	To
10	scroll to Insert
11 SELECT ()	display a list of items you can insert
12	scroll to New Page
13 SELECT ()	insert a new page after the current page Repeat steps 1 to 8 to enter contents for the new page.


When you finish composing the multimedia message:

Press	To
1 OK ()	store the message
2	scroll to a Send To option: Highlight an existing phonebook entry. Or highlight (One Time Entry) to enter one or more phone numbers or email addresses. Or highlight (New Phonebook Entry) to enter a number/address and add it to the phonebook.
3 ADD ()	add a phonebook entry to the list of recipients Repeat steps 2 and 3 to add additional phonebook entries to the list.
or	
SELECT ()	select (One Time Entry) or (New Phonebook Entry)

Press	To
4 DONE (↵)	store the numbers/addresses
5 	scroll to Subject
	
6 CHANGE (↻)	select Subject
7 keypad keys	enter the subject
8 OK (↵)	store the subject
9 CHANGE (↻)	select Attachments to attach a file to the message, if desired
10 	scroll to Picture, Sounds, or Video
11 SELECT (↵)	select the file type
12 	highlight the file you want
13 SELECT (↵)	attach the file
14 BACK (⏪)	return to the message editor
15 	scroll to Receipt to request a receipt, if desired
16 CHANGE (↻)	select Receipt
17 ADD (➕) or REMOVE (➖)	activate/deactivate the delivery report
18 DONE (↵)	return to the message editor
19 SEND (➤)	send the message
or	
	view message details, save the message in the drafts folder, or cancel the message

Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the message indicator  and the **New Message** notification, and sounds an alert.

Press	To
READ (↵)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its page is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

Tip: In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file or video clip.


Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronise data.

Turning Bluetooth Power On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth power on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth power on:

Find the Feature  > **Settings** > **Connection**
> **Bluetooth Link** > **Setup** > **Power**
> **On**

This procedure turns Bluetooth power on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.

Tip: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.

Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:

Find the Feature  > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> **(Look For Devices)**


If Bluetooth power is turned off, your phone prompts you to **Temporarily Power On?** the Bluetooth power setting. Press **YES** (↵) to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth power on and leave it on.

Your phone scans for and displays a list of device(s) located within range of the phone.

Note: If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** (↵).

The device may request permission to bond with your phone. Select **YES** (↵) and enter the correct PIN code to create a secure

connection with the device. When the connection is made, the Bluetooth indicator  displays in the home screen.

Sending Objects to Another Device


You can use a Bluetooth wireless connection to send a picture, sound, video clip, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.

Sending a Picture, Sound, or Video Clip

Highlight the object on your phone that you want to send to the other device, then press  > **Copy**.

Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the object.

Sending a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to send to the other device, then press  > **Send**.

Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the item.

Using Ring Lights

Set up your phone to display a light pattern (in addition to or instead of a ring/vibrate alert) when you receive an incoming call. To select a light pattern:

Find the Feature  > **Settings** > **Ring Styles**
> **Ring Lights** > **light pattern**

The same light pattern displays for all incoming calls. You can use the light ID feature to display a distinctive light pattern when you

receive calls from phonebook entries in a specific category. To set a light ID for a phonebook category, see pag e86.

Setting Event Lights

When event lights are activated, your phone displays a light pattern to notify you of the following events: incoming calls from specific phonebook categories, incoming text and voicemail messages, alarms, power up, power down, battery charging, Bluetooth connect, Bluetooth activity, and Bluetooth disconnect.

To turn event lights on or off:

Find the Feature

 > Settings > Ring Styles
> Event Lights > On or Off

Changing Phone Covers



 
You can change the flip cover and battery cover on your phone to personalise its appearance. Matching front and back cover sets are available in a variety of colours and designs.

Your phone is designed to be used only with Motorola laOriginal™ accessories. See your Motorola retailer for these replaceable covers.

Removing a Flip Cover

Action

- 1 Close the phone flip.
- 2 Put your fingernails at the top corners of the flip cover, and pull down on both sides to slide the cover off the phone.

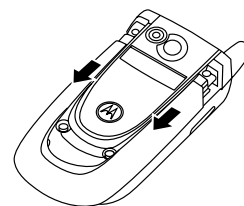


Notes:

- Do not use tools to remove the flip cover. Using tools to remove a flip cover will damage the cosmetic appearance of the phone.
- The flip cover is attached tightly to the phone, and considerable force is required to remove it.

Attaching a Flip Cover

Action

 - 1 Close the phone flip.
- 2 Line up the ridges on each side of the cover so that they align with the slots on the phone.

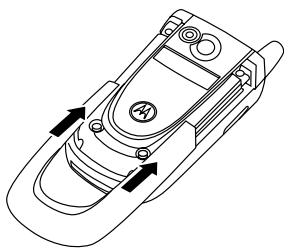


- 3 Slide the cover onto the phone until it snaps into place.

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

 The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

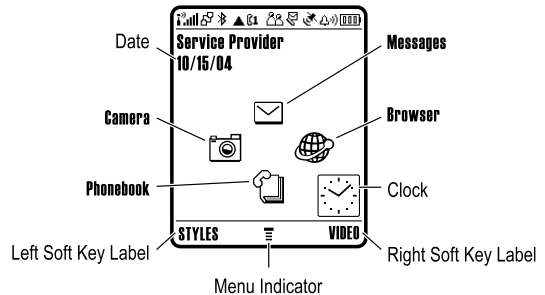

Press the 5-way navigation key (⬆️⬇️⬇️⬆️) up, down, left, or right to select one of the menu feature icons displayed in the home screen. If you select a menu feature by mistake, press (⬅️) to return to the home screen.

 
The menu indicator (☰) shows that you can press the menu key (⏏️) to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⏏️) or right soft key (⏏️) to perform the indicated function.

Notes:

- Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 88.
- Your phone can display an analogue or digital clock in the home screen (see page 88).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a specified time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 70.
- To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a specified time. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 70.

The following status indicators can display:

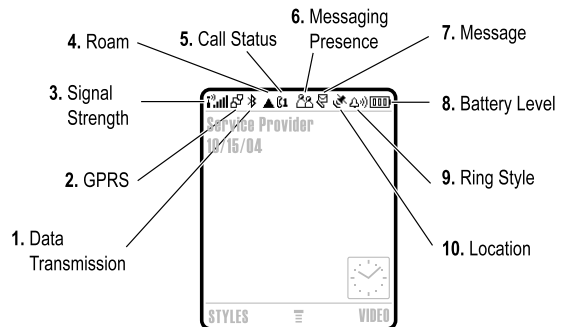

1. Data Transmission Indicator – Shows connection and data transmission status. The Bluetooth® wireless connection indicator (📶) shows when a Bluetooth connection is active. Other indicators can include:

- | | |
|---|-------------------------------------|
| 🔒 = secure packet data transfer | 📶 = insecure packet data transfer |
| 🔒 = secure application connection | 📶 = insecure application connection |
| 📞 = secure Circuit Switch Data (CSD) call | 📞 = insecure CSD call |



2. GPRS Indicator – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other indicators can include:

- = GPRS PDP context active
- = GPRS packet data available

3. Signal Strength Indicator – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator or not transmit indicator is displayed.



4. Roam Indicator – The roam indicator shows when your phone is seeking or using another network outside your home network. Other indicators can include:

- = 2.5G home
- = 2.5G roam
- = 2G home
- = 2G roam



5. Call Status Indicator – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:

- = phone in call
- = call divert on
- = line 1 active
- = line 2 active
- = line 1 active, call divert on
- = line 2 active, call divert on



6. Messaging Presence Indicator – Shows when instant messaging is active. Indicators can include:

- = IM active
- = available for IM
- = busy
- = invisible to IM
- = available for phone calls
- = offline

When a Java™ application is active, the Java midlet indicator displays in this location.



7. Message Indicator – Displays when you receive a new message. Indicators can include:

- = text message
- = voicemail message
- = voicemail and text message
- = IM message
- = active chat session

8. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

9. Ring Style Indicator – Shows the ring style setting.

- = loud ring
- = soft ring
- = vibrate
- = vibrate and ring
- = silent

 


10. Location Indicator – Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

- = location on
- = location off


Using the 5-Way Navigation Key

Press the 5-way navigation key up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the *centre select* key in the centre of the 5-way navigation key to select a highlighted menu item. The centre select key usually performs the same function as the right soft key .

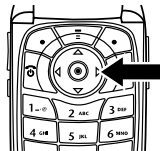

Using Menus

 From the home screen, press to enter the main menu.

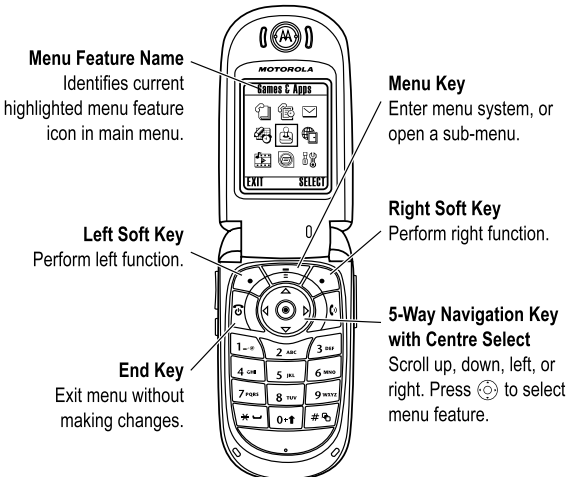


Press to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** () or to select the highlighted menu feature.

The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access
	Multimedia		IM
	Settings		

Selecting a Feature Option

 Some features require you to select an option from a list:

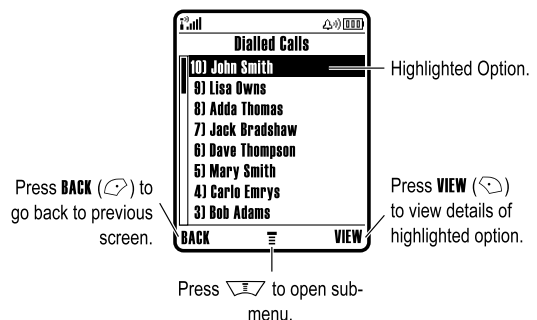

- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information.

Highlighted option. Press to scroll to other options.

Scroll down to bottom of list to view more options.

Press **CHANGE** () to set or edit highlighted option.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

The message centre lets you compose text messages.

For indicator descriptions, see following section.

Press to open sub-menu.

Flashing cursor indicates insertion point.

Press **INSERT** () to insert a quick note, picture, or sound.

Press **CANCEL** () to exit without making changes.

Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press in any text entry screen to select one of the following entry modes:

Primary	The primary text entry mode (see below to set).
Numeric	Enter numbers only (see pag e55).
Symbol	Enter symbols only (see page55).
Secondary	The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing > **Entry Mode**.

Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes when you enter data or compose a message.

Press > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP	iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter individual letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting if you prefer not to set a secondary text entry mode (only available for Secondary Setup).

Using Capitalisation

Press in a text entry screen to change text case. Indicators at the top of the display show the capitalisation setting:

abc = no capital letters	Abc = capitalise next letter only
ABC = all capital letters	

Text Entry Mode Indicators

In **Primary** or **Secondary** text entry mode, indicators at the top of the display show the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only
1↑↑	2↑↑	Tap, all capital letters

		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric mode	@ = symbol mode
---------------------------	------------------------

Using iTAP® Mode

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, to enter "the," you would press . The iTAP software recognises that the most common word formed by this keypress combination is "the," and predicts that "the" is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.


If necessary, press in a text entry screen to switch to **iTAP** mode. An indicator tells you which mode is active (see page48). If **iTAP** mode is not set as the **Primary** or **Secondary** entry mode, see page 48.

Entering Words in iTAP Mode

Press	To
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display

Press	To
2	highlight the combination you want
3	accept the predicted word completion, followed by a space
or 	enter the highlighted combination, followed by a space
or SELECT (select the highlighted combination, with no space
	You can press keypad keys to add more letters at the end of the combination.

 For example, if you press , your phone displays:

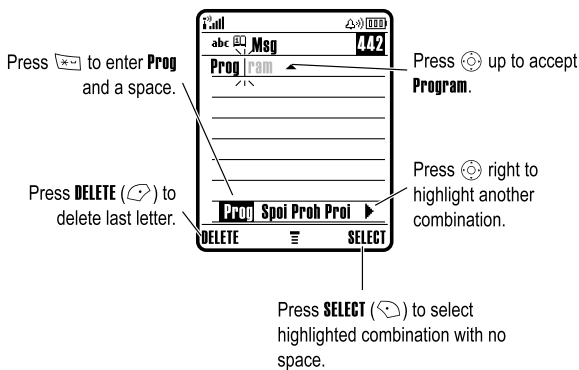

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognise. If your word is not shown as a letter combination choice at the bottom of the display:

Action

- 1 Press **DELETE** () one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.
- 2 Press left or right to highlight the letter combination.
- 3 Press **SELECT** () to select the letter combination.
- 4 Continue to enter letters and select letter combinations to spell the word.

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

Entering Numbers and Punctuation in iTAP Mode

To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to iTAP mode.

Press to enter punctuation or other characters as shown in the "Character Chart" on page 54.

Using Tap Mode

This is the basic text entry mode on your phone.

Tap mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the "Character Chart" on page e54.

If necessary, press in a text entry screen to switch to **Tap** mode. An indicator shows which mode is active (see page 48). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 48.

Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters. For example, you would press one time to enter "a," two times to enter "b," three times to enter "c," or four times to enter "2."
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
- The first character of every sentence is capitalised. If necessary, press down to change the character to lowercase before the cursor moves to the next position.
- Press to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press to exit without saving.


Entering Words in Tap Mode

Press	To
1 a keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	Tip: Press right to accept a word completion, or to insert a space.

Press	To
3 OK (store the text

In a text entry screen, you can press to switch entry modes. An indicator shows which mode is active (see page e48). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 48.

 For example, if you press one time, your phone displays:

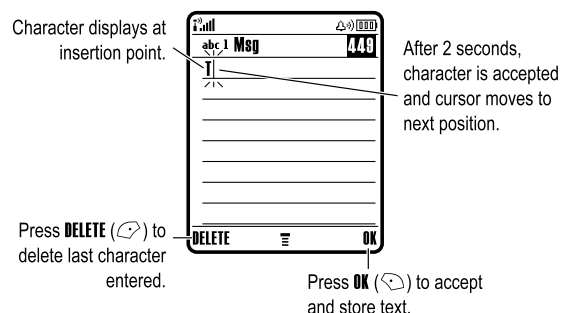

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter "prog" your phone might display:



Character Chart

Use this chart as a guide for entering characters with **Tap Extended** mode.

	. 1 ? ! , @ _ & ~ : ; " - () ' ÿ ÿ % £ \$ ¥ ¤ € x * / \ [] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ε έ è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ò ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ
	change text case, for capital letters

Symbol Chart

Use this chart as a guide for entering characters with symbol mode.

	. ? ! , @ _ & ~ : ; " - () ' ÿ ÿ % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	() [] { }
	ÿ ÿ ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor, first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press DELETE () to delete one letter at a time.
Hold DELETE () to delete the entire message.

	enter a space (hold to enter a return)
	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor, first shows common characters for that editor.

Using Numeric Mode

In a text entry screen, press to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press to switch to another entry mode.


Using Symbol Mode

In a text entry screen, press to switch entry modes until the symbol indicator **@** displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2 or	highlight the combination you want
3 SELECT ()	select the highlighted combination
You can press keypad keys to add more symbols to the end of the combination.	
or	
	enter the highlighted combination

Using the Smart Key

 The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .

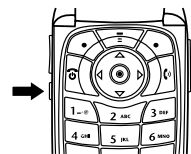

Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style

Press	To
1 volume keys	scroll to Style
2 smart key	select a ring style
3 volume keys	return to the home screen

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.



Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

Action

- 1 Press the smart key to display the received calls list.
or
Press the volume keys to dismiss the **Missed Calls** message.

- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.

- 3 If a headset is connected to your phone, press and hold the smart key to call the number.
or
Press the smart key to exit without calling.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (🔊) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or end the call.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Press	To
1 keypad keys	enter your unlock code
2 OK (👉)	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (👉)	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature  > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 OK (👉)	activate automatic lock

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature  > **Settings** > **Security** > **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 77).

Locking Your Phone Manually

Find the Feature  > **Settings** > **Security** > **Phone Lock** > **Lock Now**

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK (👉)	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page e85.

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (📌) to create a phonebook entry with that number. Press **DONE** (👉) to store the number by itself, or fill in the other fields as necessary to complete the entry.


 
If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (🗣️). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

Note: This option is not available for entries stored on the SIM card.

Dialling a Number



Press  > Phonebook, highlight the phonebook entry, press  to call.

Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.

 
Voice Dialling a Number

Press and release the voice key, and say the entry's name (within 2 seconds).

Sorting Phonebook Entries

Press  > Phonebook, press  > Setup > Sort by, then select whether you want to sort the phonebook list by Name, Speed No., Voice Name, or Email.

When sorting by name, you can view All numbers or just the Primary number for each name. To set the primary number for a name, see page 86.



Tip: In Primary number view mode, highlight a name and press  left or right to view other numbers associated with the name.

Setting a Picture ID for a Phonebook Entry

 

Press  > Phonebook > entry, press  > Edit > Picture > picture name.

Also see pages 3 and 28

Setting Picture ID View

Press  > Phonebook, press  > Setup > View by > Picture.

Viewing Entries By Category

Press  > Phonebook, press  > Categories, then select whether you want to view All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you created.

To set the category for a phonebook entry, see page 86 .

Setting Up Your Phone

Setting a Ring Style

You can set the following ring styles on your phone:

- Loud
- Soft
- Vibrate
- Vibe & Ring
- Silent

Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The **Silent** setting silences your phone until you set another ring style.


To set a ring style:

Find the Feature  > **Settings** > **Ring Styles** > **Style** > *style name*






The ring style indicator shows the current ring style setting (see page 43).

Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

Find the Feature  > **Settings** > **Ring Styles** > **Style Detail**

Note: *Style* represents the current ring style. You cannot set an alert for the **Silent** ring style setting.

	Press	To
1		scroll to Calls (scroll to Line 1 or Line 2 for dual-line phones)
2	CHANGE 	select the event
3		scroll to the alert you want
4	SELECT 	select the alert
5	BACK 	save the alert setting

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalise the ring style.

Setting the Time and Date






 

 

You must set the time and date to use the datebook.

Find the Feature  > **Settings** > **Initial Setup** > **Time and Date**

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature  > **Settings** > **Personalise** > **Wallpaper**






 

 
 
	Press	To
1		scroll to Picture
2	CHANGE 	open the picture viewer
3	 up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4	SELECT 	select the image
5		scroll to Layout
6	CHANGE 	adjust the image layout
7		scroll to Centre , Tile , or Fit-to-screen Centre places the image in the centre of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8	SELECT 	confirm the layout setting
9	BACK 	save wallpaper settings

Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a specified time. If necessary, the image shrinks to fill the display. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature  > **Settings** > **Personalise** > **Screen Saver**

	Press	To
1		scroll to Picture
2	CHANGE 	open the picture viewer
3	 up or down	scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4	SELECT 	select the image
5		scroll to Delay
6	CHANGE 	set the delay interval
7		scroll to the inactivity interval that triggers the screen saver
8	SELECT 	confirm the delay setting
9	BACK 	save screen saver settings

Changing Phone Skin

Change the look and feel of your phone's user interface by selecting a different skin setting.

Find the Feature

 > **Settings** > **Personalise** > **Skin**
> *skin*

Your phone displays the new skin.

Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.

Downloading a Theme

To download a theme from a Web page with the micro-browser, see page 99. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**

Selecting a Theme

You can apply any of the themes installed on your phone.

Note: *If one of a theme's components is not available, then a default setting is applied.*

Find the Feature

 > **Multimedia** > **Themes** > *theme*




Deleting a Theme



You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed:

Find the Feature

 > **Multimedia** > **Themes** > *theme*

Press	To
1 	open the Theme menu
2 	scroll to Delete or Delete All
3 SELECT ()	select the option

Setting Answer Options





You can use additional, alternative methods to answer an incoming call.

Multi-Key	answer by pressing any key
Open to Answer	answer by opening the flip

To activate or deactivate an answer option:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Answer Options**

Press	To
1 	scroll to Multi-Key or Open to Answer
2 CHANGE ()	select the option
3 	scroll to On or Off
4 SELECT ()	confirm the setting

Setting Display Brightness

Find the Feature

 > **Settings** > **Initial Setup**
> **Brightness**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature

 > **Settings** > **Initial Setup**
> **Backlight**

Note: *Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a specified time. The backlight turns back on when you open the flip or press any key.*

Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a specified time.

Find the Feature

 > **Settings** > **Initial Setup**
> **Display Timeout**

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

Note: *The display turns back on when you open the flip or press any key.*



Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.

Calling Features

For basic instructions on how to make and answer calls, see page 22.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Action

- 1 Press the volume keys to turn off the alert.
- 2 Open the flip (or press the button on a handsfree headset) to answer the call.

Viewing Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to view the dialled calls list.


 
 

Find the Feature

 > Recent Calls

Press


To


- 1  scroll to **Received Calls** or **Dialled Calls**
- 2 **SELECT** () select the list

Press	To
3 	scroll to an entry <i>Note:</i> ✓ means the call connected.
4 	call the entry's number
or	
VIEW ()	view entry details (such as time and date of call)
or	
	open the Last Calls Menu to perform other procedures

The **Last Calls Menu** can include the following options:




Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

Option	Description
Send Tones	Send the number to the network as DTMF tones. <i>Note:</i> This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 94). 

- the missed call indicator 
- **X Missed Calls**, where X is the number of missed calls

   Press




To

- 1 **VIEW** () display the received calls list
- 2  select a call to return
- 3  make the call

Redialling a Phone Number

Press

 To

- 1  view the dialled calls list
- 2  scroll to the entry you want to call
- 3  redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

Press

To

- 1  or **RETRY** () redial the number

When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

Using the Notepad


 

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

Find the Feature

 > Recent Calls > Notepad

Press

To

- 1  call the number
- or
- 2 **STORE** () create a phonebook entry with the number in the **No.** field
- or
- 3  open the **Dialling Menu** to attach a number or insert a special character

Putting a Call On Hold or Mute

Press	To
> Hold	put all active calls on hold
or	
> Mute	mute all active calls

Using Call Waiting

When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
> End Call On Hold	end the call on hold

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature > Settings > In-Call Setup > Call Waiting

Using Caller ID (Incoming Calls)

Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see pag e85.

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

Press	To
1 keypad keys	dial the emergency number
2	call the emergency number

Dialling International Numbers

If your phone service includes international dialling, press and hold to insert the local international access code (+) for the country from which you are calling. (Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.

Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

Find the Feature > Settings > Initial Setup > 1-Touch Dial

Press	To
1	scroll to the location you want
2 SELECT ()	select the location

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: *Your service provider may include additional information about using this feature.*

Listening to Voicemail Messages

Find the Feature > Messages > VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the voicemail message indicator and the **New VoiceMail** notification.

Press	To
CALL ()	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature > Messages > VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
2 OK ()	store the number

Note: *You cannot store a (pause), (wait), or (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more information about these characters, see the More Here guide.*

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: *This feature is available only for dual-line-enabled SIM cards.*

Find the Feature



 
> **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 42).

 
Phone Features

Main Menu

This is the standard main menu layout. **Menu organisation and feature names may vary on your phone.** Not all features may be available on your phone.

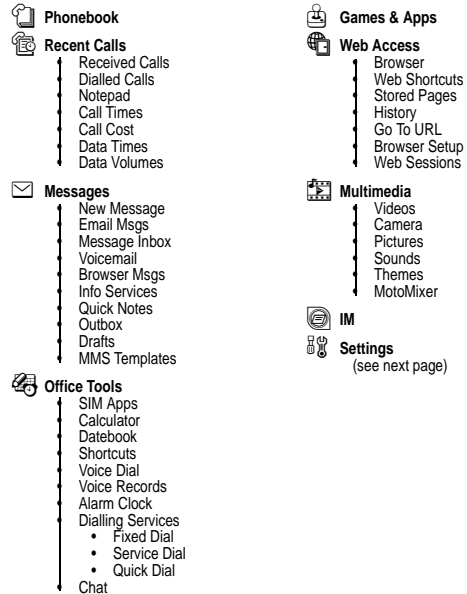



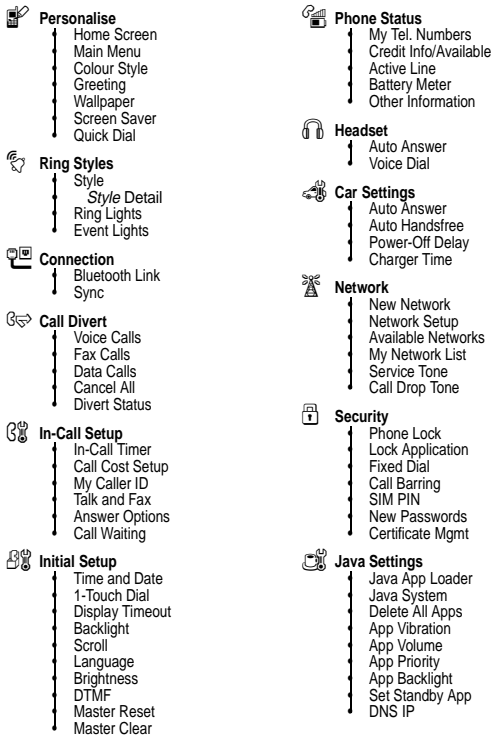




Settings Menu







Feature Quick Reference

This section helps you locate and use additional phone features that are not described in this guide.









 



 
Calling Features

Feature	Description	
Conference Call	During a call: Dial next number, press [*] , press LINK ().	
Transfer a Call	During a call: [*] > Transfer , dial transfer number, press [*] .	
Caller ID (Outgoing)	Hide or show your caller ID phone number for the next outgoing call: [*] > Settings > In-Call Setup > My Caller ID . > Next Call Only > Hide ID or Show ID	
Attach a Phone Number	Dial an area code or prefix for a phonebook number, then: [*] > Attach Number	
Speed Dial	Speed dial and call a phonebook entry: Enter speed dial number, press [*#] , press [*] .	
Call Diverting	Set up or cancel call diverting: [*] > Settings > Call Divert	




 




Feature	Description
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 




 









Feature	Description
Store Message Objects	Go to a multimedia message page, or highlight an object in a letter, then:  > Store 





 

Messages

Feature	Description
Send Text Message	Send a text message:  > Messages > New Message > New Short Message 
Send Multimedia Message	Send a multimedia message:  > Messages > New Message > New Multimedia Msg 
Send Letter	Send a multimedia letter:  > Messages > New Message > New Letter 
Use MMS Template	Open an MMS template with preloaded media:  > Messages > MMS Templates 
Read New Message	Read a new text or multimedia message that you have received: Press READ () when the New Message notification is displayed. 
Received Messages	Read received messages:  > Messages > Message Inbox  Tip: Press  to perform various operations on the message.





Phonebook






 

Feature	Description
Add New Entry	Add a new entry to the phonebook:  > Phonebook  > New > Phone Number or Email Address
Dial Number	Call a number stored in the phonebook:  > Phonebook, highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > entry  > Edit > Ringer ID > ringer name Note: The Ringer ID option is not available for entries stored on the SIM card.
Set Picture ID for Entry	Assign a photo or picture to a phonebook entry:  > Phonebook > entry  > Edit > Picture > picture name Note: The Picture option is not available for entries stored on the SIM card.

Feature	Description
Set Picture ID View	View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > view name
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > entry  > Edit > Category > category name Note: The Category option is not available for entries stored on the SIM card.
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > category view
Set Category Light ID	Set a distinctive light pattern to be displayed when you receive calls from phonebook entries in a specific category:  > Phonebook  > Categories, scroll to category, press  > Edit > Light ID. Note: The Light ID option is not available for entries stored on the SIM card.
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook, highlight the entry, press  > Set Primary > phone number.



Feature	Description
Copy Phonebook Entry	Copy a phonebook entry between the phone and SIM card:  > Phonebook, highlight the entry, press  > Copy > Entries > To
Send Phonebook Entry to Another Device	Send a phonebook entry to another phone, computer, or device:  > Phonebook, highlight the entry, press  > Send
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List







Personalising Features

Feature	Description
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > Style Detail > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > Style Detail > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > Style Detail > Key Volume
Reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > Style Detail > Reminders




 
 

Feature	Description
Clock View	Display an analogue clock or digital time readout in the home screen:  > Settings > Personalise > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalise > Home Screen > Home Keys > Icons
Change Menu Icons & Home Keys	Change menu feature icons, soft key labels, and smart key access in the home screen:  > Settings > Personalise > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i>



Instant Messaging

Feature	Description
Log In	Log in to instant messaging:  > IM > Log In 





Feature	Description
Find Others Online	After you sign on: Select Contact List to see a list of other users. 
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM ().
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW ().
End Conversation	From the conversation display:  > End Conversation 
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu. 

Chat



Feature	Description
Start Chat	Start a new chat session:  > Chat  > New Chat 
Receive Chat Request	When you receive a chat request: Press ACCEPT () or IGNORE (). 


Feature	Description
End Chat	During a chat session:  > End Chat 

 Email








Feature	Description
Send Email Message	Send an email message:  > Messages > New Message > New Email 
Read Email Message	Read a new email message that you have received: Press READ (). 

Menu Features

Feature	Description
Language	Set the display and menu language:  > Settings > Initial Setup > Language
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset

 Feature	Description
Master Clear	Clear all of your settings and entries except SIM card information, erase all downloaded pictures and sound files, reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Clear Caution: Master clear erases all of your entered information (including phonebook and datebook entries) and all of your downloaded content (including photos and sounds) stored in phone memory. After you erase the information, you cannot recover it.

 Special Dialling Features

Feature	Description
Fixed Dial	Turn fixed dialling on or off:  > Settings > Security > Fixed Dial  Use the fixed dial list:  > Office Tools > Dialling Services > Fixed Dial
Service Dial	Dial service phone numbers stored on your SIM card:  > Office Tools > Dialling Services > Service Dial 
Quick Dial	Dial preprogrammed phone numbers:  > Office Tools > Dialling Services > Quick Dial 

Feature	Description
DTMF Tones	Activate DTMF tones: > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press > Send Tones .

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description
Call Times	View call timers: > Recent Calls > Call Times
In-Call Timer	Display time or cost information during a call: > Settings > In-Call Setup > In-Call Timer

Feature	Description
Call Cost	View call cost trackers: > Recent Calls > Call Cost

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speakerphone	Activate a connected external speakerphone during a call: Press SPEAKER () (if available) or > Spkrphone On .
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key: > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected: > Settings > Car Settings > Auto Handsfree
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off: > Settings > Car Settings > Power-Off Delay

Feature	Description
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off: > Settings > Car Settings > Charger Time

Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.
Talk Then Fax	Connect your phone to the device, enter the number, press > Dialling Menu > Talk Then Fax , then press to make the call.

Bluetooth® Wireless Connections

Feature	Description
Make Phone Visible to Other Device	Allow a Bluetooth device to discover your phone: > Settings > Connection > Bluetooth Link > Setup > Find Me

Feature	Description
Connect to Recognised Device	Connect to a recognised handsfree device: > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i>
Disconnect From Device	Disconnect from a device: Highlight the device name and press DROP ().
Switch to Device During Call	Switch to a headset or car kit during a call: > Use Bluetooth
Send Multimedia Object to Device	Send a multimedia object to another device: Highlight the object, press > Copy , select the device name.
Move Multimedia Object to Device	Move a multimedia object to another device: Highlight the object, press > Move , select the device name. Caution: Moving an object deletes the original object from your phone.
Send Data to Another Device	Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press > Send .

Feature	Description
Edit Device Properties	Edit the properties of a recognised device: Highlight the device name and press > Edit .
Set Bluetooth Options	Set your phone's Bluetooth options: > Settings > Connection > Bluetooth Link > Setup

Network Features

Feature	Description
Network Settings	View network information and adjust network settings: > Settings > Network

Personal Organiser Features

Feature	Description
Set Alarm	Set an alarm: > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or Set 8-minute delay: Press SNOOZE ()
Add New Datebook Event	Add a new event to the datebook: > Office Tools > Datebook , highlight the day, press , press > New

Feature	Description
View Datebook Event	View or edit event details: > Office Tools > Datebook , highlight the day, press , press VIEW ()
Event Reminder	View an event reminder: VIEW () Dismiss an event reminder: EXIT ()
Copy Datebook Event to Another Device	Send a datebook event to another phone, computer, or device: > Office Tools > Datebook , highlight the day, press , highlight the event, press > Send
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key. <i>Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.</i>
Play Voice Record	Play back a voice record: > Office Tools > Voice Records > <i>voice record</i>
Calculator	Calculate numbers: > Office Tools > Calculator
Currency Converter	Convert currency: > Office Tools > Calculator > Exchange Rate Enter exchange rate, press OK (), enter amount, press > Convert Currency .



Security

Feature	Description
SIM PIN	Lock or unlock the SIM card: > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications: > Settings > Security > Lock Application
Certificate Management	Enable or disable security certificates stored on your phone: > Settings > Security > Certificate Mgmt

News and Entertainment

Feature	Description
Manage Video Clips	Manage video clips: > Multimedia > Videos
Manage Pictures	Manage photos, pictures, and animations: > Multimedia > Pictures
Manage Sounds	Manage ring tones and music that you have downloaded or composed: > Multimedia > Sounds
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone: > Multimedia > MotoMixer > [New Mix] or <i>mix file name</i>

Feature	Description
Start Micro-Browser	Start a micro-browser session: > Web Access > Browser
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT (), press STORE ()
Web Sessions	Select or create a Web session: > Web Access > Web Sessions
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser: > Web Access > Browser , highlight the application, press SELECT (), press DOWNLOAD ()
Download Game or Application (Computer)	Download a Java game or application from a computer: Press > Settings > Java Settings > Java App Loader , connect your phone to the computer when prompted.
Start Game or Application	Start a Java game or application: > Games & Apps , highlight the application, press SELECT ()
Play Music	Play a song on your phone: > Multimedia > Sounds > <i>song name</i>

Feature	Description
Create Playlist	Create a playlist of songs to play on your phone:  > Multimedia > Sounds > [New Playlist]
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]

Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.65 W/kg.³

Specific Absorption Rate Data - 101

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.

2 CENELEC is a European Union standards body.

3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

call waiting 76
caller ID 3, 29, 62, 73, 77, 83, 85
camera 2, 3, 24, 28, 39
car kit 93
centre select key 44
certificate management 98
character chart 54
chat 89
clock 39, 65, 88
codes 59, 60
conference call 83
CSD indicator 41
cursor 47

D

data call 94
data transmission indicator 41
date, setting 65
datebook 96, 97
dialled calls 72
dialling a phone number 22, 62, 91
display
 backlight 70
 brightness 70
 language 90
 personalising 88
 skin 68
 timeout 70

 using 39
diverting calls 83
downloading media objects 85, 99
drafts folder 32
DTMF tones 74, 92

E

earpiece volume 22
email 90
email address, storing 85
emergency number 77
end key 22, 23
ending a call 22, 23
Enter Unlock Code message 60, 61
event lights 3, 36
external display 57

F

fax call 74, 94
fixed dial 91
flip 23, 36, 69

G

games 99
GPRS indicator 42
group mailing list 87

A

accessories 16, 36, 58, 93, 94
active line indicator 42
active line, changing 80
alarm clock 96
alert
 creating 100
 defined 64
 reminder 87
 setting 22, 57, 64, 65
 turning off 22, 72
animation 30, 66, 67, 98
answering a call 23, 69
attach number 73, 83

B

backlight 70
barring calls 84
battery 19, 20
battery level indicator 43
battery life, extending 17, 34, 40, 67, 70
Bluetooth connection indicator 41
Bluetooth wireless connection 3, 33, 87, 94, 97

H

handsfree speaker 58
handsfree use 93
headset 58, 93
Hide ID feature 73
hold call 76
home keys 88
home screen 39

I

IM 88
IM indicators 42
in-call indicator 42
Incoming Call message 77
indicators
 active line 42
 battery level 43
 Bluetooth 41
 call divert 42
 CSD 41
 data transmission 41
 GPRS 42
 IM 42
 in-call 42
 Java 43
 location 43
 menu 39
 message 33, 43
 missed call 75
 ring style 43

brightness 70
browser. *See* micro-browser

C

calculator 97
call
 alert, turning off 22, 72
 answering 23, 69
 barring 84
 costs 93
 dialling 22, 62
 diverting 83
 emergency number 77
 ending 22, 23
 hold 76
 international dialling 77
 making 22, 62
 mute 76
 receiving 23
 returning 57, 74
 talk then fax 74
 timers 92
 transferring 83
call barring password 59
call divert indicator 42
Call Failed, Number Busy message 74

 roam 42
 signal strength 42
 text 48
 voicemail message 43, 79
instant messaging. *See* IM
international access code 77
iTAP text entry mode 49

J

Java applications 99
Java indicator 43

K

key
 centre select 44
 end 22, 23
 left soft key 39, 88
 menu 15
 navigation 44
 power 21
 right soft key 39, 88
 send 22, 23, 72
 smart key 57, 58, 88
 voice 61
 volume control 22
keypad 69, 87

L

language 90
left soft key 39, 88

light ID 77, 86
line, changing 80
location indicator 43
lock
 application 98
 phone 59
 SIM card 98
Low Battery message 43

M

making a call 22, 62
master clear 91
master reset 90
menu
 entering text 46
 language 90
 navigating 44
 personalising 88
 selecting feature 45
menu icons 39, 88
menu indicator 39
menu key 15
message 39, 84, 87
message indicator 33, 43
micro-browser 39, 99
missed call 57, 74
missed call indicator 75
Missed Calls message 57, 75
MMS, defined 30
MotoMixer 98

106 - Index

multimedia letter 84
multimedia message 3, 30, 33,
 84
music 98, 99, 100
mute call 76
my telephone number 23, 71

N

navigation key 44
network settings 96
notepad 75
number. *See* phone number
numeric entry mode 55

O

object exchange 35
1-touch dial 78
open to answer 69
optional accessory 16
optional feature 16

P

passwords. *See* codes
phone
 illustration 1
 turning on/off 21
 unlocking 21, 59, 60
phone covers 36
phone number
 active line, changing 80

redialling 74
 storing in phonebook 85
 storing your number 71
 viewing your number 23
phone theme 68
phonebook 39, 61, 73, 78, 83,
 85
photo 3, 28, 30, 62, 66, 67, 85,
 98
picture 30, 66, 67, 98
picture ID 3, 29, 62, 77, 85
PIN code 21, 59, 98
PIN2 code 59
playlist 100
power key 21
predictive text entry 49

Q

quick dial 91

R

received calls 72
recent calls 72, 73
redial 74
reminders 87
right soft key 39, 88
ring lights 3, 35
ring style indicators 43
ring style, setting 22, 57, 64
ring tone 98, 99, 100

ringer ID 77, 85, 87
ringer volume 22, 87
roam indicator 42

S

screen saver 67
security code 59, 60
send key 22, 23, 72
service dial 91
shortcuts 88
Show ID feature 73
signal strength indicator 42
SIM Blocked message 21, 98
SIM card
 defined 16
 installing 16
 locking 98
 PIN code 21, 59, 98
 PIN2 code 59
 precautions 16
 service dial 91
skin 68
smart key 57, 58, 88
soft keys 39, 88
song 98, 99, 100
sound 30, 98, 99, 100
Speaker On message 58
speakerphone 93
speed dial 83
symbol chart 56

Index - 107

symbol entry mode 55

T

talk then fax call 74
tap text entry mode 51
telephone number. *See* phone
 number
text entry 46
text indicators 48
theme 68
time, setting 65
timers 92
transfer a call 83
travel charger 20
turning on/off 21

U

unanswered call 57, 74
unlock
 application 98
 phone 59
unlock code 21, 59, 60

V

video clip 2, 24, 30, 98
voice dial 62, 85, 93
voice key 61
voice record 30, 97
voicemail 78

voicemail message indicator
 43, 79
volume
 earpiece 22
 keypad 87
 ringer 22, 87
volume keys 22

W

wallpaper 66
Web pages 99
Web sessions 99

6803542C08

108 - Index