


**Tri Band V.66i (Sapphire) 8486615K04 C**

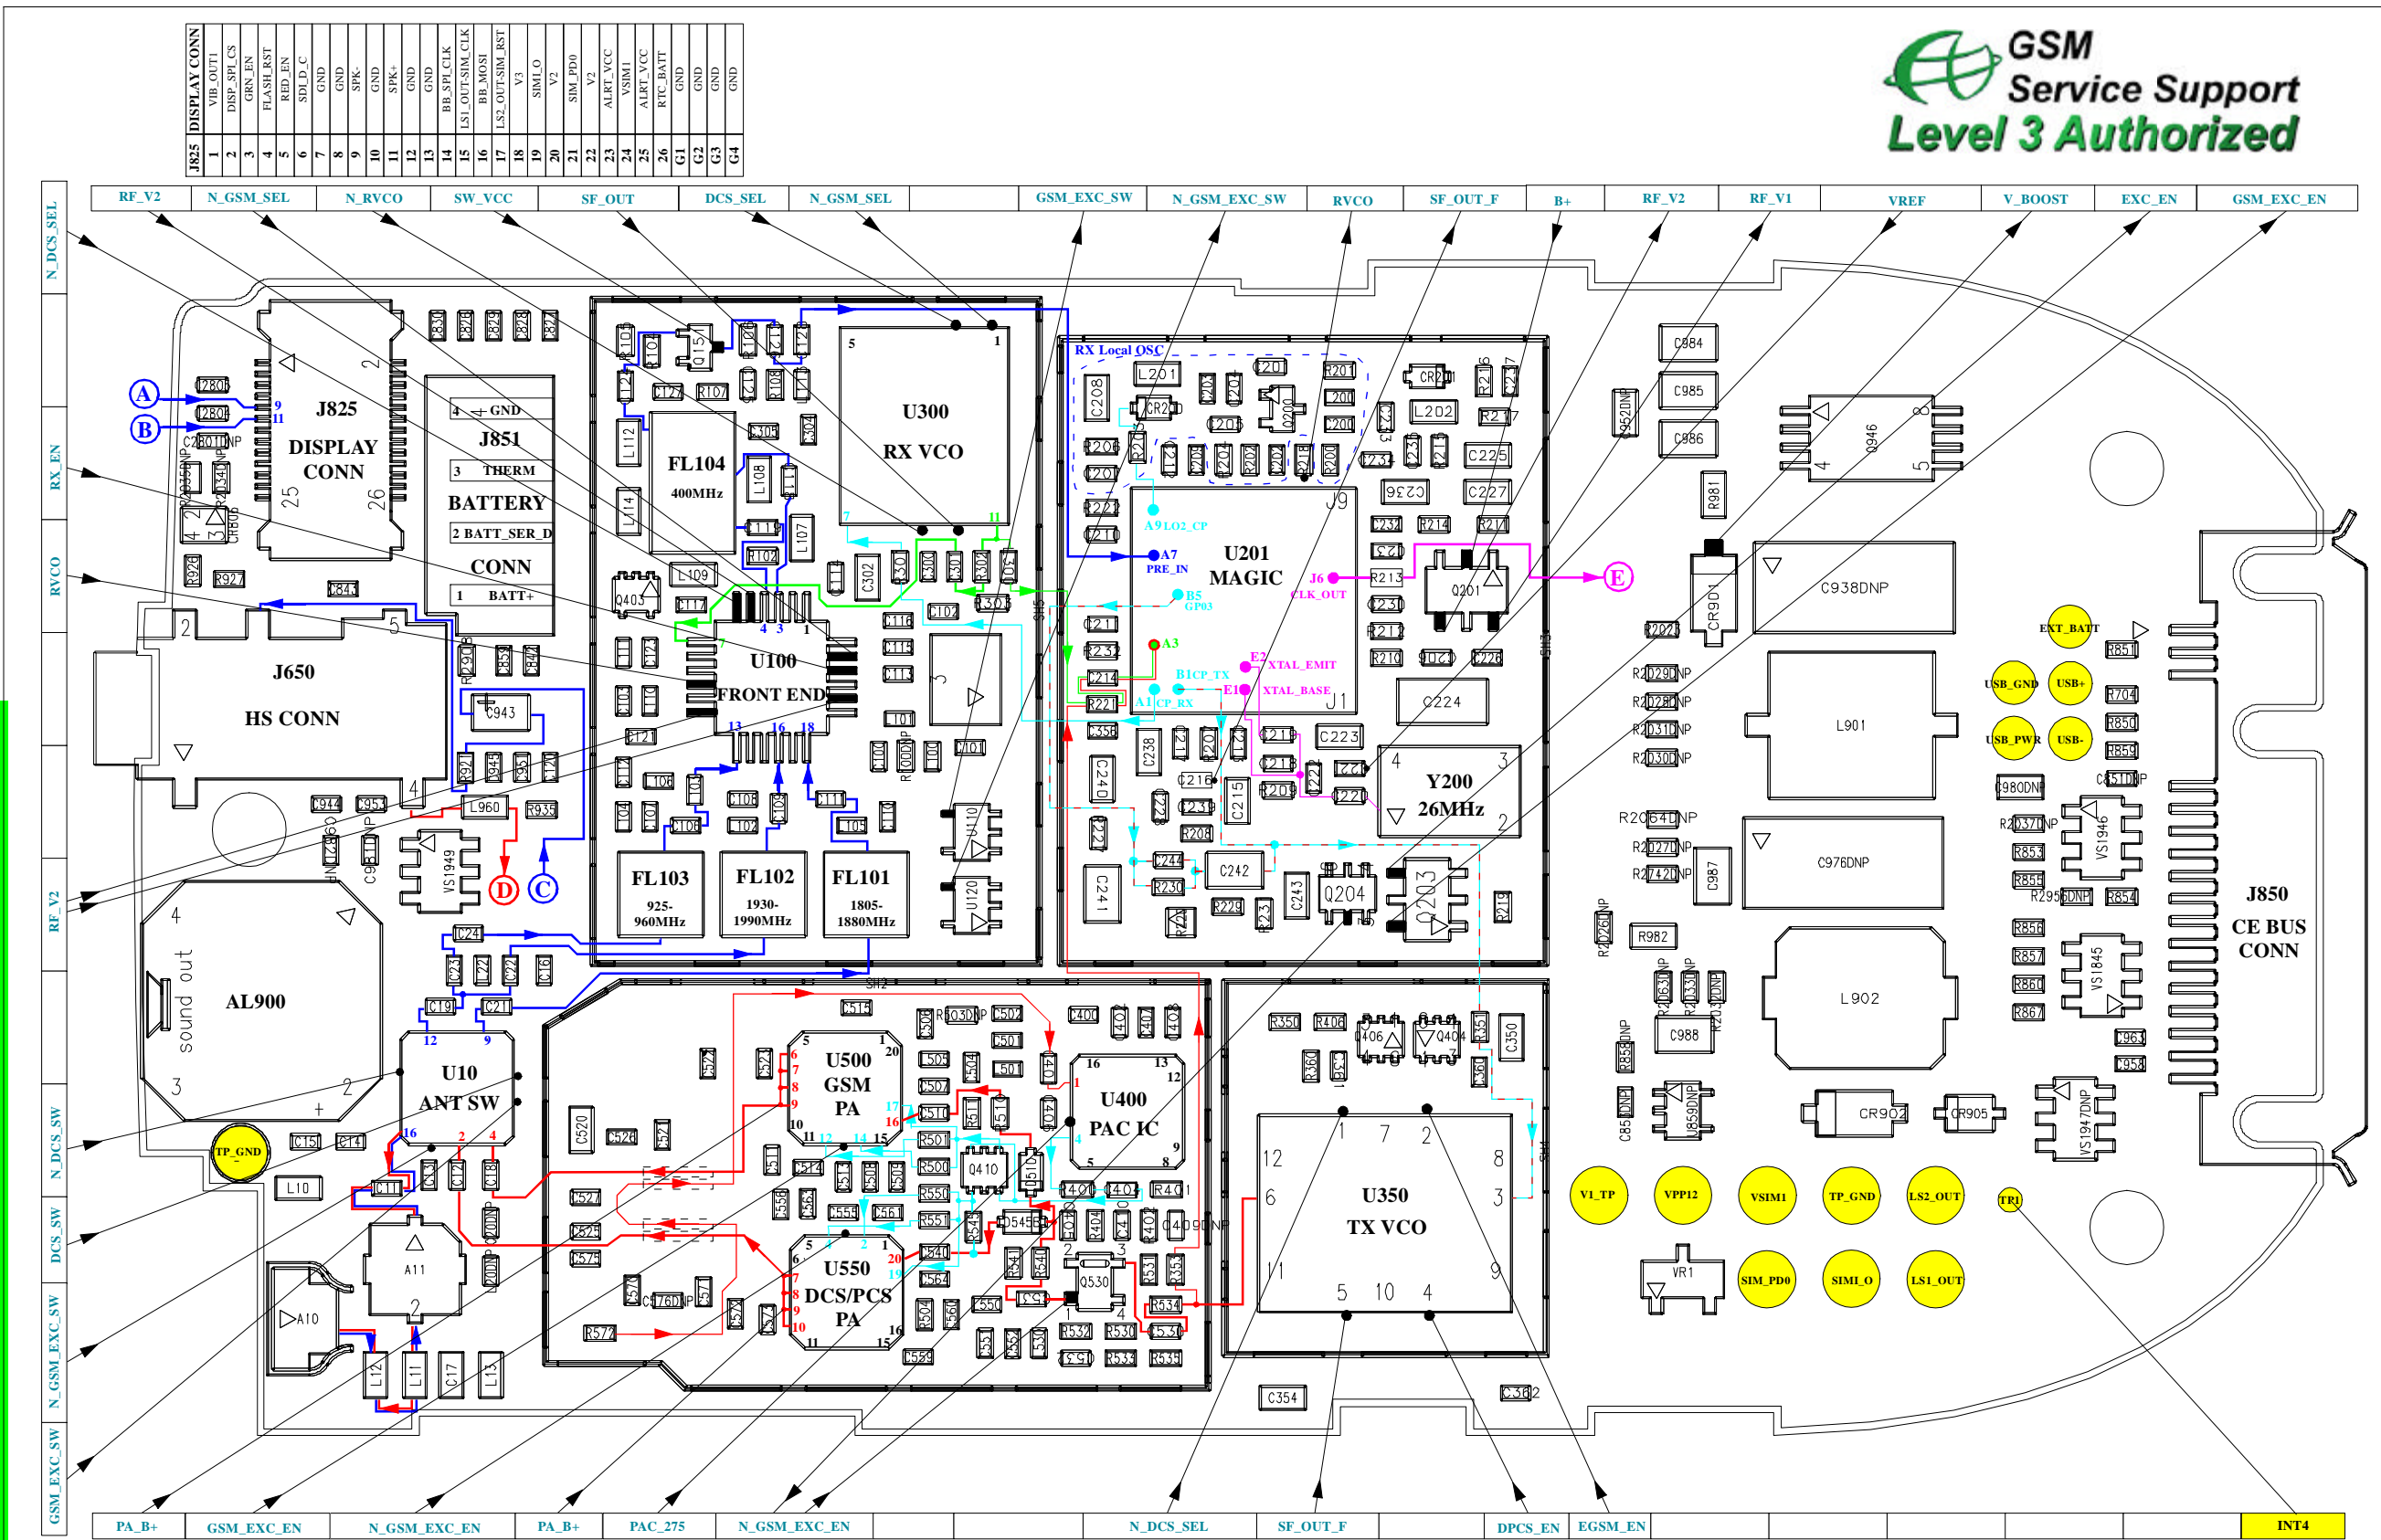

J825	DISPLAY CONN
1	VIB_OUT1
2	DISP_SPL_CS
3	GRN_EN
4	FLASH_RST
5	RED_EN
6	SPLD_C
7	GND
8	GND
9	SPK-
10	GND
11	SPK+
12	GND
13	GND
14	BE_SPL_CLK
15	LS1_OUT_SIM_CLK
16	BB_MOSI
17	LS2_OUT_SIM_RST
18	V3
19	SIMLO
20	V2
21	SIM_PDO
22	V2
23	ALRT_VCC
24	VSIM1
25	ALRT_VCC
26	RTC_BATT
G1	GND
G2	GND
G3	GND
G4	GND


- (A) RX SPEAKER LINE -
- (B) RX SPEAKER LINE +
- (C) HS RX SPEAKER LINE -
- (D) HS TX MIC LINE
- (E) MAGIC\_13MHz TO PATRIOT

J850	CE BUS CONN
1	GND
2	BATT_PDBK
3	EXT_BATT
4	USB+/UTXD
5	USB-/URXD
6	USB_PWR/URTS
7	SW_B+
8	UCTS
9	UDCD
10	URI/DSEL_2
11	UDTR/DSEL_1
12	UDSR/DSEL_0
13	OPTION1
14	OPTION2
15	AUDIO_OUT
16	AUDIO_IN
17	GND
18	GND
19	GND
20	GND

<b>A</b>	RX SPEAKER LINE -
<b>B</b>	RX SPEAKER LINE +
<b>C</b>	HS RX SPEAKER LINE -
<b>D</b>	HS TX MIC LINE
<b>E</b>	MAGIC_13MHz TO PATRIOT

<b>TP</b>	DIG_AUD 2
900	DIG_AUD 3
901	DIG_AUD 0
902	DIG_AUD 1
903	DIG_AUD 1
905	USB_TXENB
906	USB_LOOP
907	UTXD_VDDOUT
908	URTS_USRKRXD
913	GCAP_INT
914	STBY
916	TX_KEY
917	USR_VM

<b>J800</b>	KEYPAD CONN
1	GND
2	KBR6
3	KBR4
4	KBR0
5	KBC0
6	HS_INT
7	GND
8	BL_SNK
9	ALRT_VCC
10	GND
11	GND
12	GND
13	KBR7
14	KBR5
15	KBR1
16	KBC1
17	GND
18	PWR_SW
19	V2
20	ALRT_VCC
21	GND
22	GND

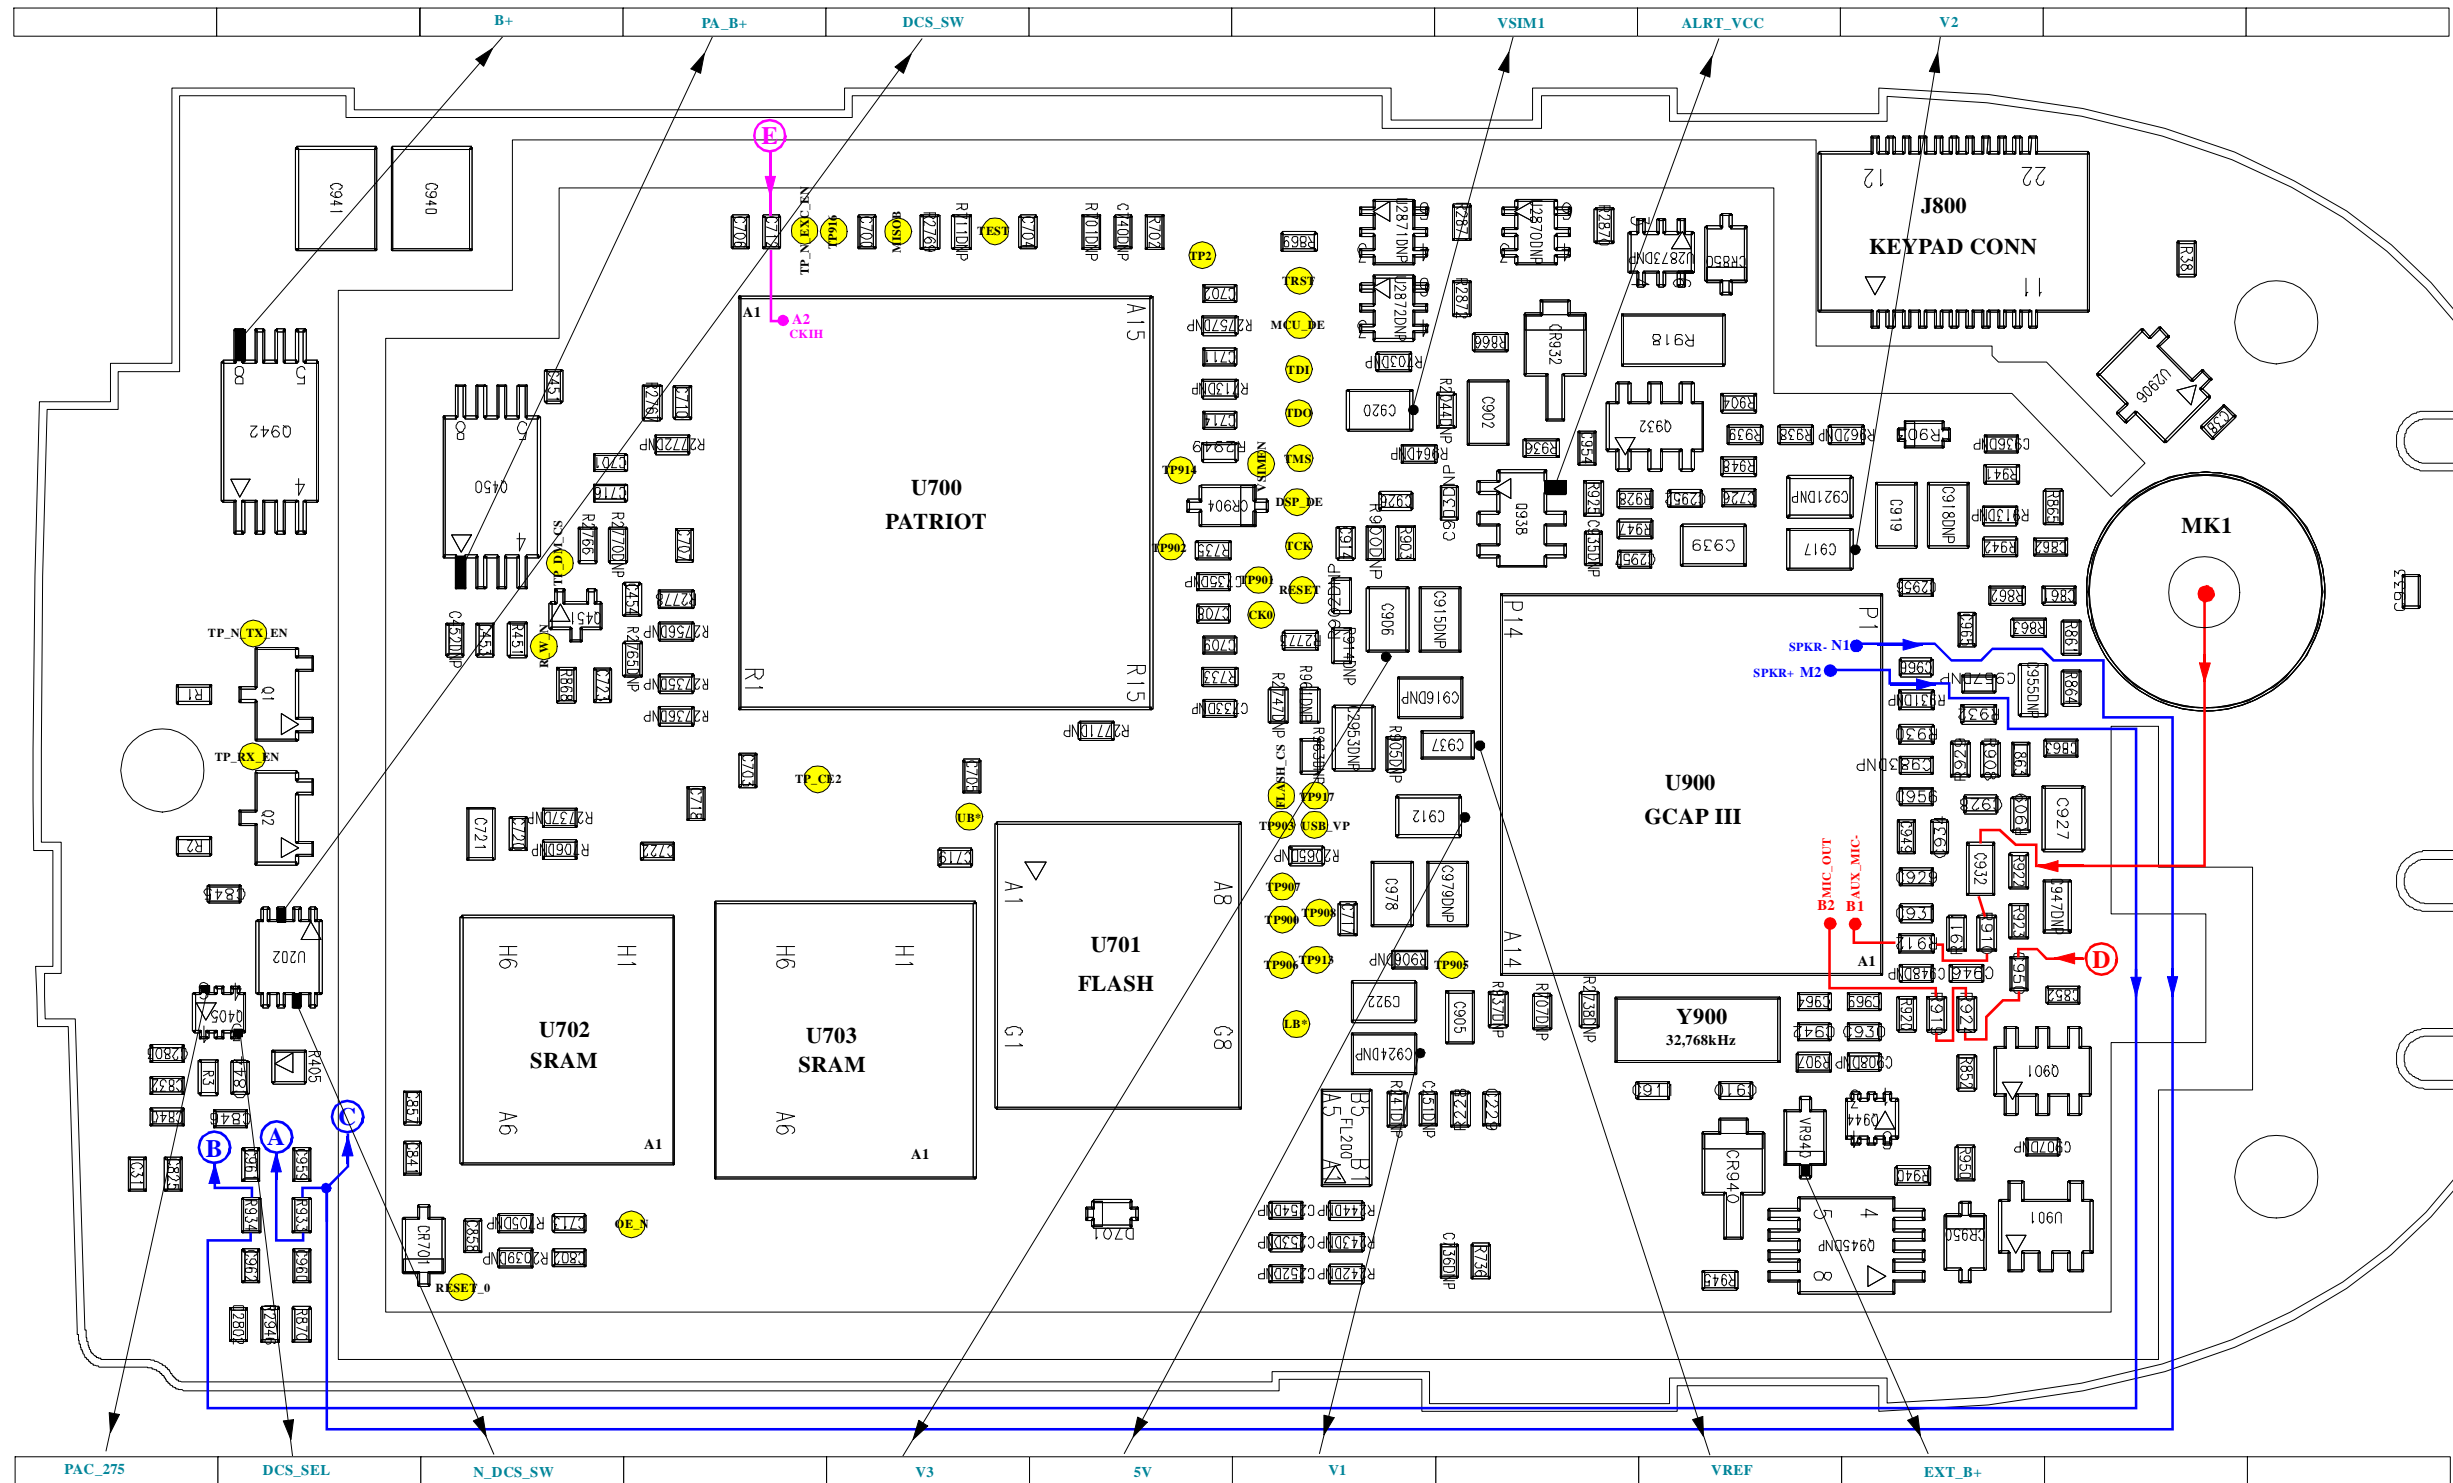

**Tri Band V.66i (Sapphire) 8486615K04 C**