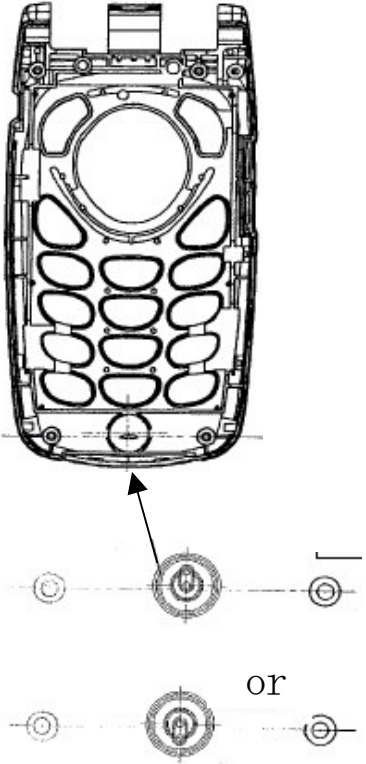
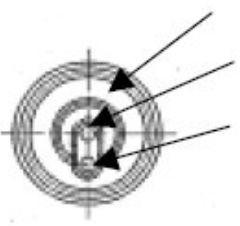


Technical Report

Title	Countermeasure for microphone failure	
Model	GX10 (TQ-GX10)	
General	Microphone has been changed to a coil spring type in order to improve reliability. Please notice the following when handling the microphone.	
Description	<div>Installation of RMICCA004AFZZ</div>  <div>The spring of GND contact must be set vertical to the screw holes as shown in the illustration.</div>	<div>Notice on handling for RMICCA004AFZZ</div>  <div>Body color : Black Coil spring : Signal terminal Coil Spring : GND terminal</div> <div> <p>Please utilize the following notice of the gold filler microphone.</p> <ul style="list-style-type: none"> • Never touch front or back side of the microphone (Never clean terminal of microphone) • Never press the microphone strongly. • Never use a dropped or heated microphone. • Wear finger sacks whilst working with the electric board unit and microphone. • Never touch terminals between microphone and electric board unit. </div>
Beside the above, please note the following.		

Storage, handling and processing recommendation

① Attention to electrostatic damage

- Please use the earth-band on the occasion of handling, because Microphone is weak against static electricity.
- Microphone may easily destroyed by the static electricity, and the countermeasure for eliminating the static electricity (the ground for soldering copper, for work table and human body) shall be executed.

② Attention to the coil spring

- Please make sure that excessive force is not given to the coil spring.
- Do not soil the coil spring.

OK




※ Use tweezers without edge on the tip.

NG



NG

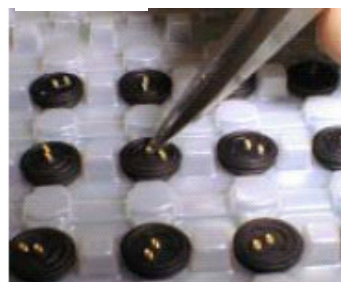

Parts
information

ITEM	REF. NO.	PARTS NAME	PARTS CODE OF REPLACEMENT PARTS				Inter-changeability	Effective from	Price Rank for new parts
			CURRENT	Q'ty	NEW	Q'ty			
1	MIC100	Microphone	RMICC0207AFZZ	1	RMICCA004AFZZ	1	C	November. '03	AL

<Interchange>	
A: Interchangeable.	D: Not interchangeable.
B: Current type can be used in place of new type. New type cannot be used in place of current type.	E: Others
C: Current type cannot be used in place of new type. New type can be used in place of current type.	

Note

Minimum order quantity (Standard Supply Multiple) is 50.

Field action
(in Repair center)

Use new microphone when microphone is defective.