

XELIBRI™

USER GUIDE

All you need to know to get the best from your Xelibri

Contents	1	Redialling numbers.....	10	Saving multimedia.....	19
Overview	2	Retrying a busy number	10	Activities	20
Getting Started	3	Call features	11	Using the radio	20
Fitting SIM card	3	Voice mail	11	Using the alarm clock	20
Charging	3	Sending key tones.....	11	Using the calendar	20
Switching on	4	Using your Xelibri hands-free	11	Recording a voice memo.....	21
Entering a PIN.....	4	Pausing a call	11	Features	22
‘Typing’ numbers on your Xelibri	4	Second calls	11	Themes	22
Setting the time and date	4	‘Party’ calls	12	Ring tones	22
Standby	5	Phonebook	13	Record your own ring tone!	23
Language.....	5	Making a Phonebook entry	13	Favourite feature.....	23
Switching off	5	Typing in the Phonebook	13	Settings	24
Precautions	5	Updating an entry	13	Setting up voice mail	24
Using your Xelibri	6	Adding extension numbers.....	13	Divert (call forwarding).....	24
Three ways to use your Xelibri	6	Phonebook tips	13	Personalising voice dialling.....	24
Making and Taking Calls	7	Identifying callers	14	Symbols	25
Making a call	7	Voice dialling	14	Display symbols	25
Adjusting call volume	7	Further Phonebook features.....	14	Menu Summary	26
Ending a call.....	7	Text messages	15	Messages	26
Taking a call.....	7	Receiving a text message	15	Stay in Touch.....	26
Voice dialling	8	Writing a text message.....	15	Activities.....	26
About voice dialling	8	Typing in a message	16	My Xelibri	26
Voice dialling a number	8	Writing other characters	16	Themes	27
Voice dialling from the Phonebook .	8	Sending a message	17	What if...?	28
Voice dialling tips.....	9	Managing messages	17	Precautions/Maintenance	30
Voice commands.....	9	Multimedia (EMS) messages	19	Xelibri Service/Accessories	31
More ways to call	10	Cards	19	Car Charger	31
Dialling internationally and		Including a Phonebook number	19	Fashion Accessories.....	31
in China	10	Inserting a ready message.....	19	Specifications	32
Phonebook	10	Inserting multimedia	19	Index	33

Overview

Reception strength/battery – the stronger these indicators the better.

Themed background – suit the look and sound of your Xelibri to your mood (p 22).

Network name – indicates **standby** – you're ready to make and receive calls and messages.

On, off or "go back" – do what's shown at bottom left of display – often clear or cancel. Hold to go back to standby. Hold to switch on or off.

You can put your favourite feature on this key in standby (p 23).

Up or down – click to move up or down through a list, menu or message.



In standby,

- click to view/redial recently called number(s)
- click to open your Phonebook
- hold to turn ring tones on/off.

Voice Dialling

Hold (and release) and at the tone:

- say "Number", and at second tone dictate number and say "Dial", or
- say a Phonebook entry you have recorded

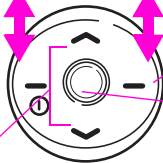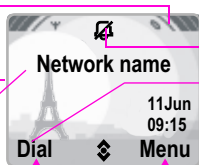

Reminders – show settings in use: e.g. indicates you've switched ringer off (p 22).


Announcements – your Xelibri also displays text messages, voice mail, missed calls etc. here – click to view.

Menu – do what's shown at the bottom right of display – usually open a menu or confirm a setting.

Call – click to answer an incoming call or to dial a number shown on the display. Click to do what's highlighted first on the **Options** menu.

Using menus

Click to rotate to the next menu item.
Click to open it.

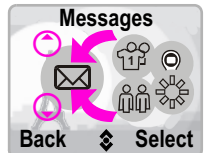

Getting Started

Fitting SIM card

Your service provider supplies your SIM card. If it's credit card size, snap out the smaller portion and tidy any rough edges.




Remove the charger socket cap (1).

Take care to keep small objects like the cap and SIM away from young children.

Firmly press both sides of your Xelibri as shown (2) whilst lifting top of cover a little (3).

Slide cover towards bottom of phone and remove.

If fitted, remove the battery by lifting the tab at the bottom.

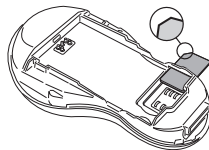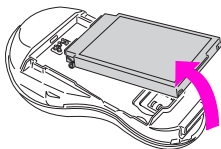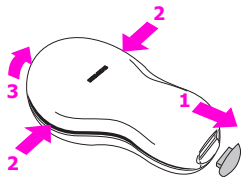


Insert SIM card through the slot in the side of case, positioning cut-off corner as shown.

To replace the battery and cover, reverse the previous steps, ensuring the bottom of cover is engaged before swinging the top into place.

Charging

Insert the supplied charger into an easily accessible mains socket of the correct rating and, having removed the socket cap, plug in with the pins face up.

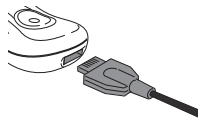


While it charges, the battery indicator will animate – if it doesn't, then see **What if...?** on p 28.

Be sure to unplug the charger from the mains when you're finished.

Getting Started

Switching on




To switch on your Xelibri

Hold . Enter your PIN if asked.

Entering a PIN

A PIN number protects your Xelibri against unauthorised use. Service providers often supply a SIM with the PIN switched on; see your documentation for the number.




Use  and  (below) to 'type' the PIN. Click  to correct, if necessary.

Click  to confirm.



You have three tries at entering the right PIN. If there's a problem, see **What if...?** on p 28. Your provider may let you switch off the PIN (p 27).


'Typing' numbers on your Xelibri

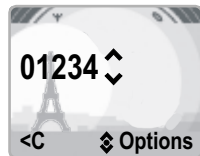Instead of number keys, your Xelibri has a virtual keypad.



To enter a number

Click (or hold)  to select a number. When correct, click .



You can also write the special characters *, # and +. Click .

To correct a number

Click  to clear a digit. Hold to clear all earlier digits.

Setting the time and date

When you first use your Xelibri, it will ask you to set the time and date.


Use  and  to enter the time using 24 hour clock and date, preceding a number with a zero if it's less than 10.

Click  when done.


Standby

When a network has been found and its name displayed, your Xelibri is in **standby**. If you can't see a network name, please see *What if...?* on p 28.

Language

To choose English, dial ***#0044#** and click . See also p 26.

Switching off

From standby, hold .

Precautions

If you use a non-standard lanyard (or necklace) for your Xelibri, be sure that it will break easily under pressure. Otherwise there is a strangulation risk.

All mobile phones are radio transmitters; switch off where prohibited (e.g. aircraft).

To be certain you use your Xelibri safely and correctly, see *Precautions/Maintenance* on p 30.

Using your Xelibri

Three ways to use your Xelibri

You can:


- hold your Xelibri to your ear as normal,
- use the built-in loudspeaker – during a call, choose **Options, Handsfree**, or
- (for total convenience) use the headset.

Headset use

Press the talk key:

- to answer a call
- hold down to end a call.

Hold the talk key in standby to voice dial (p 8).

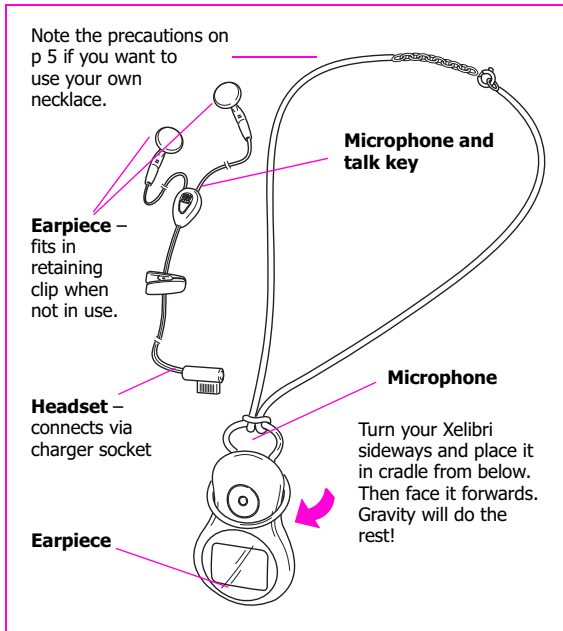

Making and Taking Calls



Making a call


To make a call using the key

Tip: voice dialling (p 8) is often easier!

Starting from standby (network name showing),


- click  or
- click  to choose **Dial**, if shown.

Use  and  to enter the phone number (p 4), always including area code.

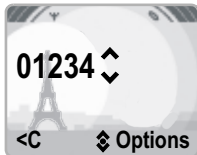


Click .

Adjusting call volume

During a call, click .

Ending a call

Click  to choose **End**.

Always do this, even if you think the other person has hung up.

Your Xelibri tells you how long the call lasted.

Taking a call

Who's calling?


When you receive a call, the display shows the caller's phone number (if available) or their name (if their number's in your Phonebook).

You can use special ringer melodies and pictures for callers you recognise (p 14).

To answer a call

Click .

To reject a call

Click  to choose:

- **Reject** – hangs up the call immediately
- **Divert** – (if you're using call divert, p 24) forwards the call to your voice mail or alternative number.

Voice dialling

About voice dialling


Your Xelibri uses state of the art voice recognition, enabling you to

- dictate a phone number (your Xelibri recognises most accents)
- speak the name of a Phonebook entry you have previously recorded.


Choose a quiet environment for voice dialling. Speak normally and hold your Xelibri where you can comfortably see the display (e.g. 10-20 cm from your mouth).

Voice dialling a number

To dial a number

From standby, hold (and then release) .

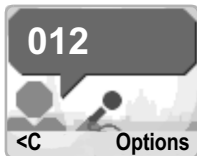

At the tone, say "Number".



At the second tone, dictate the phone number as you would to a person, pausing briefly between groups of (2 to 4) digits.

When the number is correct, say "Dial" (or "Dial number").

To correct a number

To delete the last group of digits, say "Clear" or hold . Click  to delete last digit.

To cancel dialling



Say "Cancel".

Voice dialling from the Phonebook

To voice dial somebody, you need first to record their name. You can save recordings for up to 30 Phonebook entries.


To make a new entry

As voice dialling, but instead of saying "Dial", say "Save" or "Save entry".

Click  to choose **Record voice** . At the tone say the name, repeating it at the second tone.

'Type' a name for the entry when asked (p 13). Choose **Options, Save**.

To call someone

From standby, hold (and then release) . At the tone, say the name.

Voice dialling tips

If you get unexpected results from voice dialling, you can

- try alternative commands from the list (below), or
- personalise your Xelibri to improve recognition. See *Personalising voice dialling* on p 24.





Voice commands


The full list of voice commands is as follows:

"Number"	Start dialling a number
0	Say "zero" or "oh"
1-9	Say "one", "two", "three", etc.
#	Say "hash"
+	Say "plus"
*	Say "star"
"Clear"	Correct a number by deleting the last group of digits
"Dial", "Dial number"	Dial a number
"Save", "Save entry"	Save a dialled number in your Phonebook
"Cancel"	Cancel dialling

More ways to call

Dialling internationally and in China

From standby, click  to dial,  and  to enter “+” and type the country code or click  (**+List**) and select the country or Chinese city from the list.

Enter the area code (in many countries omitting the first digit – e.g. “0”) and phone number and click .





Phonebook


To make an entry, see p 13.



To call someone in your Phonebook

From standby, click  to open the Phonebook.

Either:


 

- go to entries starting with a letter – click  to select the “key”,  to select the letter, and click , or
- go to the first entry – click  for **Browse**.

Click  to go up or down the list.




Click  to call the person highlighted. Alternatively, click  (**Options**) to update the entry, send an SMS, etc.

Redialling numbers

To redial a number you called earlier


From standby, click  to display the last number called. Click  to see previous numbers, if required. Click  to dial the number highlighted.

Returning received or missed calls

Choose **Menu**, **Stay in Touch**, and select the list of recent calls you want. Click  to highlight the correct number and click  to dial. Alternatively, click  to save the number, send an SMS, etc.

Retrying a busy number

If a number is busy, your Xelibri will offer to retry it. Choose **Autodial** to redial at intervals for up to 15 minutes.

To stop your Xelibri trying the number, click  to cancel one of the call attempts.

Voice mail

If you need to set up your answering service, see p 24.

To listen to voice mails

Service providers may alert you to a new voice mail by text message (✉), the ☎ symbol or a phone call.

To dial your voice mailbox, click ☎ to choose ☎, if shown. Otherwise,

- click ☎ to dial a phone number highlighted in a text message, or
- call “Voice mail” from your Phonebook.

Tip: record a voice sample for the “Voice mail” entry in your Phonebook (p 14), so you can hold ☎ and say “Voice mail” to retrieve your messages quickly.

Sending key tones

If your voice mail or other service requires you to press keys for menu options then choose **Options**, **Enter number** and use ☎ and ☎ to send key tones.

Note: to end a call, clear any digits shown on the display. Hold ☎ to clear and click ☎ to choose **End**.

Using your Xelibri hands-free

During a call, choose **Options**, **Handsfree**. Click ☎ to adjust volume.

Caution: the loudspeaker may damage hearing if you hold the phone to your ear.

Pausing a call

To interrupt a call for a private conversation, choose **Options** and **Mute**. Click ☎ (**Return**) to resume.

Second calls

Receiving a second call

If you subscribe to call waiting, you may be alerted to an additional call while you are using your Xelibri.

- To accept the call, click ☎ or choose **Swap**.
- To reject or divert it (according to your settings), either ignore it or choose **End** and **Reject**.
- To hang up your current call and answer the new one, choose **End** and **End**.

Making a second call

During a call, choose **Options** and **Additional call**. Dial a number (or click ☎ to use Phonebook) and call as usual.

Swapping/ending calls


Choose **Options**, **Swap** to switch between calls.

To end the active call, click ☎.

Call features

'Party' calls

When you have two calls on the go, choose **Options, Join** to connect them together. Then, if you want, choose **Options, Add call** to add somebody else to the party. You can join up to five calls together.

Click  to end the call for everybody or (where available) choose **Options, Transfer** to connect the callers to each other and exit.

Making a Phonebook entry

The Phonebook makes it simple to call your favourite numbers and to recognise incoming calls.


You can save Phonebook entries by 'typing' or voice dialling them (p 8).

To 'type' a new entry in your Phonebook

From standby, click and enter a number as usual (p 4).

Choose **Options, Save**. Enter the name (below) and click .

Typing in the Phonebook

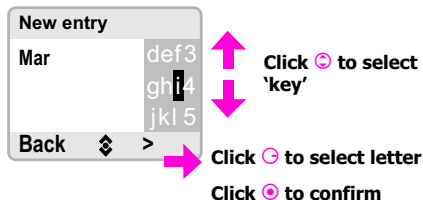

Down the right of the display, you see a list of keys, which correspond to those on a normal phone. Each key can write a number of letters, which are listed horizontally.

To type a name

Click to highlight the key you want.

Click to highlight the letter, digit or symbol you want (accented letters are even further to the right).

Click . Your Xelibri writes the character on the left side of the display.

Corrections

Click to clear a letter. Hold to clear all earlier text.

Spaces

Choose the symbol from above the **a** key.

Updating an entry

Select (or call) a Phonebook entry as shown on p 10.

Adding extension numbers

You can add extension numbers (or control codes) to your entry. Enter phone number, then "+" for pause, followed by the extension digits.

Phonebook tips

You can save numbers from your list of calls made, received or missed (**Menu, Stay in Touch**), or from text messages. With a number on your display, choose **Options, Save**.




Phonebook

Save more than one number for a person by adding a letter at the end of their name: "H" for a home number, "M" for a mobile number, etc.

To use your Phonebook abroad, use the "+" country code even for saving local numbers. See *Dialling internationally and in China* on p 10.

Identifying callers

So you can tell when your friends are calling, assign a special ring tone and picture to people in your Phonebook.


Edit the Phonebook entry, clicking  to skip the number if necessary, and choose **Options**, **Ringer** or **Picture**. Click  to preview the item you want to use and click  to select.

You can also use a special ring tone for Phonebook callers as a whole – see p 22.

Voice dialling

In order to voice dial from the Phonebook (p 8), you need a sample recording of the name. Choose a quiet environment for recording samples and using voice dialling.

To add/update a voice sample

Open the Phonebook and highlight the entry that you want to update. Entries with voice samples display the  symbol. Choose **Options**, **View**.

Choose **Options**, **Voicedialling** (and to re-record an existing sample, **Record new**). At the tone, say the name, repeating it at the second tone.

To play or delete a voice sample

View the Phonebook entry and choose **Voicedialling**. Alternatively, open the Phonebook and choose **Options**, **Voice entries** to play or remove all samples.

Further Phonebook features

Depending on your SIM, you may see the following listed in the Phonebook:




- **<own numbers>** – display or record your own phone number or other useful personal numbers.
- **<Service/Info. numbers>** – lists numbers supplied by your service provider.


You can pass on a Phonebook entry to a friend via SMS. Choose **Options**, **Send entry** and edit the message as usual (p 15).

Receiving a text message

Your Xelibri can send and receive standard (SMS) and multimedia (EMS) messages including text, pictures, animations and sound.



To view a message

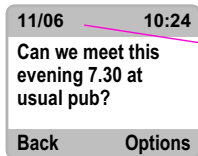When you receive a message, you'll see the  symbol. Click  to view the message and  to go back and forward.



date and time of message

To save (or dial) a phone number in a message

Numbers that you can dial are underlined. Click  to highlight one. Choose **Options, Save** (in Phonebook) or click  to dial.


To reply to a message


Choose **Options, Reply** and select a reply as follows:

- **New Reply** – start a new message
- **Edit Reply** – start a new message based on the one you're reading

- **Answer is YES/NO, Please call back, I'll be late, Thank you** – send the selected phrase in reply.

To delete/archive a message

It's important to delete messages, because your SIM card has limited capacity ( will flash on display when full – and you won't get any more messages!)

In a message, choose **Options, Delete**. From standby, choose **Menu, Messages, Inbox** and click  to highlight a message. Choose **Options, Delete** (or **Delete all** to empty your Inbox).

Alternatively, choose **Options, Move to Archive** to move a message you're viewing from your SIM card to your Xelibri. The Archive is just like the Inbox.

Writing a text message


To start a new message

Choose **Menu, Messages, Write message**.

You can also choose **Options, Send SMS** whenever you have a phone number or Phonebook entry on your display.

Text messages

Typing in a message

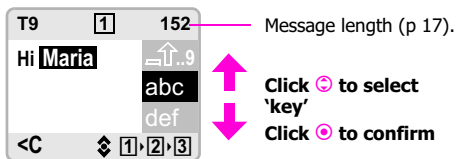

Message length (p 17).

Click \odot to select
'key'

Click \odot to confirm

Disregard display until word is complete

Using T9

T9 enables you to write messages with fewer clicks by selecting just the 'key'.

To type, click \odot to highlight the key you want and click \odot to confirm, then repeat for the next letter, regardless of whether the word's correct. At the end of the word, check it is correct, highlight \Rightarrow and click \odot to confirm and add space, or choose '.' above it for full stop.

T9 suggestions

If you reach the end of a word and it's not right, then click \odot to choose $\text{1}\cdot\text{2}\cdot\text{3}$ and repeat until you reach the right suggestion or your Xelibri asks you to spell the word.

To spell a word

'Type' the word by selecting individual letters, as if in the Phonebook (p 13).

When the word is correct, click \odot to choose **Save**, which remembers the word next time.

To correct text

Click \odot to clear a letter. Hold to clear final word and (again) all earlier text.

Writing other characters

For spaces, capital letters and punctuation

space choose the \Rightarrow symbol from above the **a** key

capital choose the \uparrow symbol from above the **a** key

punctuation To select a character not shown on a key, choose **Options, Special character**.

Click \odot and \odot to highlight the symbol you want, and \odot to confirm.

To switch T9 on/off, type numbers or Chinese


For an unfamiliar word or a name, you may want to switch T9 off. You may also want to type a long number, or use Chinese.

Choose **Options, Input Mode** and select the option you want.

Without T9, 'typing' is as in the Phonebook (p 13).

To review/edit text

Choose **Options, Navigate**.


Now, instead of writing text, you can click  to move the cursor back and forward in the text.


Choose **Options, Type** to resume typing.

Sending a message

To send


Choose **Options, Send** and, unless replying, either:

- type the number, or
- choose  to select a name.


Choose **Send** (or hold  to cancel).

To send to a group

Choose **Options, Send to many**. Your current group (if any) is listed.

To add people, choose **Add recipient** and type a number or select a name from your Phonebook as usual, clicking  to confirm.

To remove one (or all) of the names listed, highlight it and choose **Options, Remove** (or **Remove all**).

When your group is correct, highlight one of the names and choose **Options, Send** (or click  to cancel).

Managing messages

Viewing, deleting and re-sending

Use the **Messages** menu to manage messages you have:

- Received (**Inbox**)
- Sent or last edited (**Outbox**)

Each message gives you the option to **View** or **Delete**.

Service centre

SMS messages are sent to your provider's SMS service centre for onward transmission.


If your SIM card doesn't already contain the service centre phone number, then you'll be prompted for it the first time you send a message. Choose **Menu, My Xelibri, Setup, Service centre** to view or update this number, if necessary.

Longer messages

Your Xelibri sends messages up to 912 characters long, whilst your service provider may charge you separately

Text messages

for each standard SMS (160 characters). When you write a message, your Xelibri displays something like:

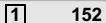A screenshot of a text message status bar. It consists of a light gray rounded rectangle. On the left side, there is a small white square with a black border containing the number '1'. To the right of this square, the number '152' is displayed in a dark gray font.



at the top right (p 16), which indicates that you're in your first standard SMS and that you can add 152 characters before you start a second.

Multimedia (EMS) messages

Cards




On special occasions, you can send your friends greeting cards that include a picture and melody.

These can be received on the latest models from most prestige phone manufacturers.

Choose **Menu, Messages, Multimedia, Cards** and click  to choose the card, clicking  to send.





Including a Phonebook number

After a space, choose **Options, Insert,  entry**. Click  to highlight the person whose number you want to insert and click .



Inserting a ready message

A ready message is a handy phrase that saves you time typing.

In the message, choose **Options, Insert, Text**. Click  to highlight the phrase you want to use and click .

Inserting multimedia

In a message, choose **Options, Insert** and select the type of media to insert.

Click  to go back and forward between items and click  to include the current one in your message.

Saving multimedia

Choose **Options, Save media**. Each item is shown in turn. Choose **Save** (or **Skip**). Use **Menu, Messages, Multimedia** to manage pictures, sounds and animations.

Activities


Using the radio

Your Xelibri incorporates an FM radio with the ability to program your favourite stations.



You must use the headset (p 6) to use the radio.

To switch radio on and off

Choose **Menu, Activities, Radio**.

To switch off, click  for **Off** or (in standby) **Radio and Off**.


To find a radio station

Choose **Options, Search**. Click  to go up or down the waveband. Hold  to search for the next or previous station.

Click  to use the station as a favourite.

Favourite stations


Choose **Options, Favourites**. Highlight the station you want and



 
- click  to listen
- choose **Options** to delete or rename the station (or delete all favourite stations).


Using the alarm clock

Your Xelibri provides a daily alarm that works even with your Xelibri switched off.

To set the alarm

Choose **Menu, Activities, Alarm clock**. Click  to choose **On/Off**.

Click  to confirm the time shown, or use  and  to set a new time (24 hour clock) and choose **Set**.

When it's set, you'll see  next to the time. To switch off, choose **On/Off** again.


When you hear the alarm...

Click  to pause (**Snooze**) or  to stop the alarm.

The alarm will sound at the same time tomorrow unless you switch it off (above).


Using the calendar

As an aid to planning, your Xelibri provides a month view calendar as well as Lunar and Solar calendars.

Choose **Menu, Activities, Calendar** and the required calendar. For month view, click  to see different months. With Lunar to Solar and Solar to Lunar calendar, you can also convert new dates in either format.

Recording a voice memo

You can record a message to yourself of up to 30 seconds in length.

Choose **Menu, Activities, Voicemail**. If there is a recording, click  to play it, otherwise choose **Record**.

Choose **Options** to re-play, delete or re-record a voice memo.

Features

Themes

Suit your Xelibri to your mood with different themes, that include display background, symbols, ringer melodies and screensaver.



Choose **Menu, Themes** and click ☺ to preview. Click ☹ to use the highlighted theme. Note that a theme may replace custom settings you have made.

Ring tones

To switch off ring tones

In standby, hold ☹.

Ring tones (and optionally the alarm clock) will be switched off until you:

- hold ☺ to switch them back on, or
- switch your Xelibri off.

Switching off ring tones won't affect the vibrating alarm (p 26).

Quiet and loud settings

To switch quickly between normal, quiet and loud environments, choose **Menu, My Xelibri, Audio, Quiet/loud** and choose:

- **Normal** to use your normal settings, including customised melodies.
- **All quiet** to quieten the ringer and other sounds, turn on vibrate and optionally switch the alarm clock off.
- **All loud** to switch all sounds to high volume.

To change ringer melodies

You can use different ringer melodies for callers you recognise and for messages.



Choose **Menu, My Xelibri, Audio, Ring melodies** and choose the type of call you want to modify:


- **General calls** – new or unknown numbers
- **Phonebook calls** – numbers that appear in your Phonebook
- **Individual Callers** – choose a ring tone for a specific person in your Phonebook. Select the required name. You can also assign pictures to callers – see p 14.
- **Messages** – incoming text messages.

Modify volume by choosing **Volume** from the **Audio** menu.

Record your own ring tone!

Choose **Menu, My Xelibri, Audio, My Sounds.**

Choose **<New Sound>** and when you're ready click  to start recording. Click  to stop when done.

Choose **Save** (or click  to cancel).

Choose **Options, Ringer For** to use a recorded ring tone (as above).

You can record up to 10 sounds totalling 15 seconds.

Tip: why not record the person's name and use it as a ring tone?

Favourite feature

Display key



You can program the Display key so your favourite feature or number is just a click away.

Choose **Menu, My Xelibri, Setup, Display key** and click  to choose the feature you want.

Settings

Setting up voice mail

If you subscribe to your service provider's answering service (voice mail), they will usually have included it on your SIM.

If not, they will provide:

- a phone number you can redirect calls to (the divert number). Choose **Menu, Stay in Touch, Voice mailbox** to enter it.
- a phone number you call to retrieve messages. Enter it in the Phonebook as "Voice mail".

Then set up divert (below).

Divert (call forwarding)

Divert must be switched on to use voice mail, but you can also divert calls to other numbers.

Choose **Menu, My Xelibri, Setup, Divert** and:

- **Unanswered** – the usual setting: forward calls when your Xelibri is off, out of coverage, busy or when you don't answer.
- **All calls** – forward every call (if you're abroad, for instance).

In each case, choose to forward calls to your voice mailbox, to an alternative number, or choose **Off** to stop diverting calls/using voice mail.


Personalising voice dialling

If you get unexpected results when voice dialling numbers, then you may benefit from training your Xelibri to recognise the way you speak.

To personalise voice dial


Choose a quiet environment for the training.

Choose **Menu, My Xelibri, My Voice**.

When you're ready to begin, click .

Speak the word or sequence of numbers shown on the display. If your Xelibri fails to recognise what you have said, it will prompt you to repeat it. If successful, it will go on to the next screen.






To turn personalisation off

To restore general settings for speech recognition, choose **Menu, My Xelibri, My Voice** and click  to switch off. Repeat to re-train your Xelibri.








Display symbols

Your Xelibri may display the following information:

Reminders

- | | |
|---|---|
|  Alarm clock on (p 20) |  Ringer off: hold  to switch on |
|  All calls diverted (p 24) |  Headset in use |

Keys

- | | |
|---|---|
|  New text message (p 15) |  New voice mail (depending on network, p 11) |
|  Missed call (p 10) |  Missed announcement (when screensaver on) |
|  Missed alarm. |  Hold  to unlock keypad |

Menu Summary

This section summarises the menu options on your Xelibri.

Messages

See p 15.

Stay in Touch

Phonebook

See p 13.

Calls missed/received/dialled

See p 10.

Voice mailbox

See p 24.

Activities


See p 20.

My Xelibri

Display

Language

Choose the language in which to display your Xelibri's menus and options.

To reset from a language you don't understand, dial ***#0000#** .

Screensaver

Choose or switch off the screensaver (e.g. clock) displayed after Xelibri has been idle for a time.

 
Wallpaper

Choose the display background.

Welcome text

Write a message to display when you switch your Xelibri on.

Contrast

Adjust the contrast of your display (click .

Audio

Ring melodies

Select ringer melodies (p 22).



My sounds

Manage sounds you have recorded (p 23).

Ringer setting

Switch ringer tones on or off.

Volume

Set ringer volume (click  and .

Info tones

Switch non-ringer sounds (network events, etc.) on or off.

Key tones

Change or turn off the sound that accompanies a key press.

Silent alert

Switch your Xelibri's vibrate alert on or off, independently of the ringer.

Quiet/loud

See p 22.

Menu Summary

My voice

See p 24.

Time & date

Set time & date Set the time and date and the date display format.

Alarm clock See p 20.


Calendar See p 20.

Setup

Divert See p 24.

Call waiting Switch call waiting on or off.

Auto key lock Automatically disable the key to prevent accidental calls.

You can still answer calls with the key lock on. Hold  to unlock.

Hide ID Withhold your phone number when you make a call.


Display key See p 23.

PIN control Enable or disable PIN number checking when you switch on your Xelibri (service provider permitting).

Change PIN Choose a different PIN number.

Network

Choose network – Change from your current network by choosing manually from a list of networks that are in range.

Networks marked  are not allowed by your home service provider (or SIM).

Auto network – Normally the network selection is automatic. If you switch this off, you must choose from the list of available networks when you move outside coverage of your current network.

Service centre

Update the phone number of your service provider's SMS centre.

Themes


See p 22.

What if...?

If you have any questions about using your Xelibri, visit us at **www.xelibri.com** any time. In addition we have listed some frequently asked questions and answers below.

Problem	Possible Causes	Possible Solution
Phone cannot be switched on.	On/Off key not pressed long enough. Flat battery. Battery contacts dirty. See also below under: "Charging error".	Press On/Off key for 2 to 5 seconds. Charge battery. Check charging indicator in the display. Clean contacts.
Charging error (charge icon not displayed).	Battery totally discharged. Extreme temperature (outside 5 to 40 °C). Contact problem. No mains voltage. Wrong charger. Battery faulty.	1) Plug in charger cable. 2) Wait up to 2 hours until the charge icon is displayed. 3) Charge battery as usual. Make sure the ambient temperature is right, wait a while, then recharge. Check power supply and connection to the phone. Check battery and phone contacts, clean them if necessary, then insert battery again. Use different mains power socket, check mains voltage. Only use original Siemens accessories. Replace battery.

Problem	Possible Causes	Possible Solution
SIM error.	SIM card not correctly inserted.	Check (p 3).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage. SIM card damaged (e.g. broken).	Use 1.8/ 3 V SIM cards only. Inspect the damage. Return the SIM card to service provider.
No connection to network.	Signal weak.	Move higher, to a window or open space.
	Outside GSM range.	Check service provider coverage map.
	SIM card not valid. New network not authorised.	Contact the service provider. Try manual selection or select a different network (p 27).
	Network barring is set.	Contact the service provider.
Phone loses network.	Signal too weak.	Switching the phone off and on may speed up reconnection.
Calls not possible.	New SIM card inserted.	Check for new restrictions.
	Credit used up.	Load credit.
Poor sound quality	Signal too weak.	Avoid covering the internal antenna (top rear of phone) with your hand.

Problem	Possible Causes	Possible Solution
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p 13).
Phonebook entries missing	Changing SIM from another phone.	Entries may be in other phone memory.
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p 24).
Call waiting does not work	Not set up in network.	Can be switched on or off. See p 27.
SMS (message)  flashes.	SMS memory full.	Delete messages (p 17).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Message cannot be sent.	Some service providers do not support this service.	Check with your service provider.
	Phone number of the service centre is not set or is wrong.	Set service centre (p 17).
	Service centre overloaded.	Repeat message.
	Recipient does not have a compatible phone.	Check.

Problem	Possible Causes	Possible Solution
EMS pictures and sounds are not displayed at the destination phone	The destination phone does not support the EMS standard.	
PIN error	Three wrong entries.	Enter the PUK (master PIN) provided with the SIM card according to the instructions. If you have lost the PUK, contact your service provider.

Damage

Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!
Phone became wet.	Remove battery and SIM card. Dry immediately with cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in an air current. Do not dismantle phone!

Precautions/Maintenance

Precautions

Interference

Like any radio transmitter, a mobile phone can interfere with electrical equipment. You must always **switch off** your Xelibri:

- in **hospitals** and near medical equipment. If you have a heart pacemaker, keep your Xelibri a minimum of 20 cm from it and hold it to the ear furthest away.
- on **aircraft**.

For safety

Switch off your Xelibri near petrol stations, fuel or chemical plants or blasting operations.

Driving

Driving while holding a mobile phone is **dangerous** and **illegal** in many countries. Please use headset and then only when it is safe to do so.

Heat and moisture

Avoid **moisture**, **shock** or **extreme heat** (for instance, leaving your Xelibri in a car in hot sun).

Other precautions

Take care, particularly overseas, that you **charge** your Xelibri using the **correct voltage**.

Do not open your Xelibri, except to change the SIM card or replace the battery. Tampering with your Xelibri or battery invalidates your warranty and may result in your network refusing service.

To ensure that you don't damage your Xelibri, use only accessories – particularly chargers and batteries – supplied by Xelibri.

The battery is 100% mercury free, but take care to **dispose of batteries legally**. Check with your retailer.

For optimum performance, avoid covering the antenna (top rear of Xelibri) whilst using it.

Maintenance

The SIM card should be treated with the same care as a credit card. Do not bend or scratch it or expose it to static electricity.

Clean the card with a damp cloth or an antistatic wipe without chemical cleaning agents.

Remove the battery if you are not going to use your Xelibri for extended periods of time (more than one month)

Lost Xelibri

If you lose your Xelibri or SIM card contact your service provider immediately to prevent misuse.

Xelibri Service/Accessories

Service

Please refer to our troubleshooting guide on p 28, or our web site at **www.xelibri.com**. If repair work is necessary please contact one of our service centres:

Austria	0800-4935427
France	0800-905284
Germany	0800-4935427
Italy	800-785780
Spain	900-992904
Switzerland	0800-4935427
UK	0800-0153602

We are adding new numbers all the time. Please see our web site or (in Europe) call +800-4935427, where "+" is international access, e.g. "00" from a land line.

China	800-8201151
Hong Kong	800-963283
Singapore	800-8600007

Approved accessories

The following Xelibri and Siemens accessories will enhance use of your Xelibri. Use of other non-approved accessories, especially batteries and chargers, may damage it.

If you use a non-standard lanyard (necklace) for your Xelibri, be sure that it will break easily under pressure. Otherwise there is a strangulation risk.

Basics

Li-Ion Battery (610 mAh)

EBA-580

Spare battery.

Travel Charger

ETC-500 (Euro)

ETC-510 (UK)

Travel charger with an extended input voltage rate of 100-240V.

Car Charger

ECC-500

Charger for the cigarette lighter socket in your car.

Products can be obtained in specialist shops. Visit our online shop under:



Fashion Accessories

Xelibri will shortly launch a range of new lanyards and other cool accessories.

Please check them out at www.xelibri.com

Specifications

Declaration of conformity

Xelibri is brand of Siemens Information and Communication Mobile which hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed.

CE 0889

Technical data

GSM class	4 (2 Watt)
Frequency range:	880-960 MHz
DCS class:	1 (1 Watt)
Frequency range:	1,710-1,880 MHz
Weight:	67 g
Dimensions:	91 x 56 x 24 mm
Li-Ion battery:	610 mAh
Operating temperature:	-10 °C to 55 °C
Standby time:	up to 200 h*
Talk time:	up to 240 min*
SIM card:	1.8/3.0 V

* subject to network conditions

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

SAR

THIS MODEL PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Mobile phones are radio transmitters and receivers.

Limits for radio frequency exposure are defined in international guidelines (ICNIRP), developed by independent scientific organisations.

The international recommended upper limit for exposure, and that recommended by The Council of the European Union, is a Specific Absorption Rate (SAR) of **2.0 watts/kilogram (W/kg)**.

Tests on this phone, conducted at maximum transmitting power, produced an SAR no greater than **0.58 W/kg**.

In areas of typical network coverage, your phone transmits on lower power, resulting in a reduced SAR.

For more information on this issue, see **www.my-siemens.com**.

A

- Activities menu26
- alarm clock20

B

- battery3

C

- calendar20
- call waiting 27, 29
- calls
 - dialled, received or missed 10
 - ending7
 - forwarding (divert)24
 - from Phonebook 10
 - holding11
 - identifying callers 14
 - international 10
 - making7, 8
 - making additional11
 - receiving7
 - receiving additional 11
 - rejecting/diverting7
 - retrying10
 - voice dialling8
- cards19
- charging3
- clock20
- conference calls 11

D

- date 4
- dialling 7
- divert 7, 11, 24

E

- EMS, see text messages
- ending calls 7

F

- favourites23
- fitting
 - battery 3
 - SIM card 3
- forwarding calls24

G

- greetings cards19

H

- handsfree11
- headset 6
- holding calls11

I

- icons25
- identifying callers14
- Inbox17
- incoming calls 7
- international calls10

K

- key 2
- key tones
 - sending 11

L

- language 5
- loudspeaker 11

M

- making additional calls 11
- making calls 7
- menus2, 26
- Messages menu 26
- messages, see text messages
- mute 11
- My Xelibri menu 26

N

- necklace 6

O

- on/off 2, 4
- Outbox 17

P

- party calls 11
- phone numbers
 - text messages 15, 19

Index

Phonebook	
making an entry	13
making calls	10
special ring tone/picture	14
typing	13
updating	13
voice dialling	8
pictures	
Phonebook callers	14
PIN	4
Q	
Quiet/loud	22
R	
radio	20
receiving additional calls	11
receiving calls	7
reception	2
recording ring tones	23
redialling	10
retrying numbers	10
returning calls	10
ring tones	22
recording	23
ringer melodies	22
Phonebook callers	14

S

SIM	3
SMS, see text messages	
Spell	16
standby	2, 4
Stay in Touch menu	26
switching on/off	2, 4
symbols	25

T

T9	16
text messages (SMS)	
deleting	15
multimedia (EMS)	19
phone numbers	15, 19
ready messages	19
receiving	15
replying	15
sending	16
special characters	16
T9	16
viewing/deleting/re-sending	17
writing	15
themes	2, 22
Themes menu	27
time & date	4
troubleshooting	28
typing	13, 16

V

voice dialling	
commands	9
numbers	8
personalisation	24
Phonebook	8
recording a voice sample	14
voice mail	11, 24
voice memo	21
volume	
calls	7
hands-free	11
ringer	22



SOMEONE IS WAITING FOR YOUR CALL!

XELIBRI™

好明天 啊! THAT'S SO TOMORROW!

© Siemens AG 2003
All rights reserved. Subject to availability.
Rights of modification reserved
WWW.XELIBRI.COM

Box contents

- ♥ **Xelibri X8**
- ♥ **necklace**
- ♥ **ring**
- ♥ **stereo headset**
- ♥ **dust cover**
- ♥ **610mAh Li-ion battery**
- ♥ **standard charger**
- ♥ **user guide**
- ♥ **quick start**
- ♥ **service card**

Issued by
Information and Communication mobile
Haidenauplatz, D-81667 Munich, Germany
Ref. No: A31008-H9270-A45-2-7619