
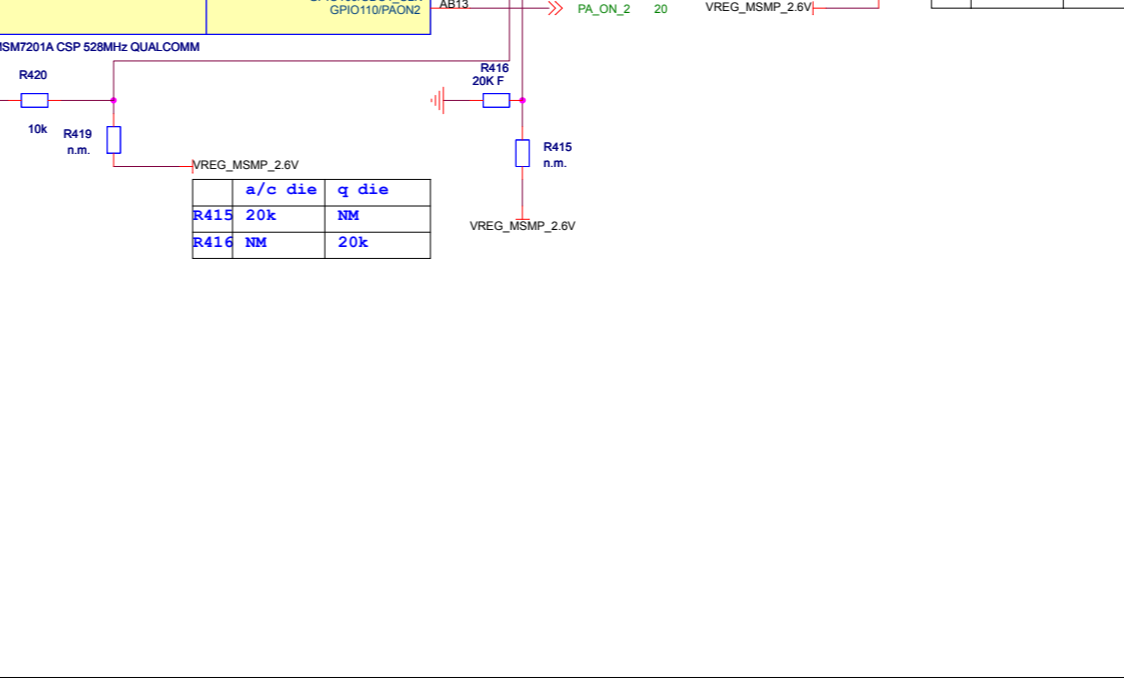
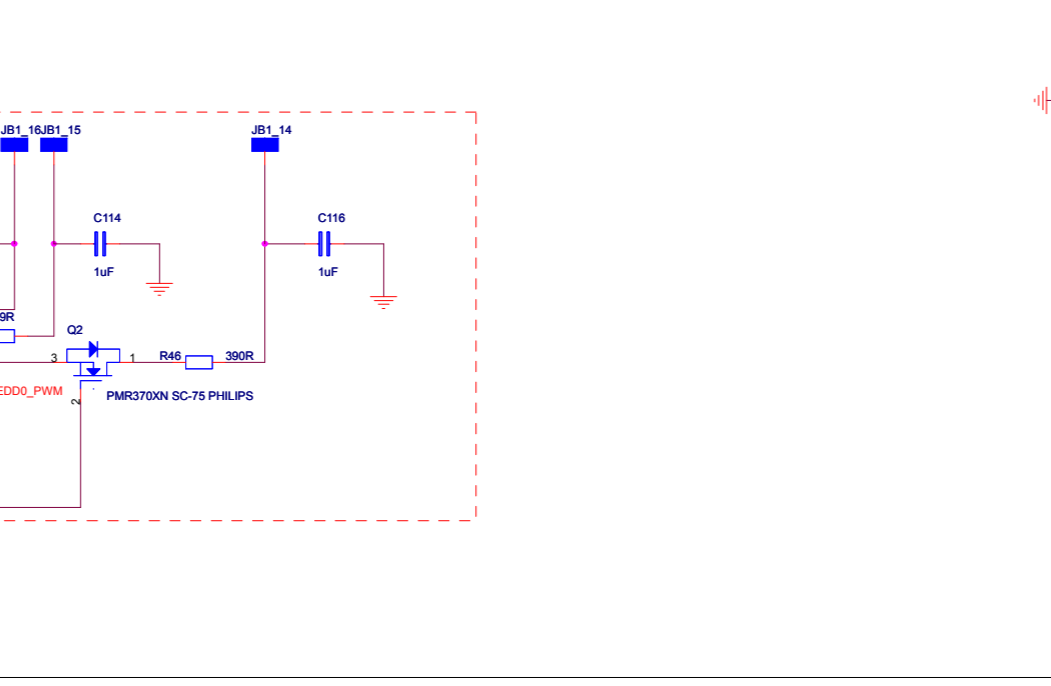
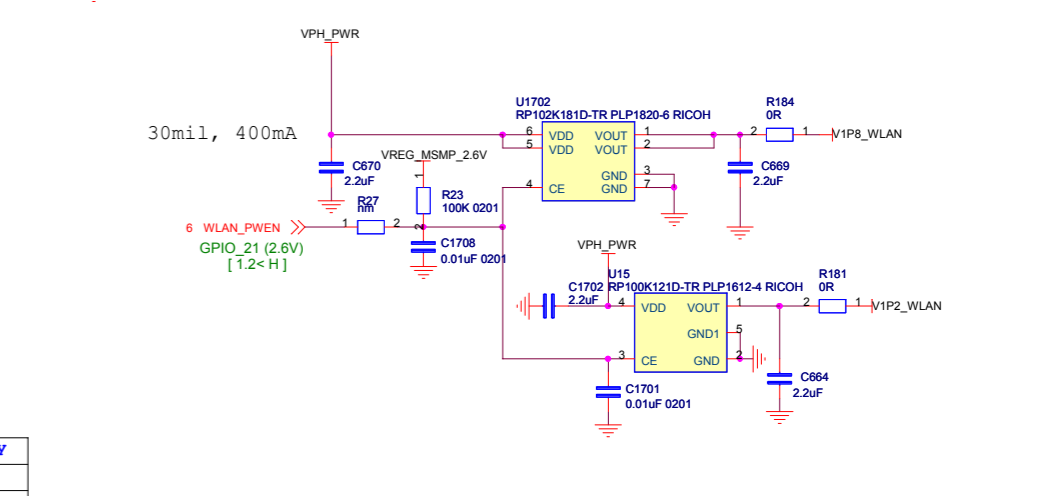
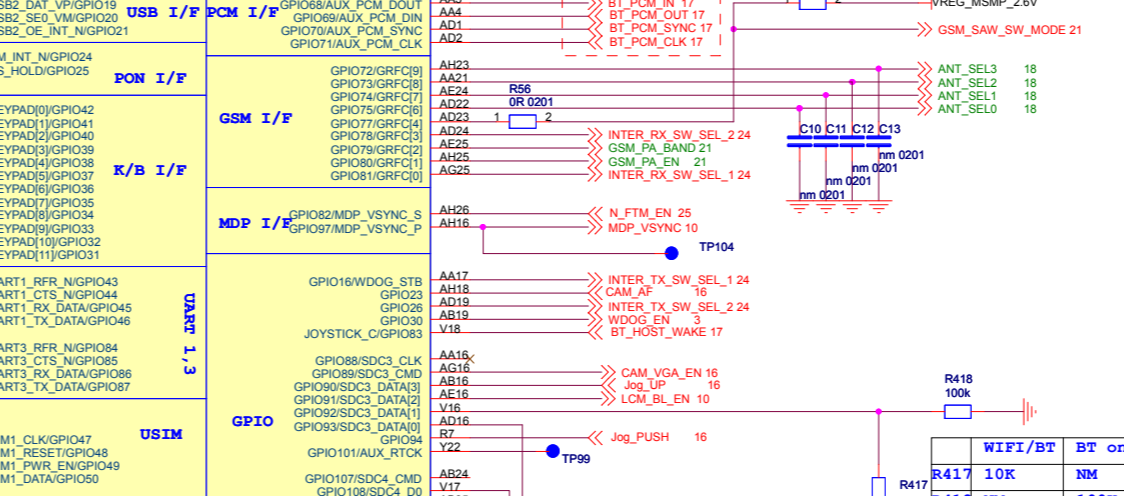
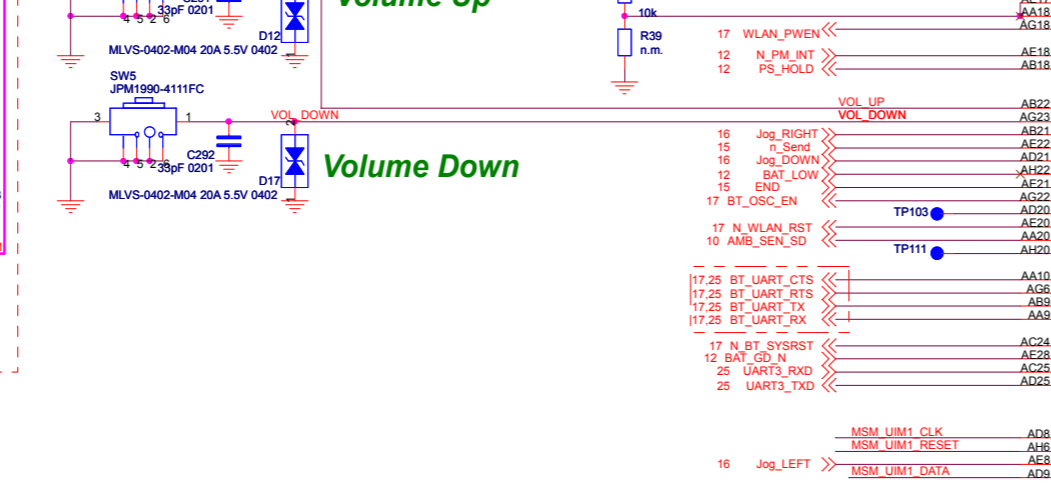
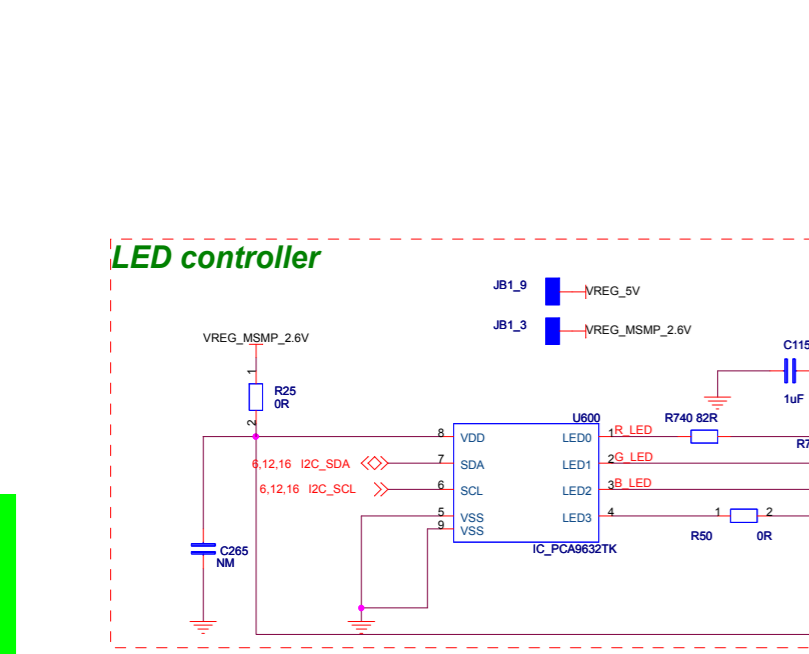
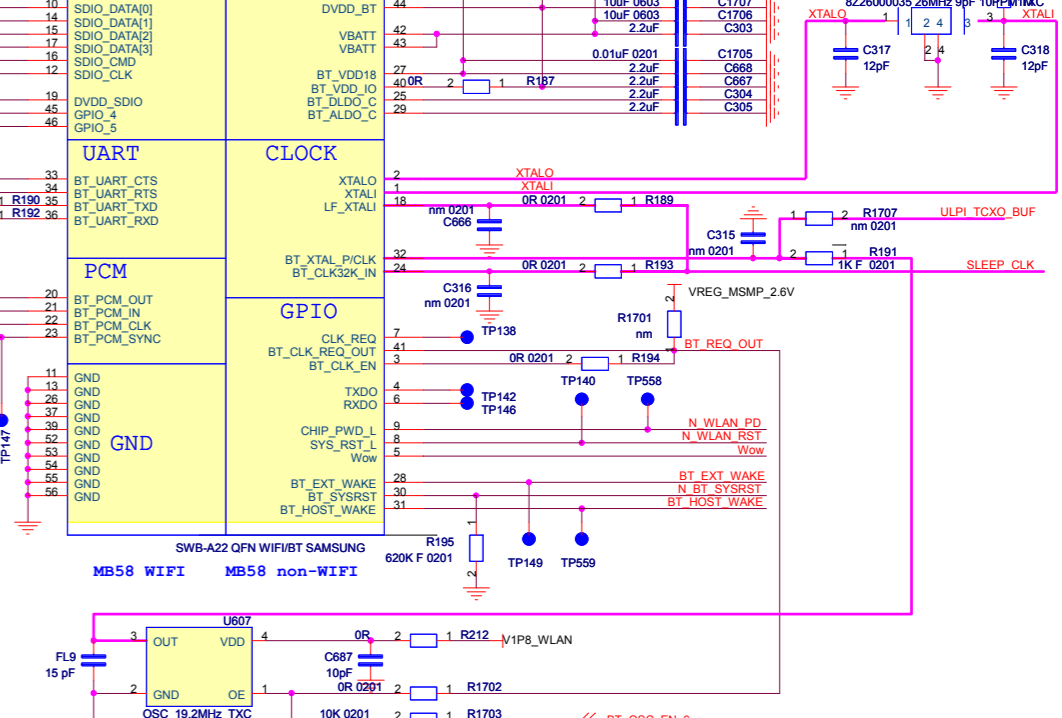
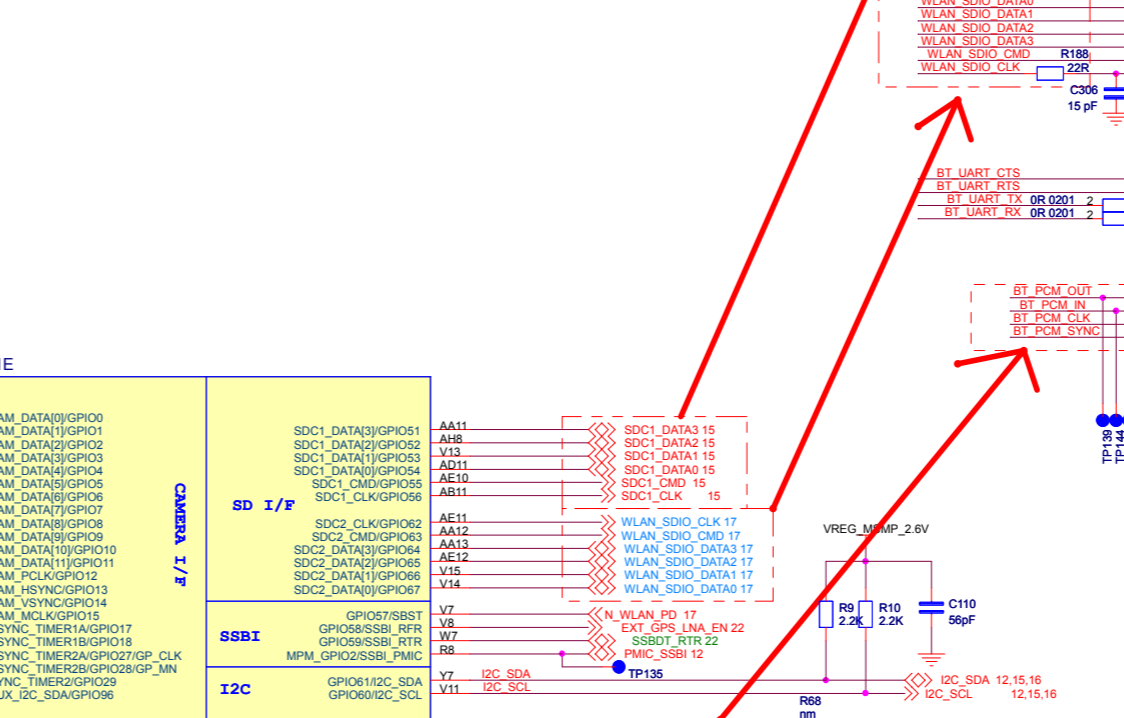
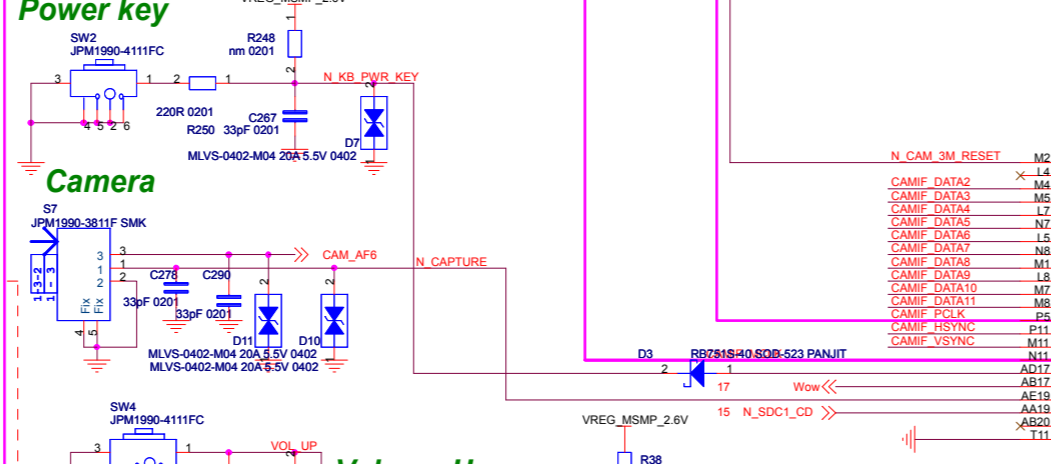
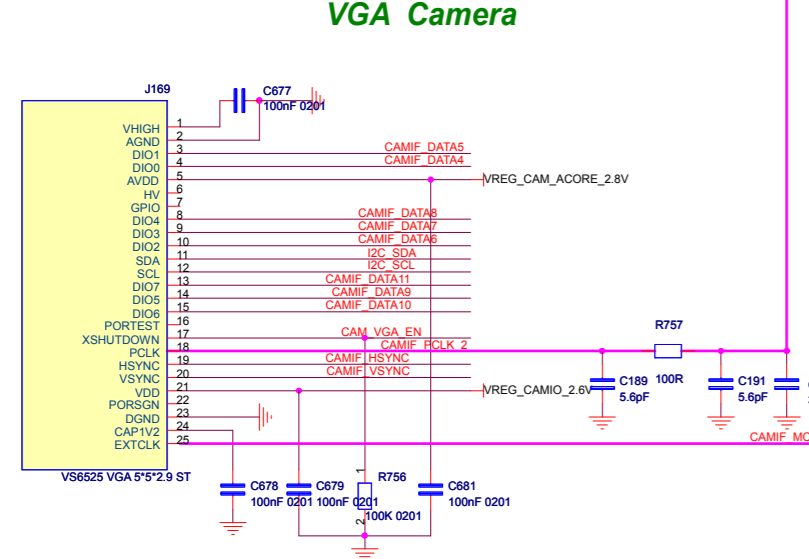
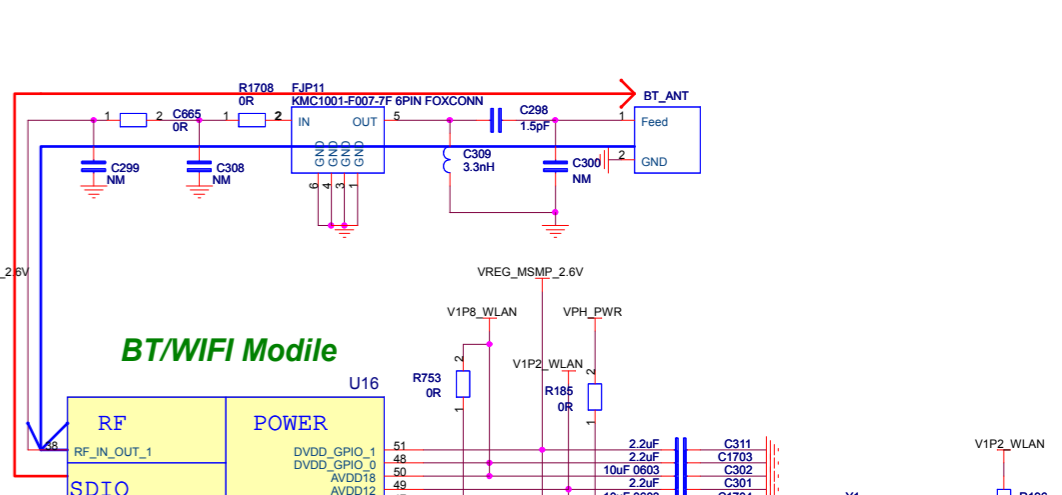
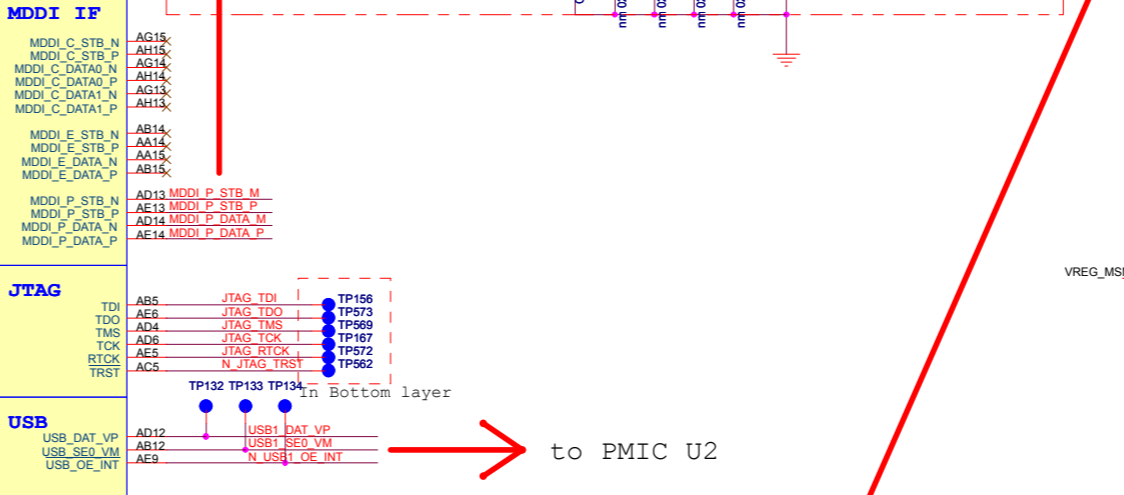
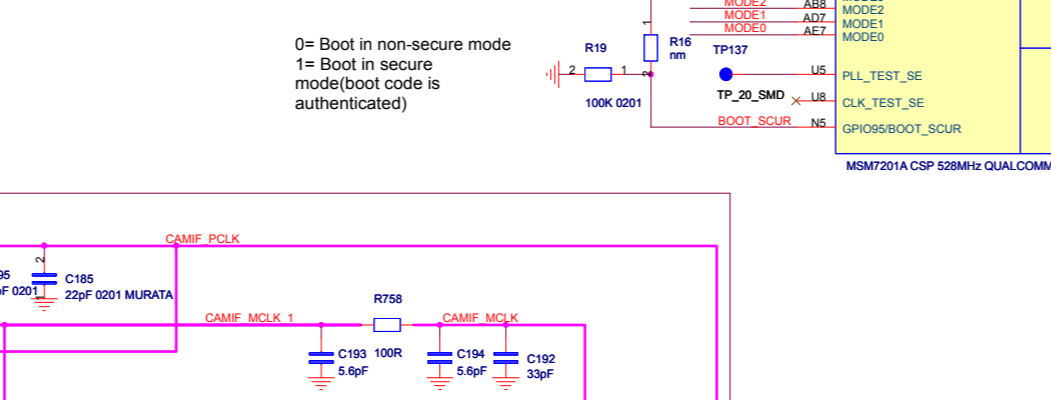
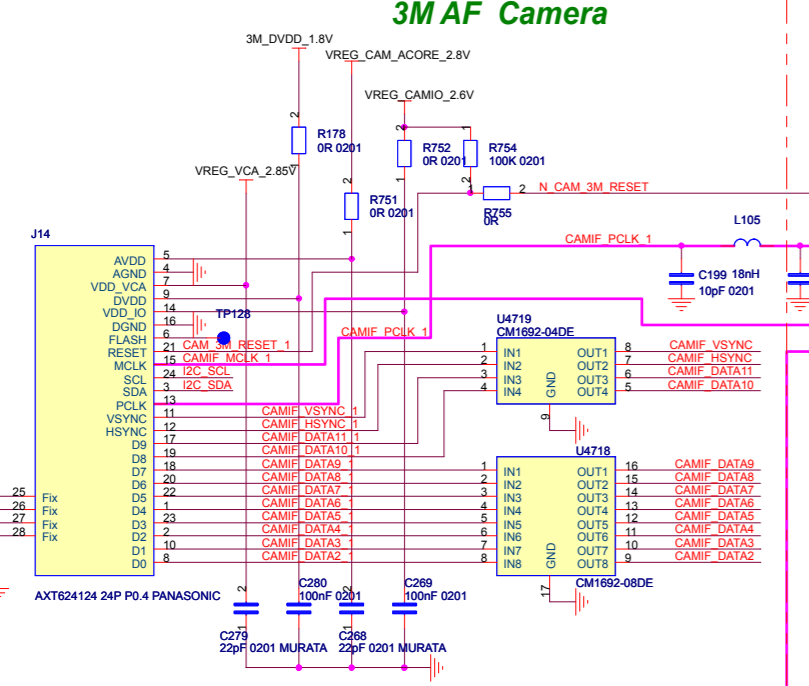
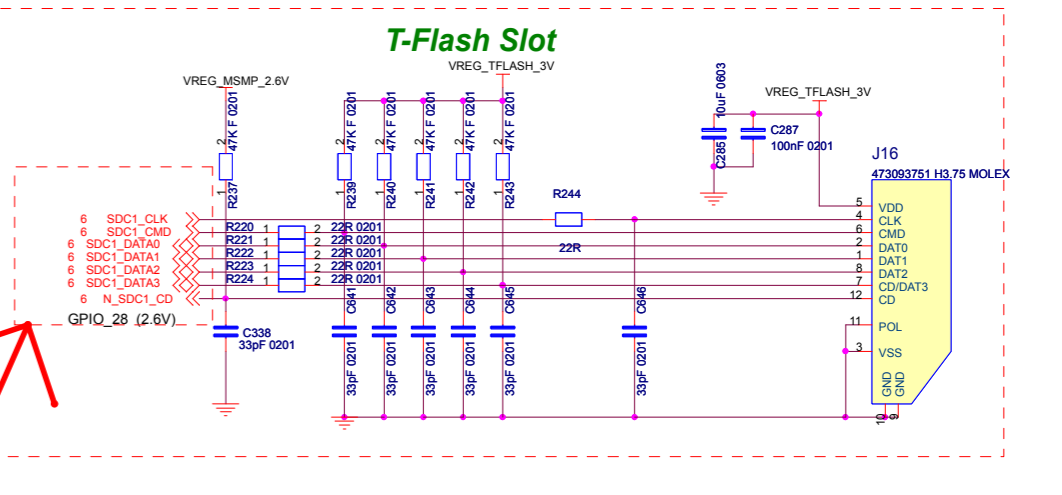
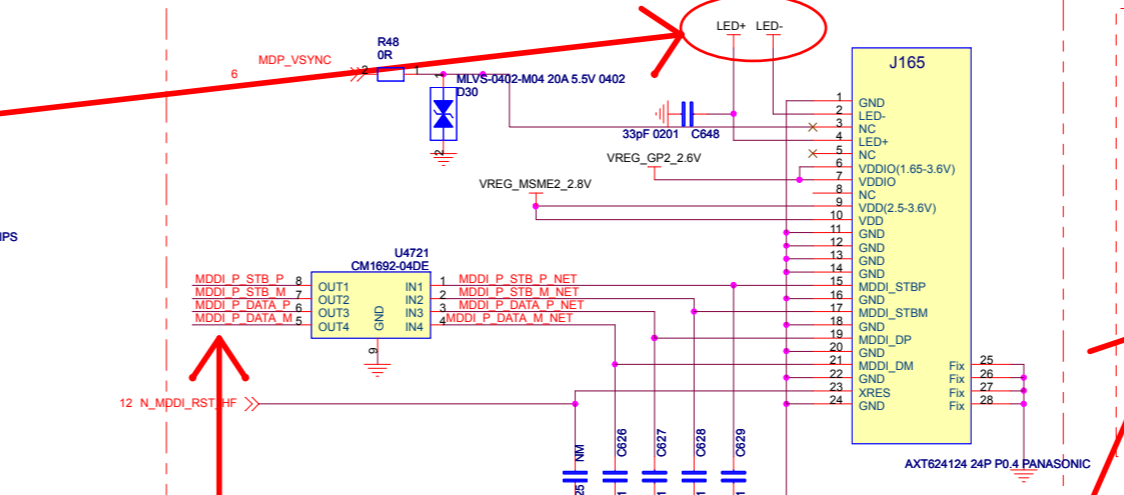
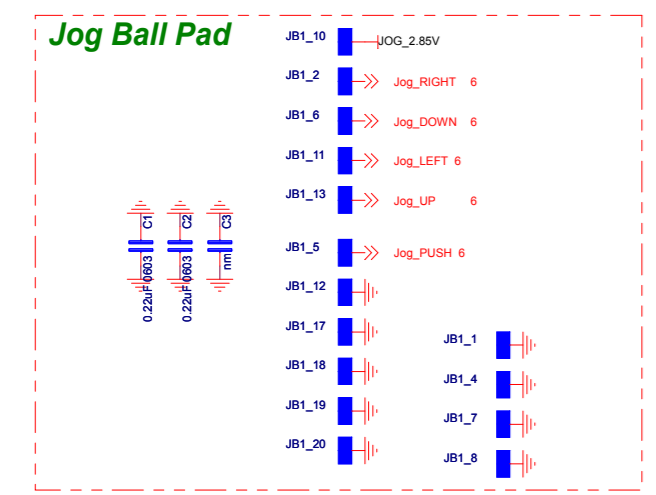



MODE1[1:0]	MSM7201 OPERATING MODE
0000	Normal
0001	Normal
0010	Normal
0011	Normal
0100	Normal
0101	Normal
0110	Normal
0111	Normal


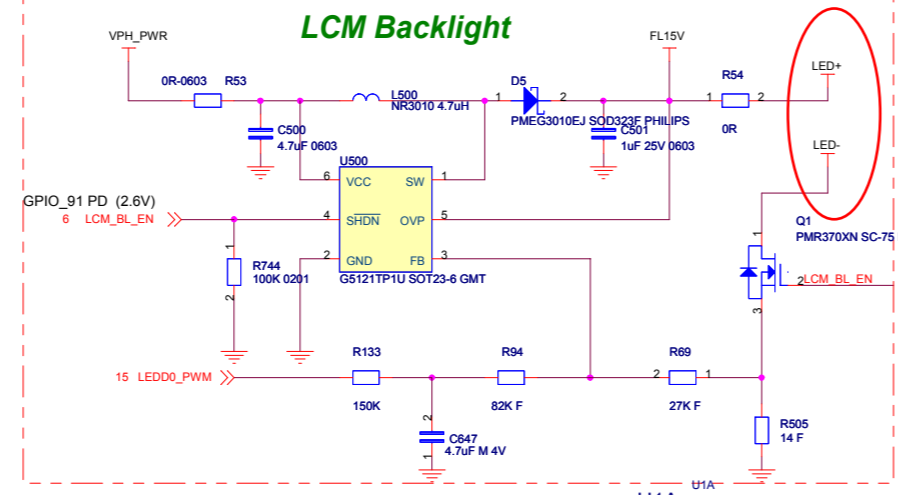


A3100

Repair Optimization Service Training Level 3 Authorized



Repair Optimization Service Training	2009.01.16
Level 3 Schematics	Rev. 1.0
A3100	
	Page 1 of 6

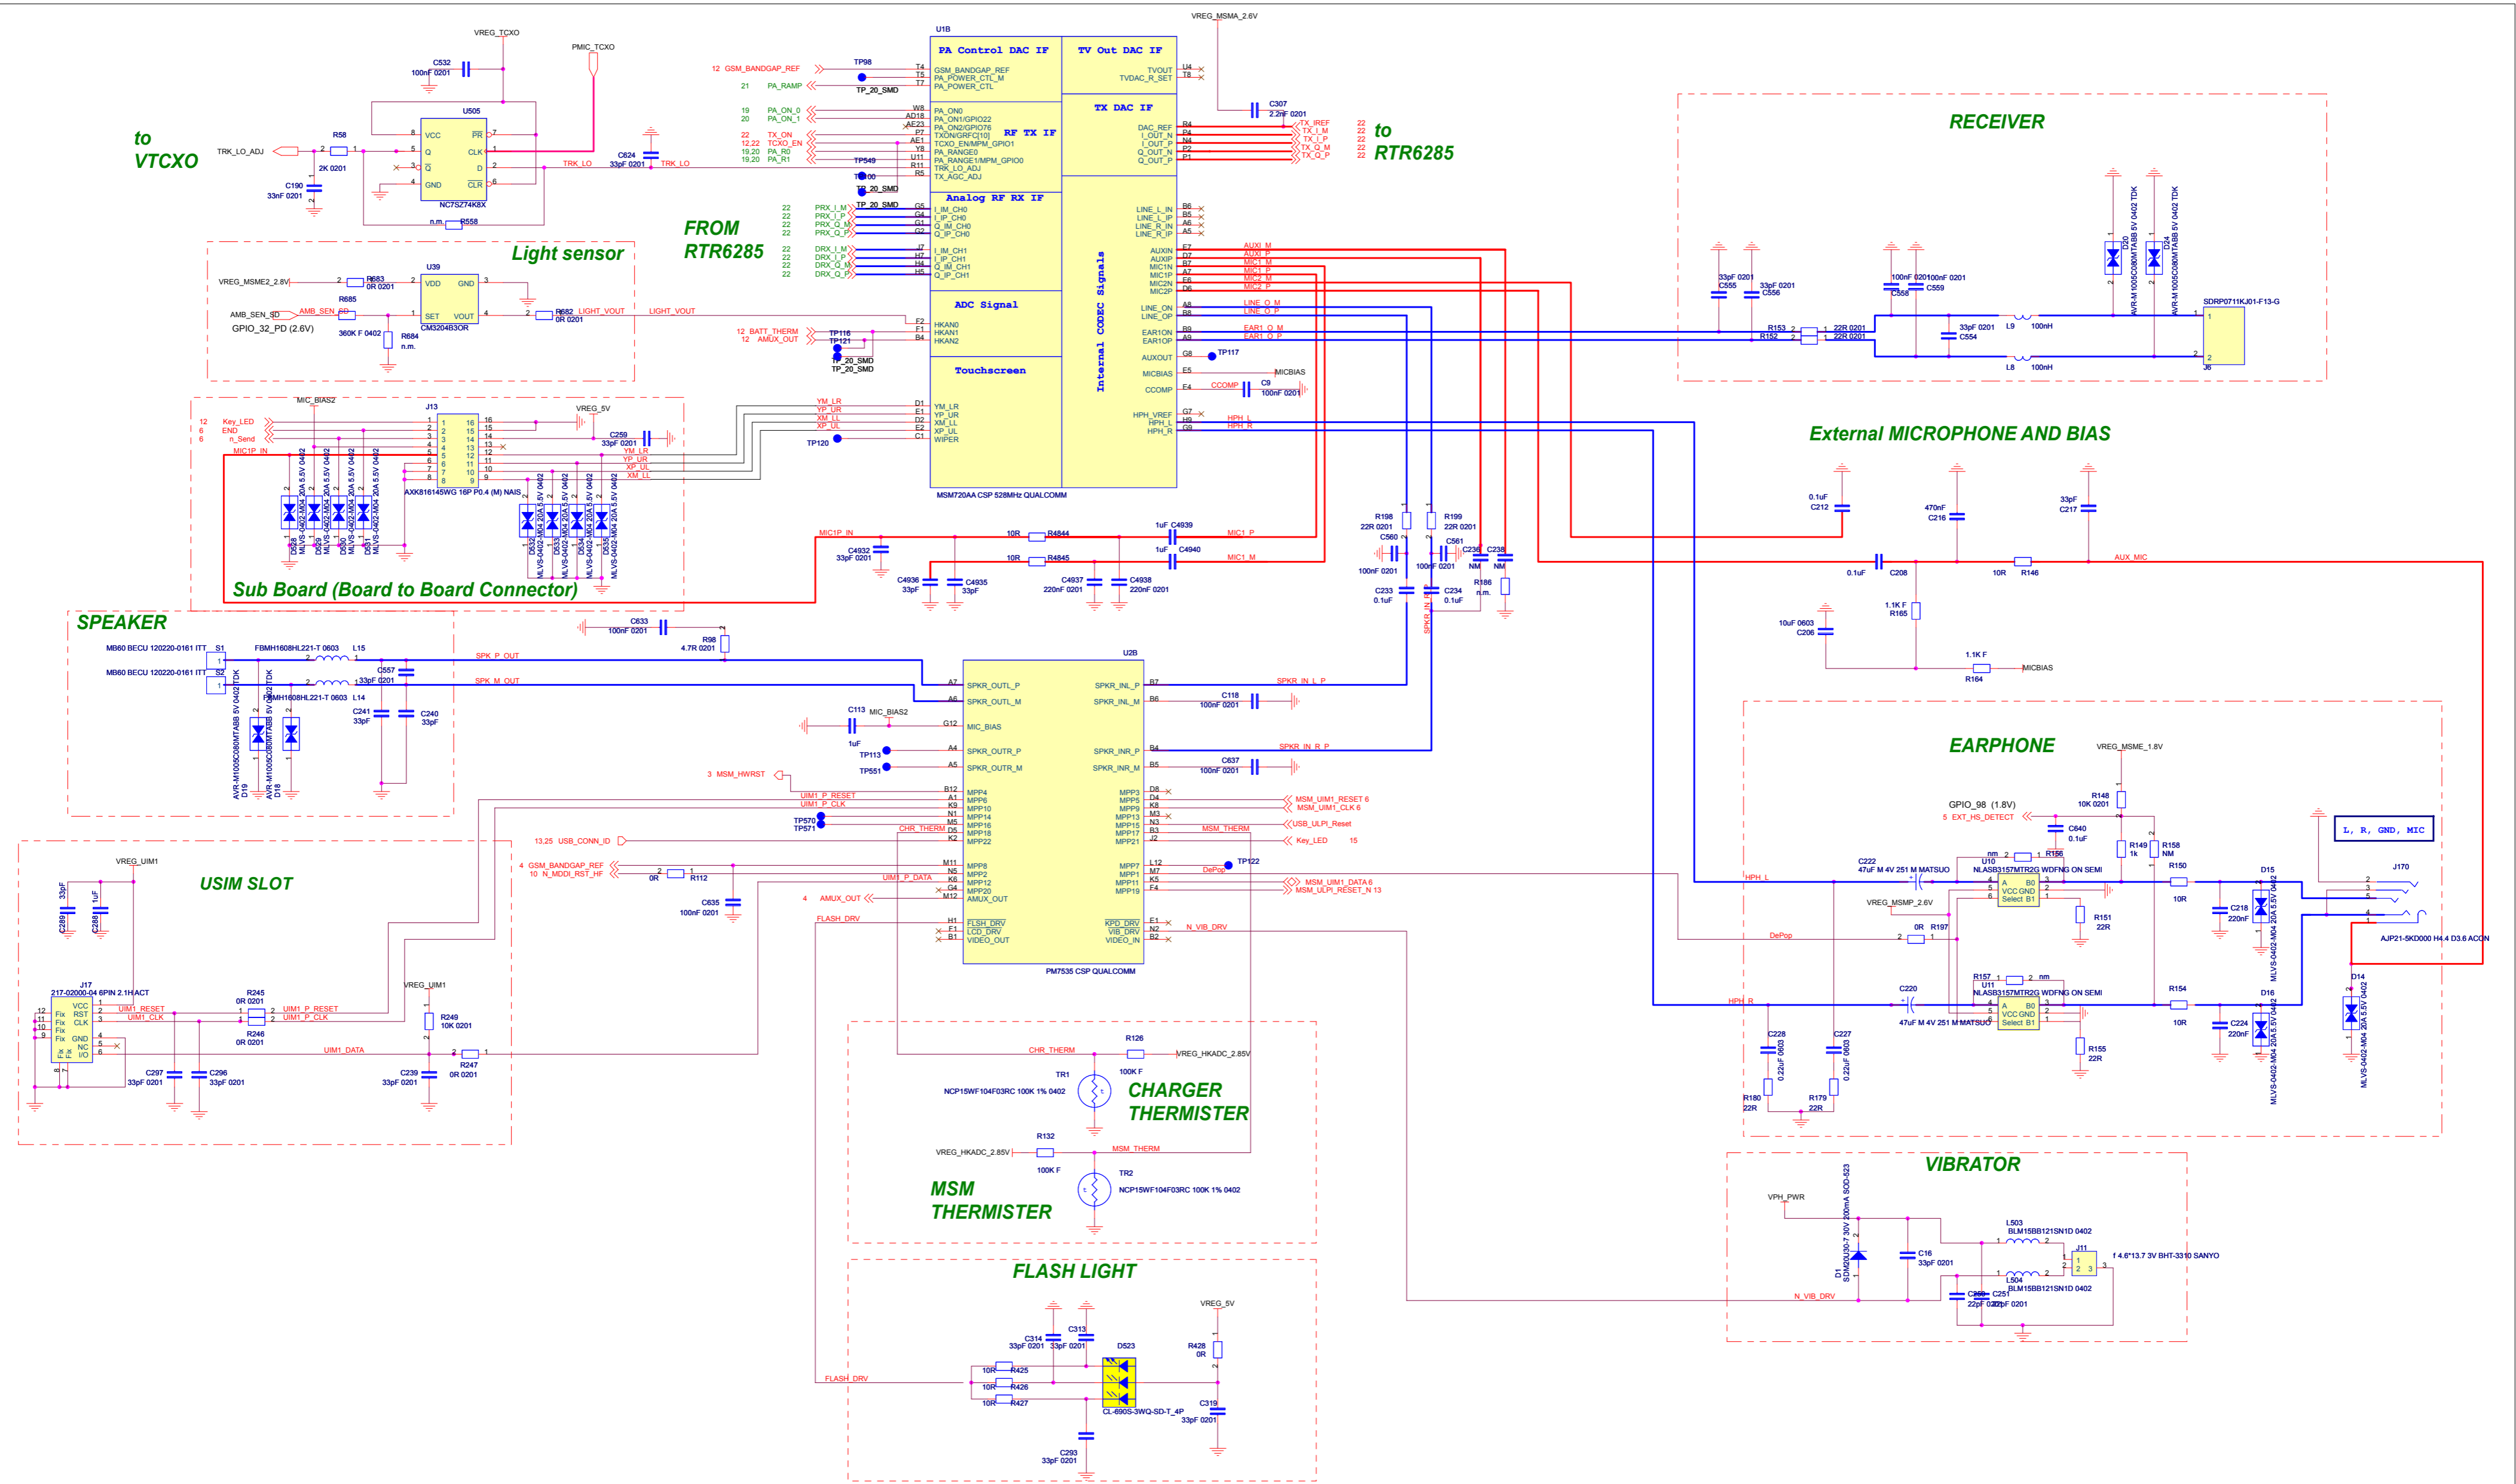

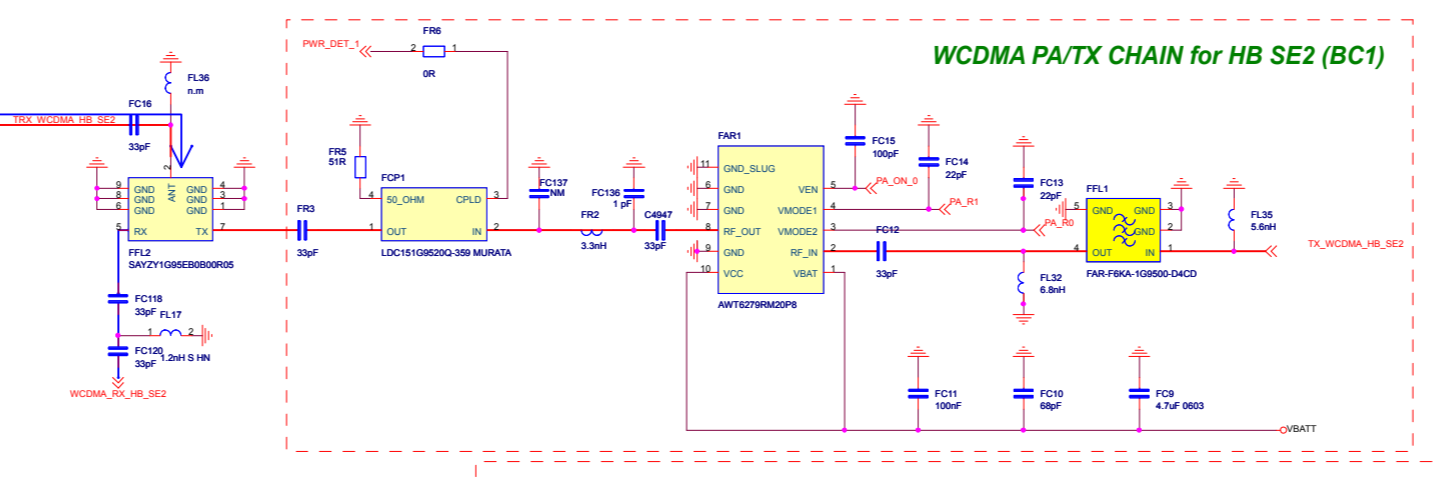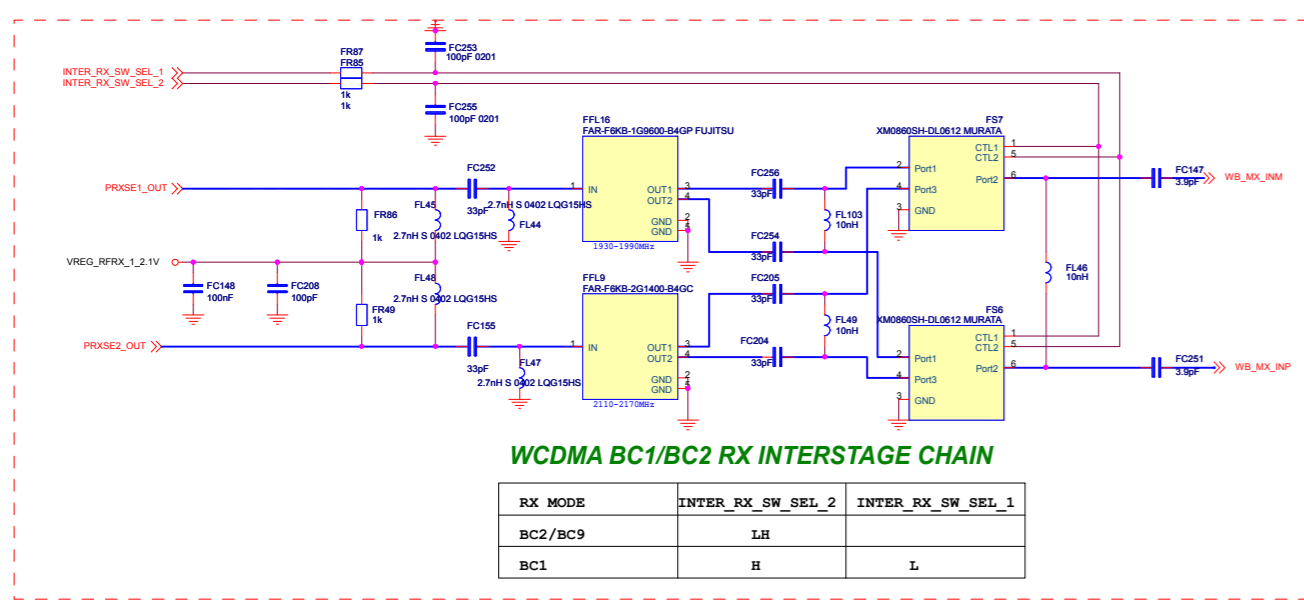





PA STATE	PA_ON_2
OFF	L
ON	H







POWER MODE	PA_R0	PA_R1
LOW POWER	H	H
MEDIUM POWER	L	H
HIGH POWER	L	L

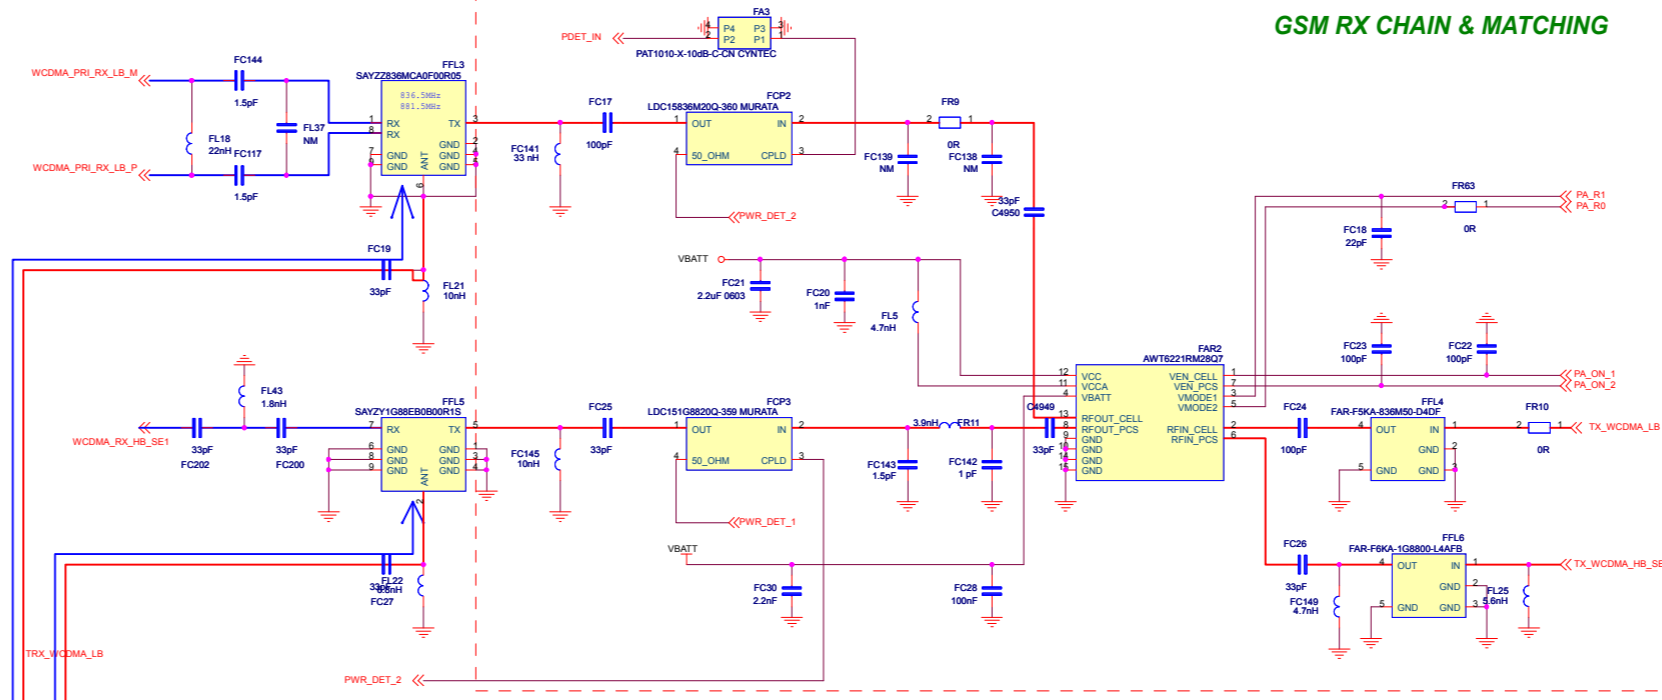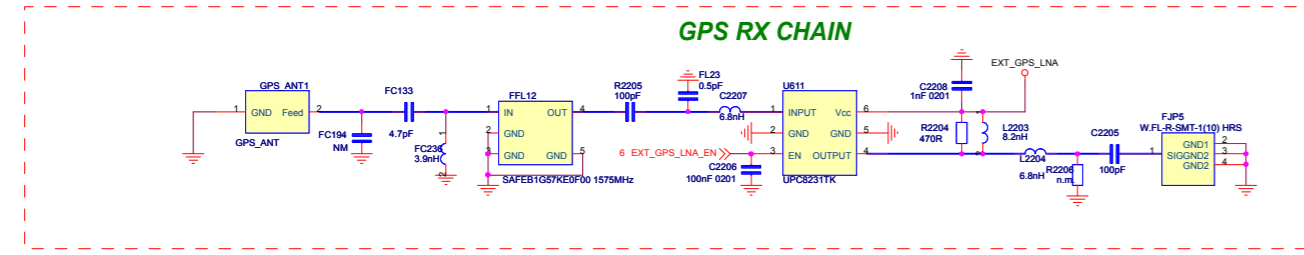

PRIMARY ANTENNA & SWITCHPLEXER

MODE	ANT_SEL0	ANT_SEL1	ANT_SEL2	ANT_SEL3
GSM850/EGSM TX	H	H	L	L
DCS/PCS TX	H	L	L	L
GSM850 RX	L	L	H	L
EGSM900 RX	L	H	H	L
DCS1800 RX	L	L	H	L
PCS1900 RX	L	L	L	L
WCDMA_1700 (S)	H	H	H	H
WCDMA_800 (D)	H	L	H	L
WCDMA_2100 (S)	H	H	H	L
WCDMA_1900 (D)	H	L	H	H

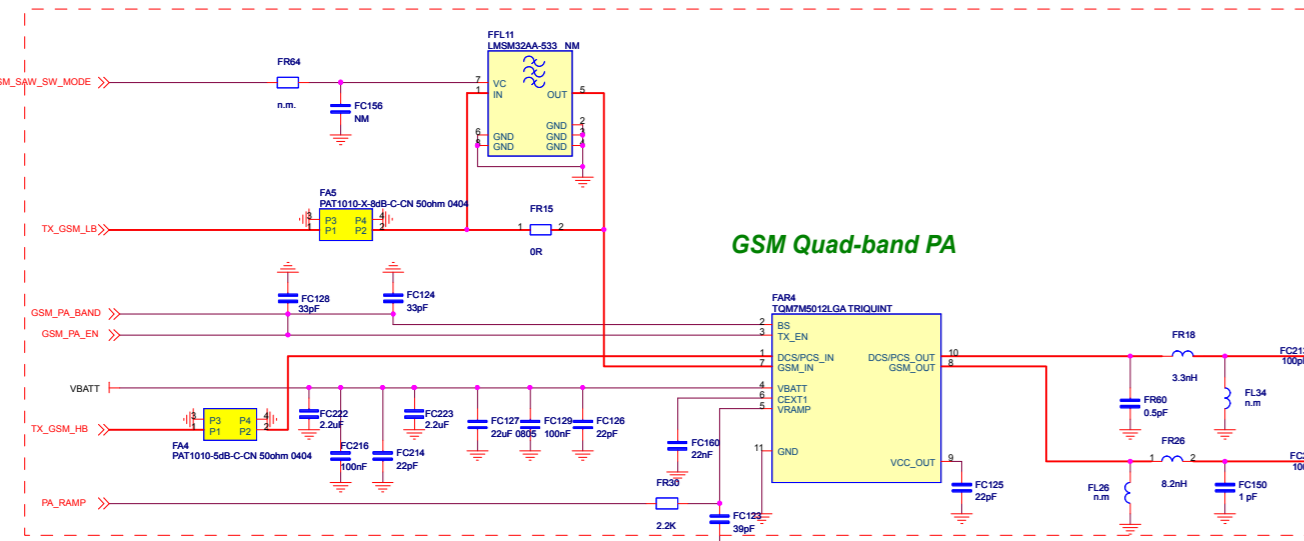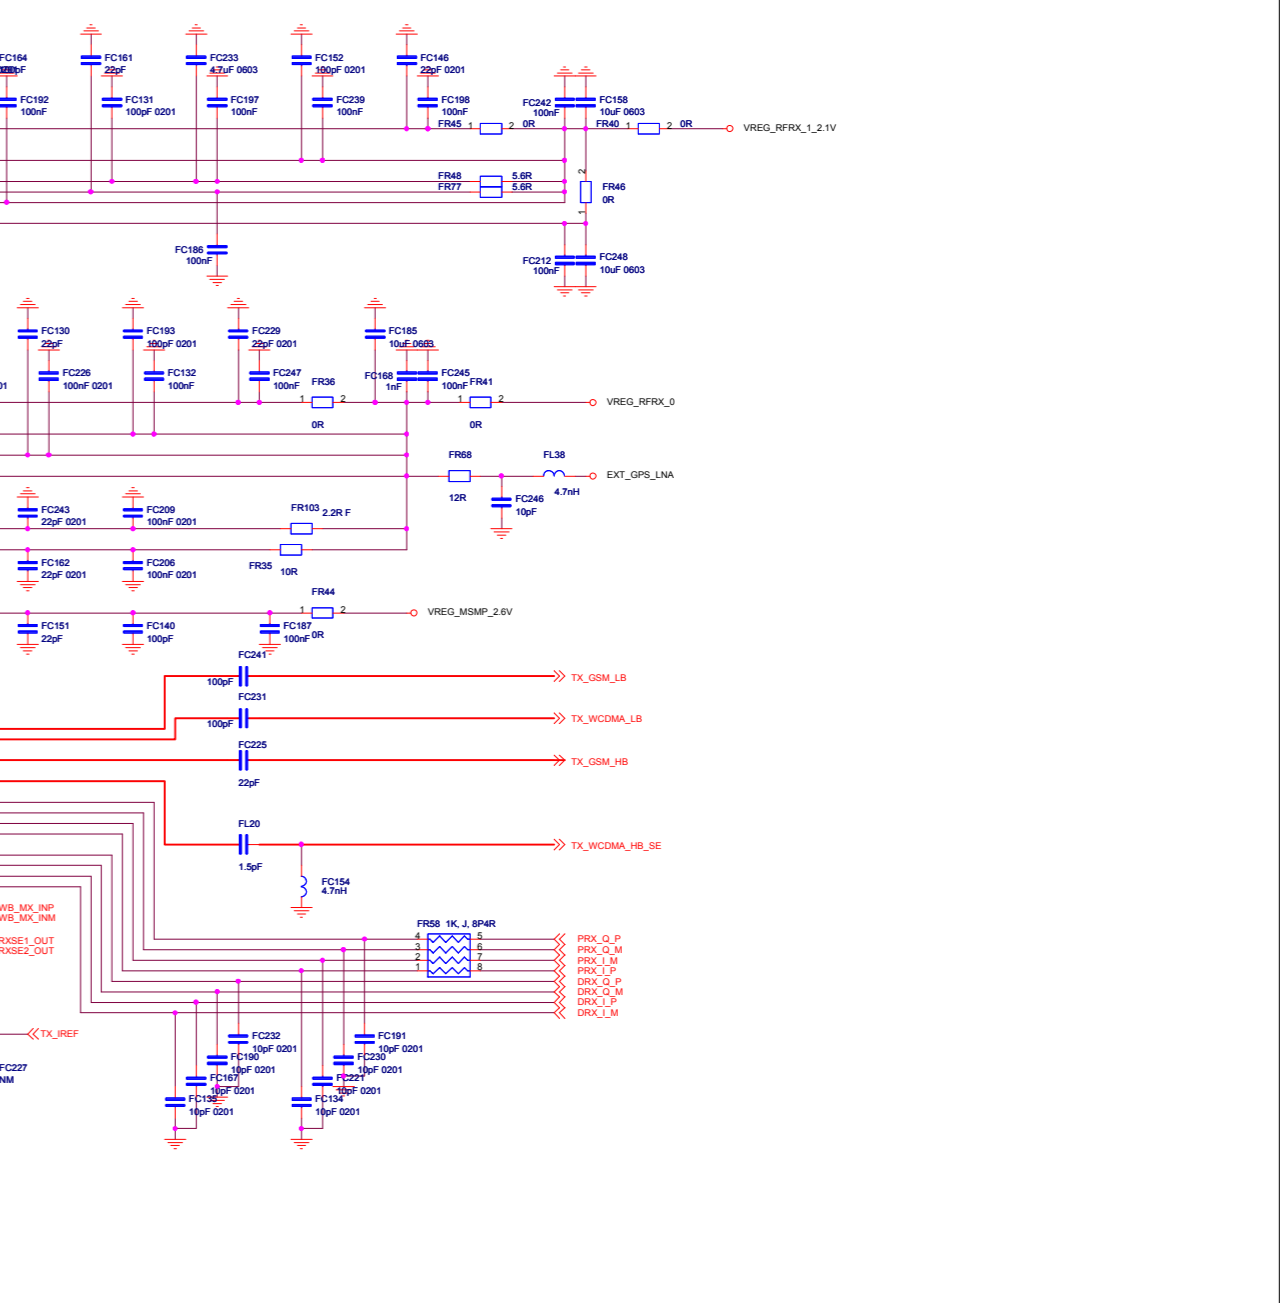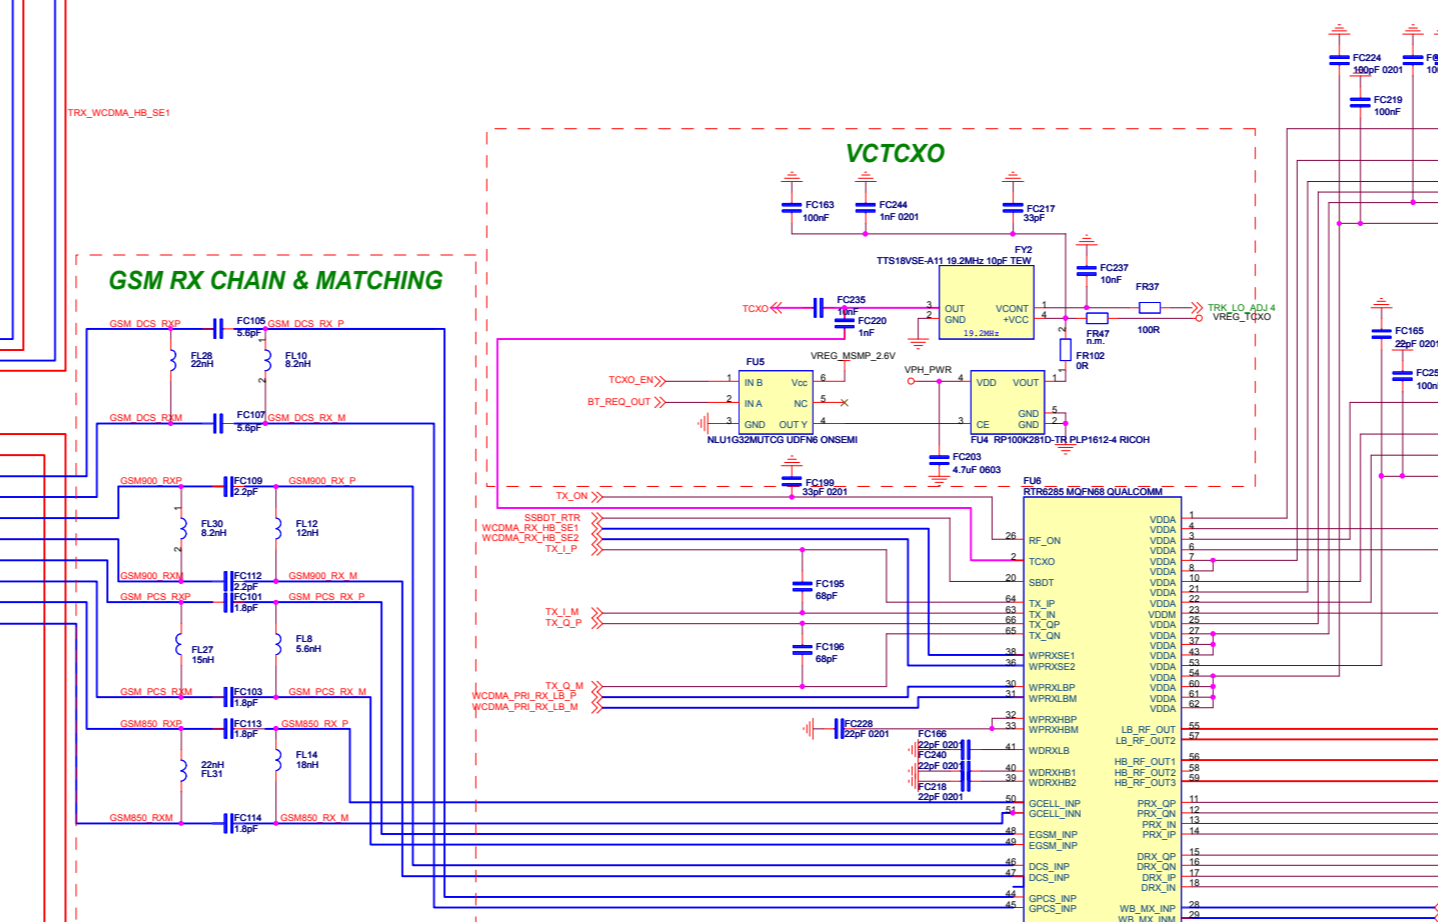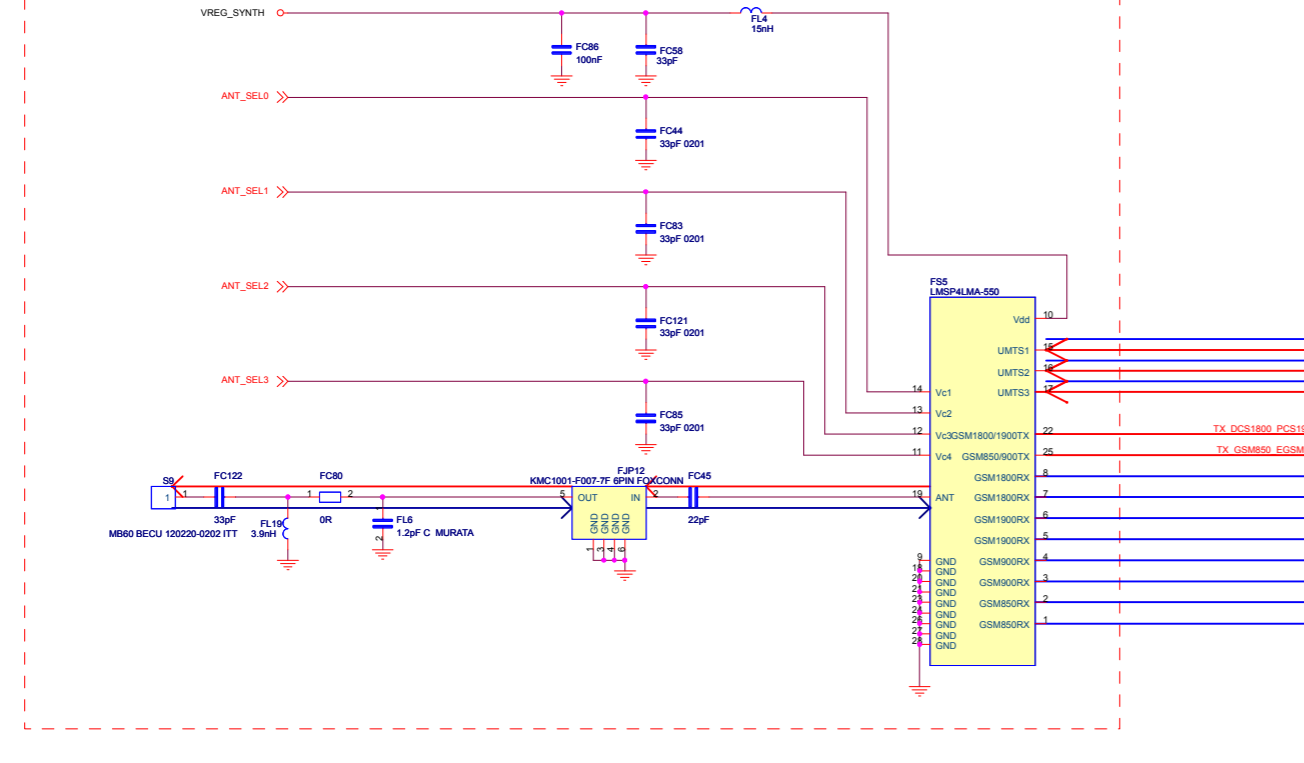


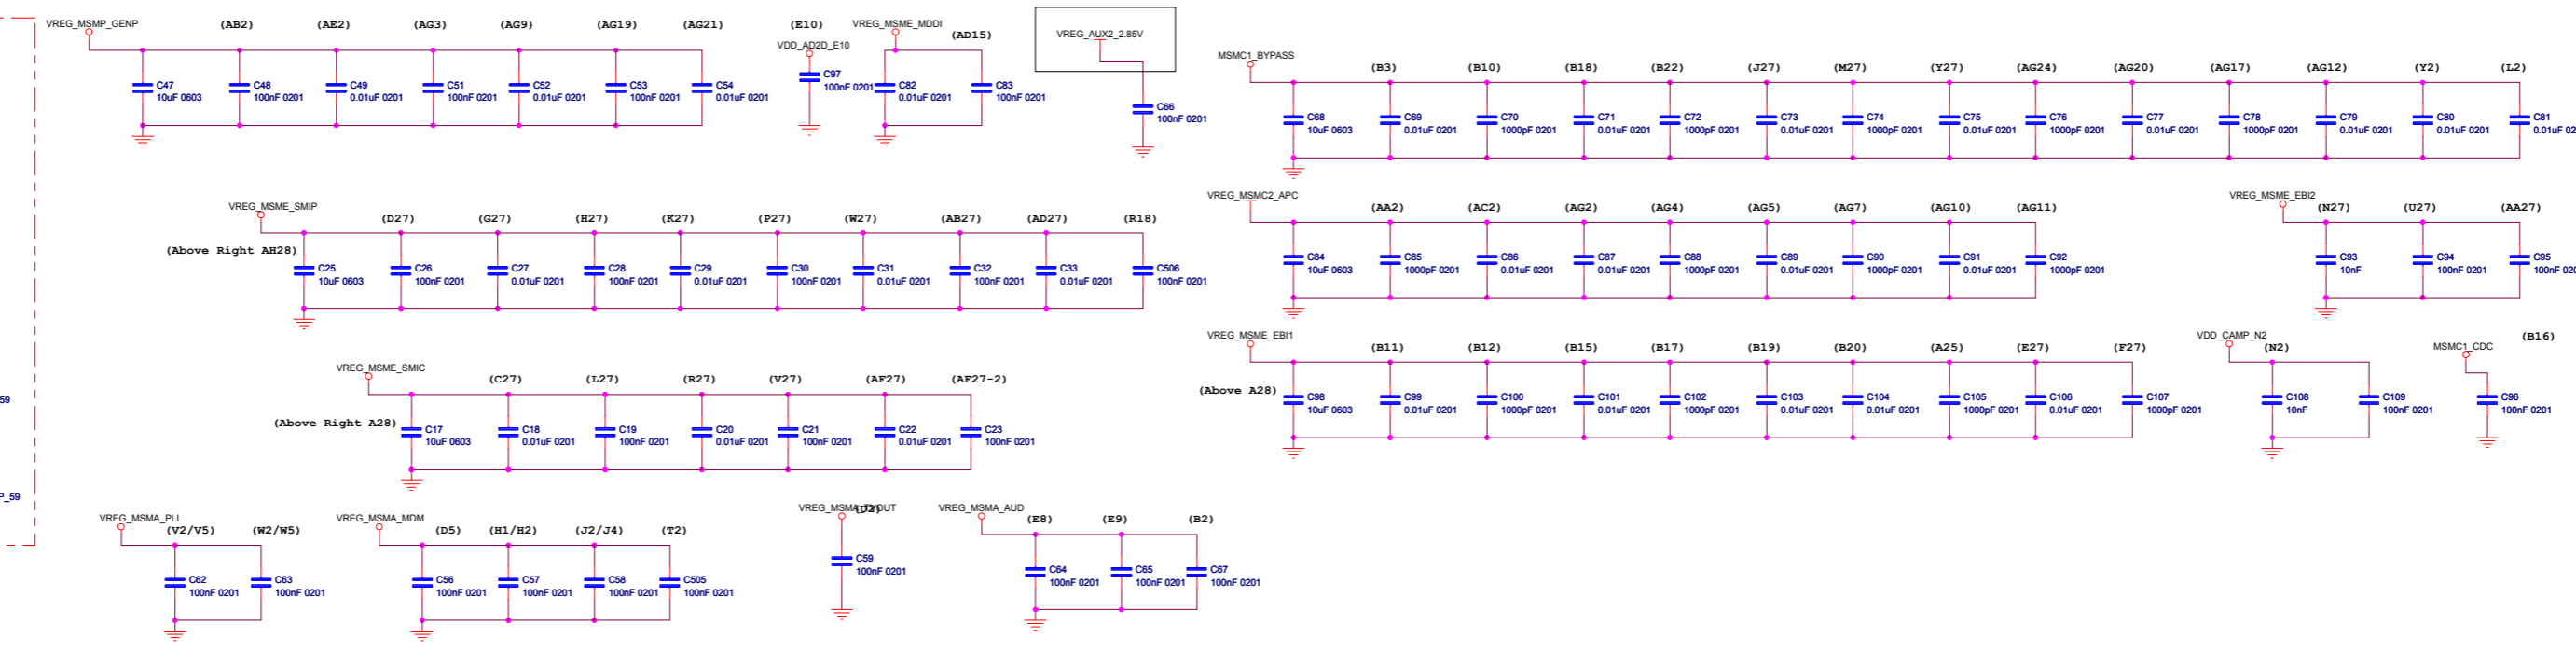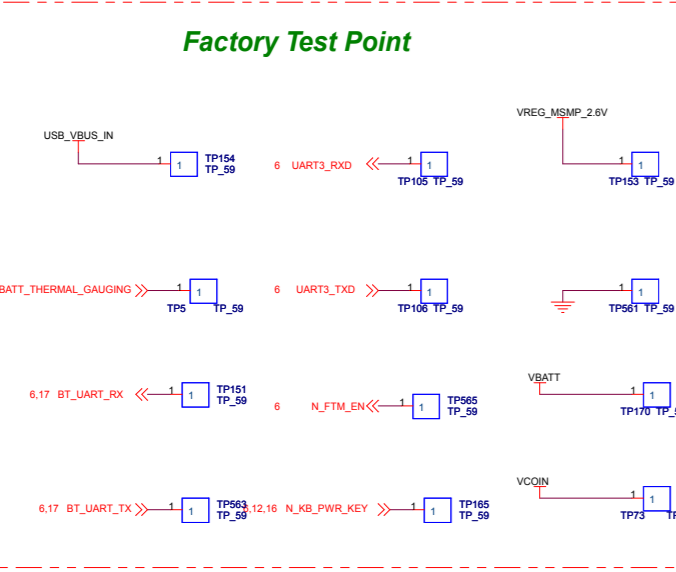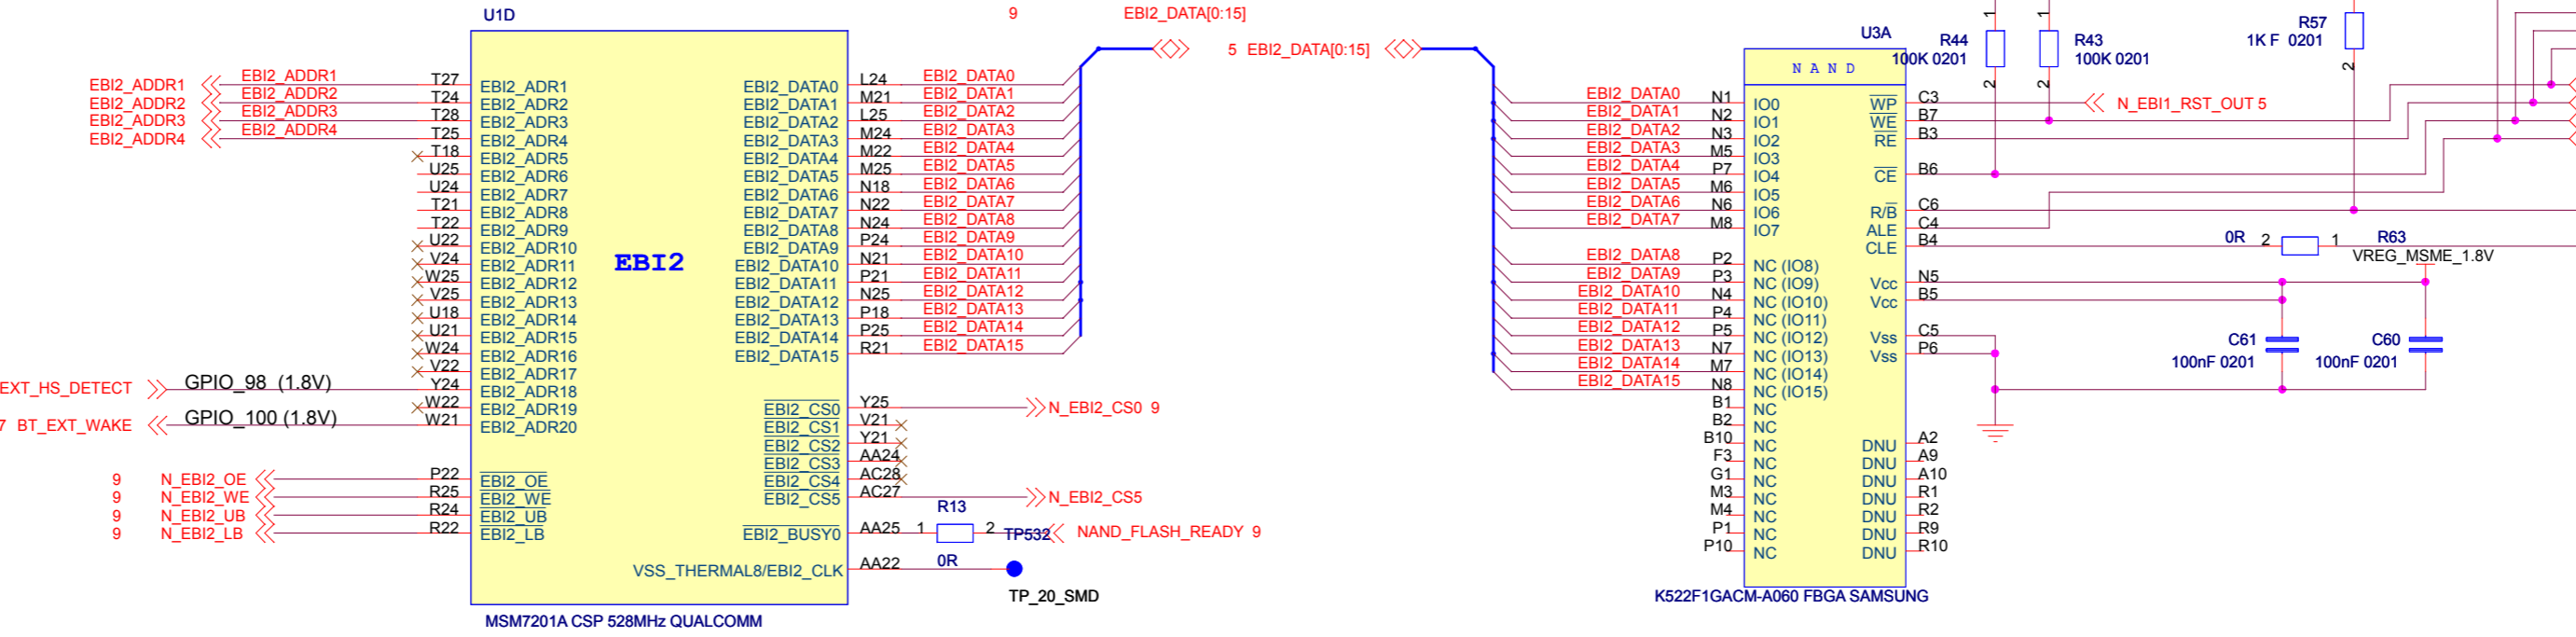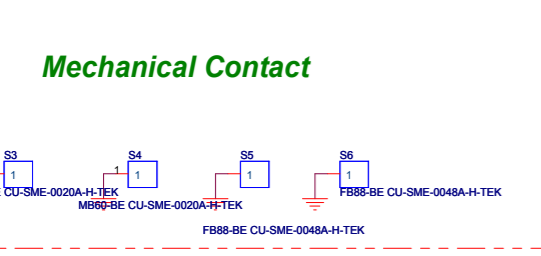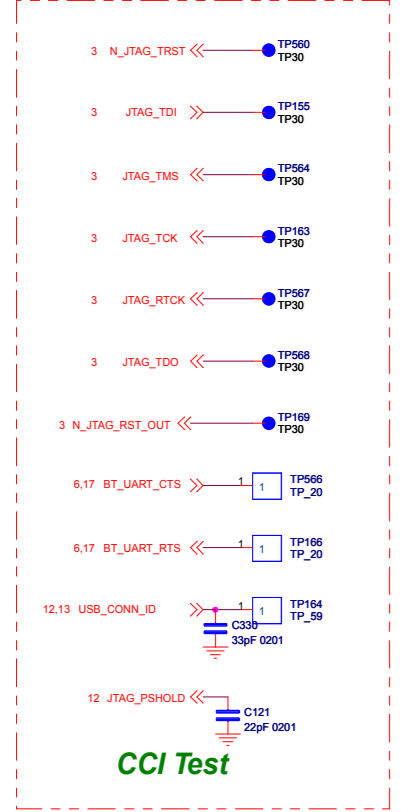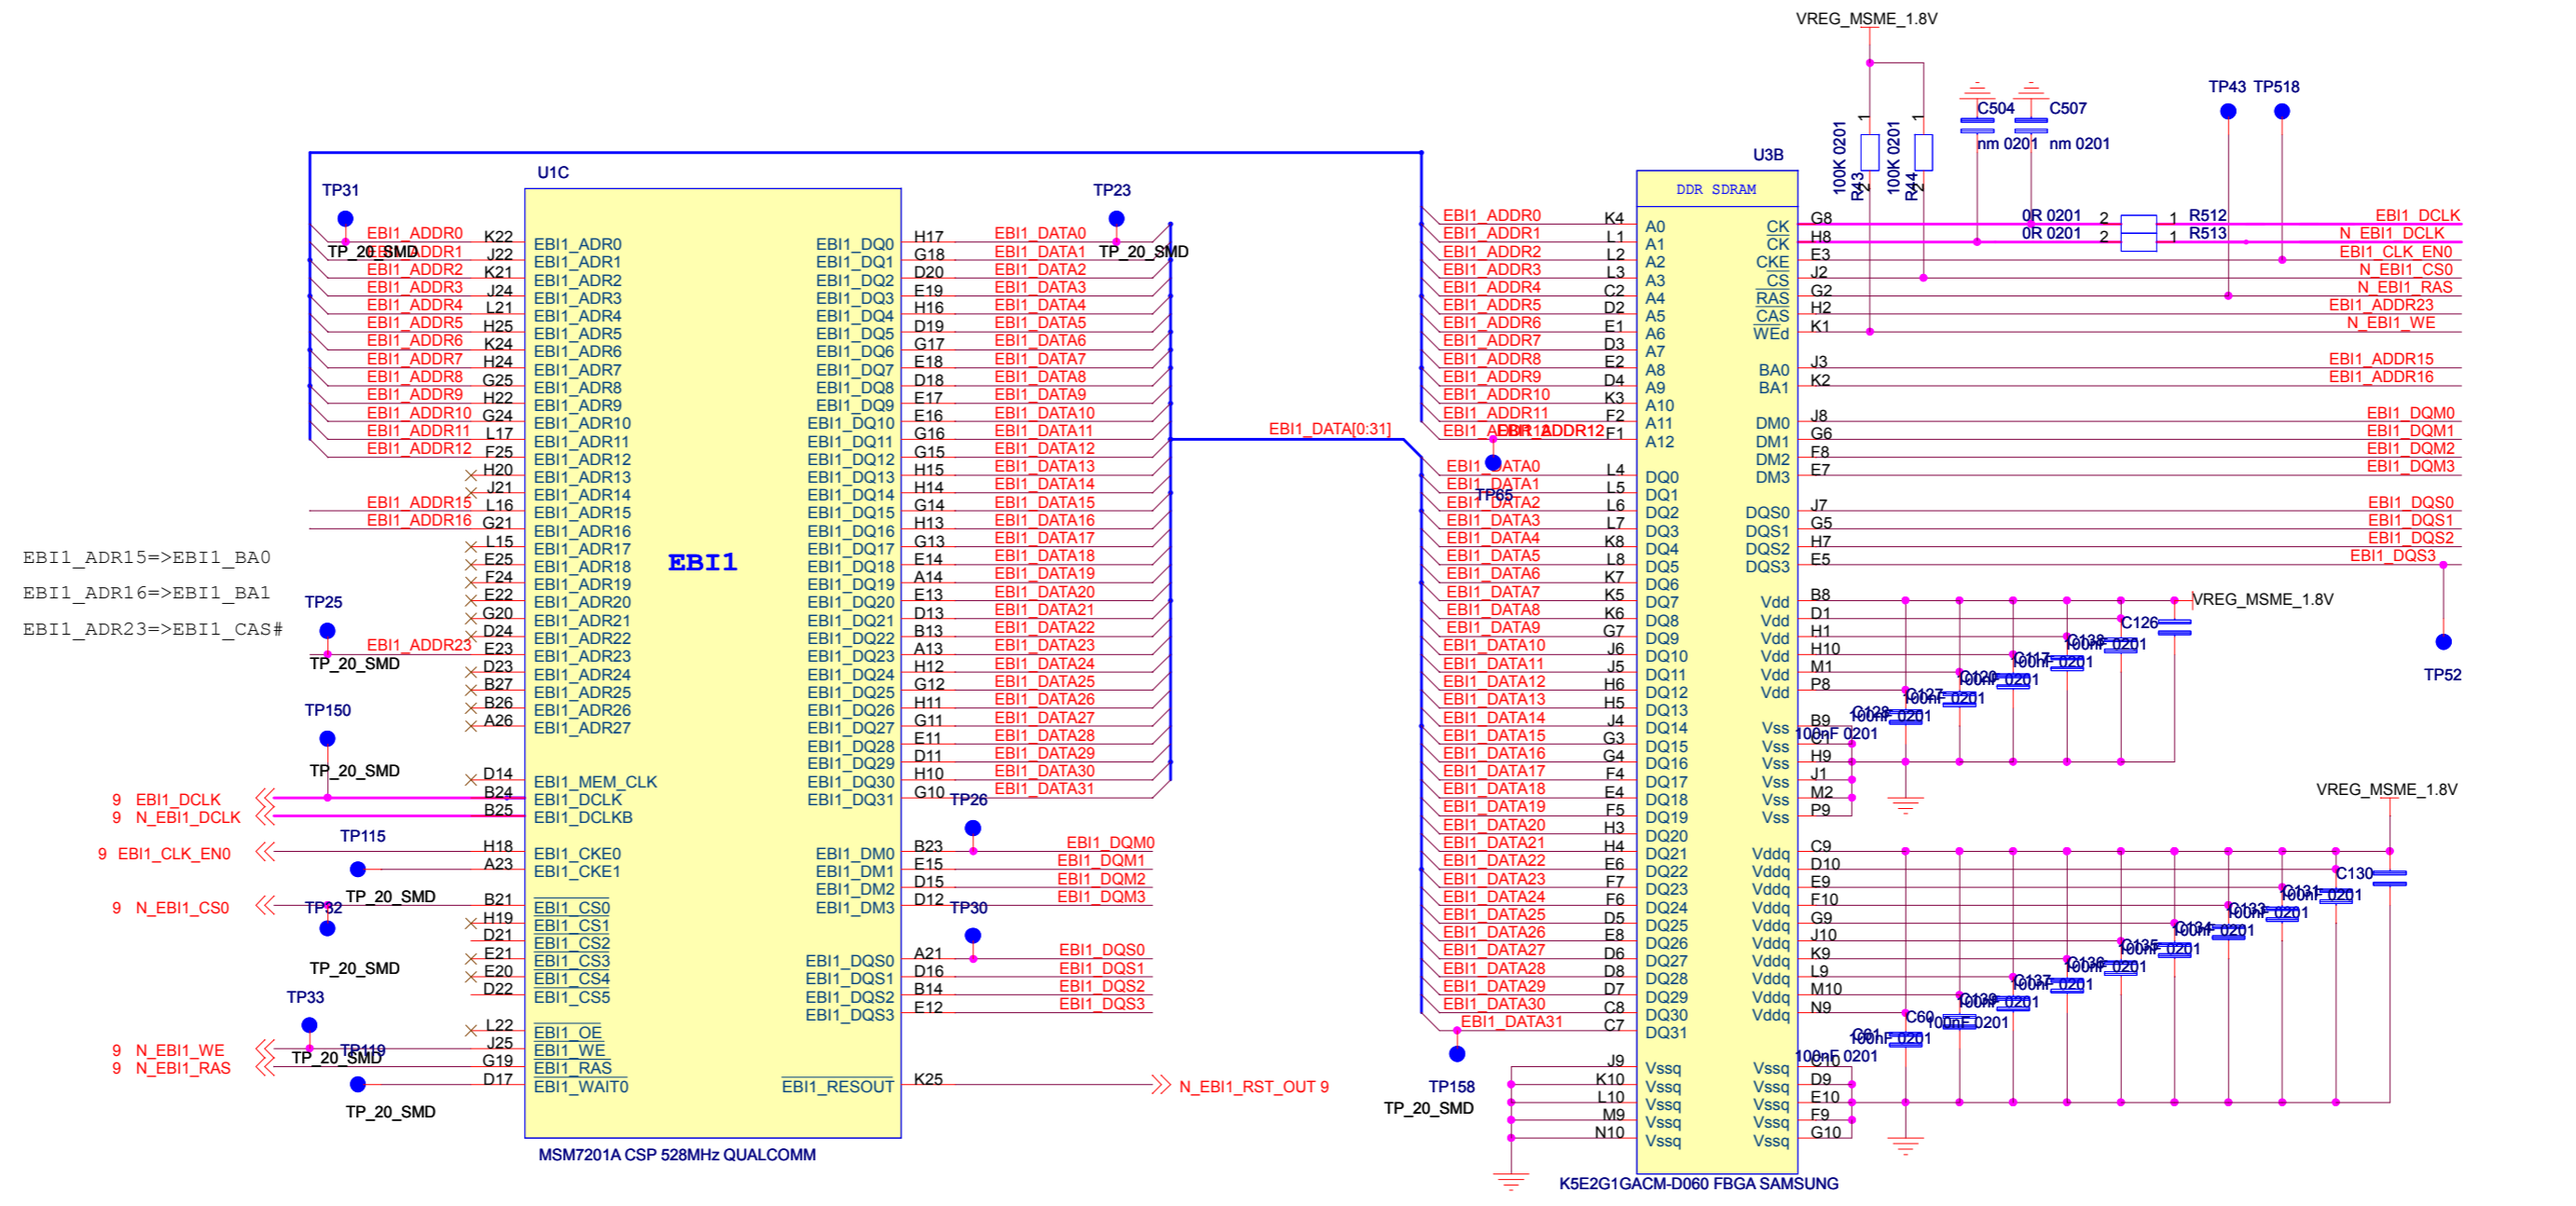

A3100

Repair Optimization Service Training
Level 3 Authorized


Repair Optimization Service Training	2009.01.16
Level 3 Schematics	Rev. 1.0
A3100	
	Page 4 of 6

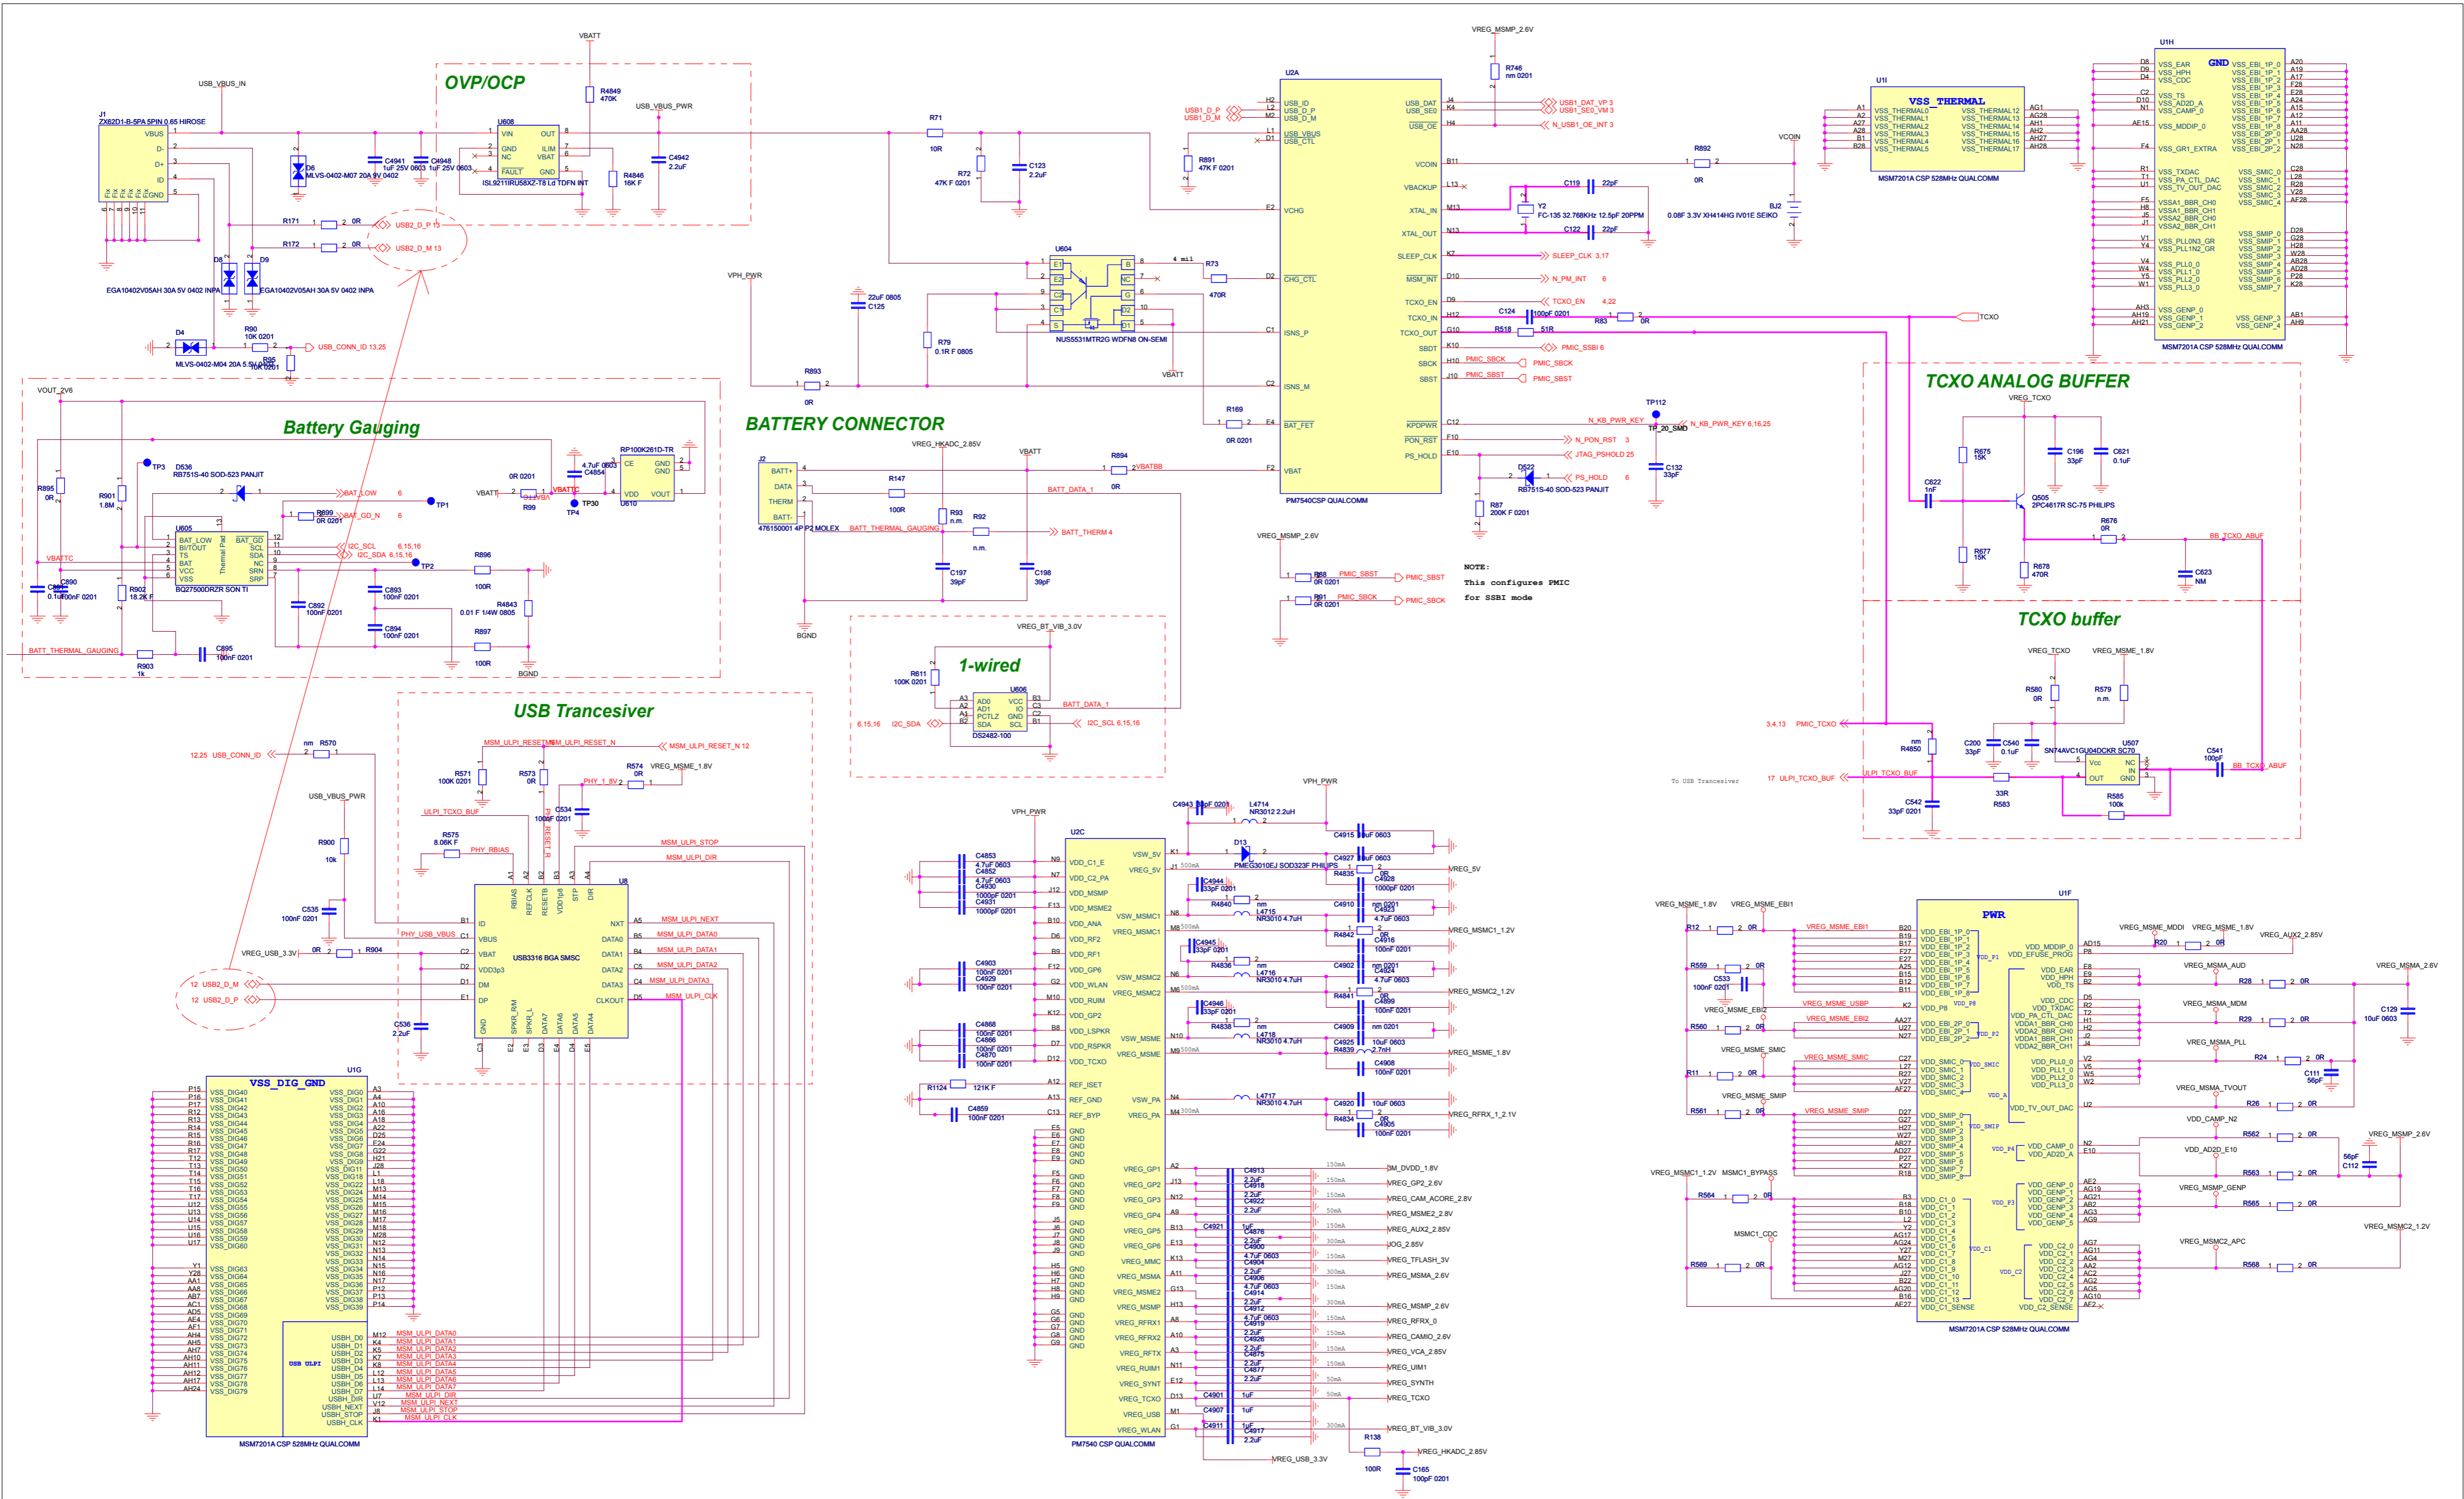



A3100

Repair Optimization Service Training
Level 3 Authorized



Repair Optimization Service Training	2009.01.16
Level 3 Schematics	Rev. 1.0
A3100	Page 5 of 6

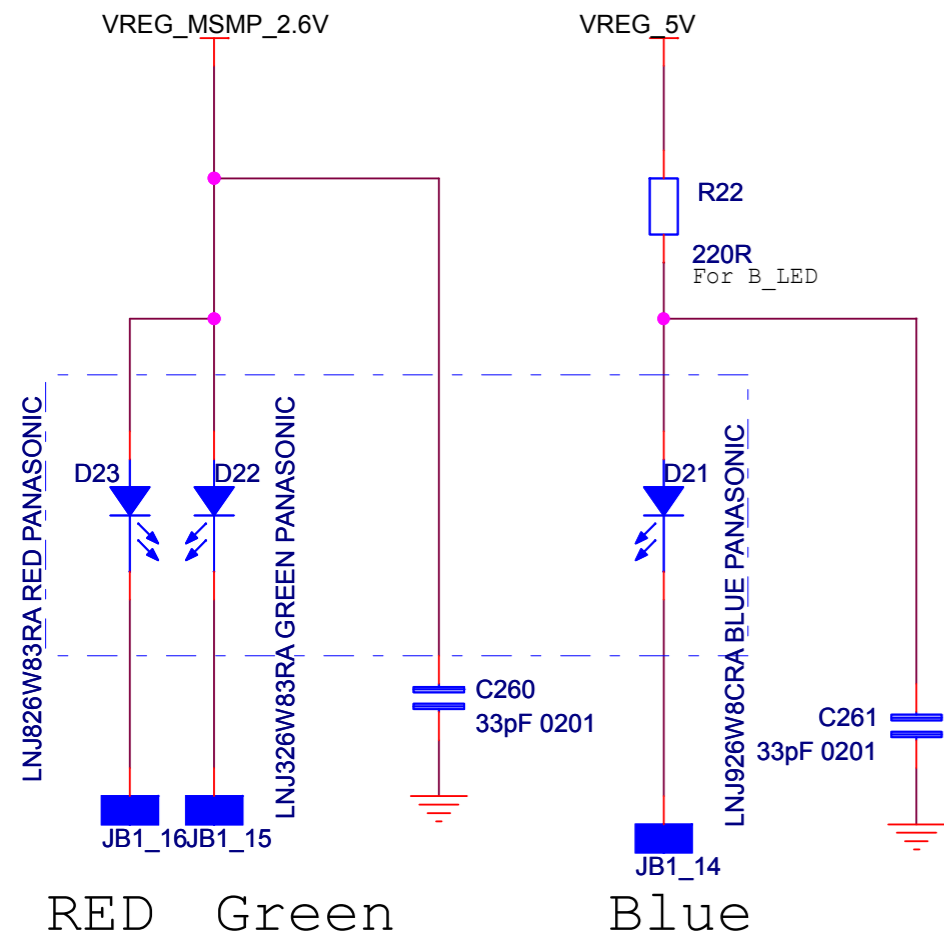


RED Green Blue

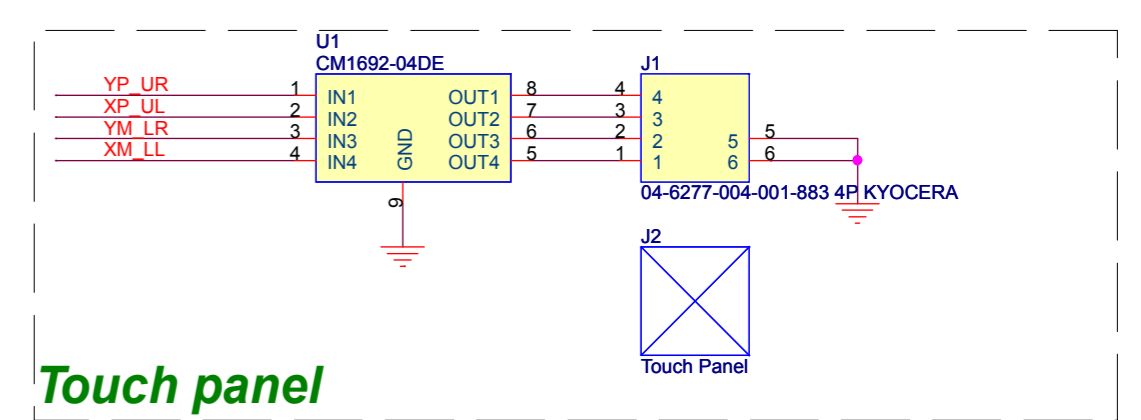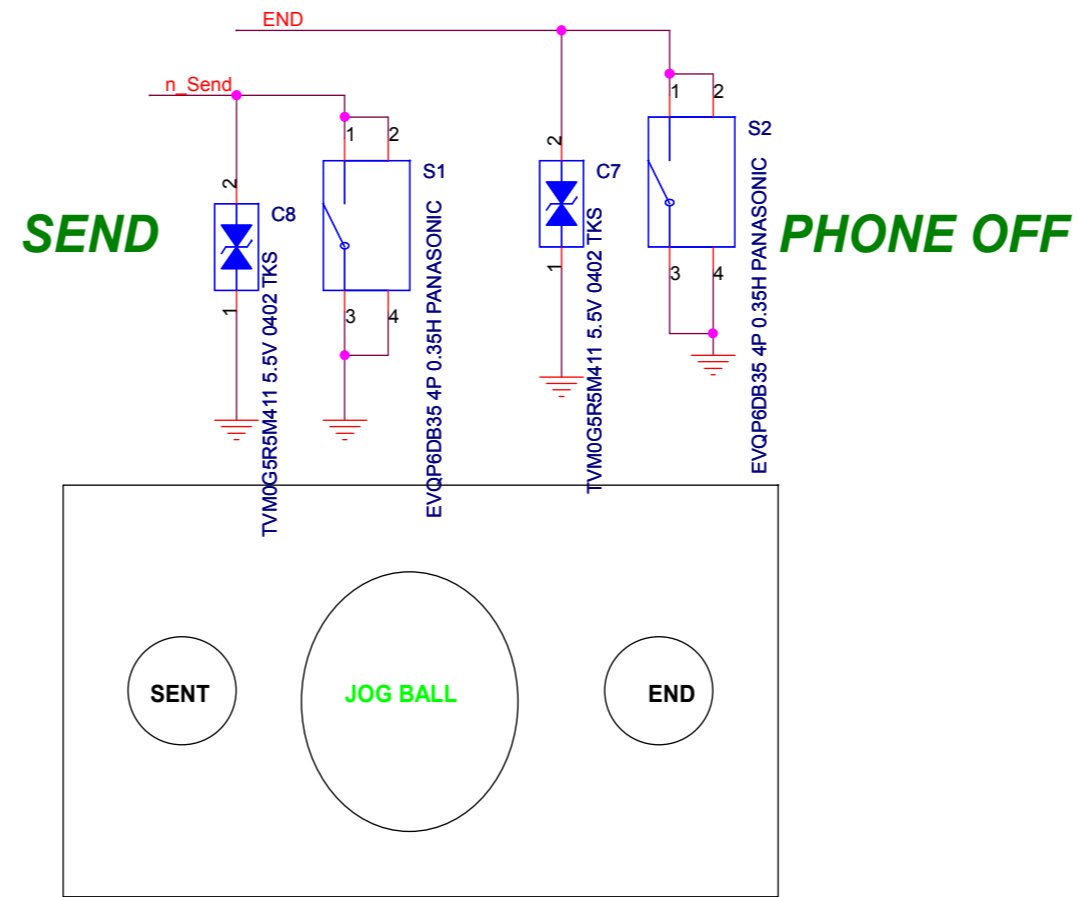


Touch panel

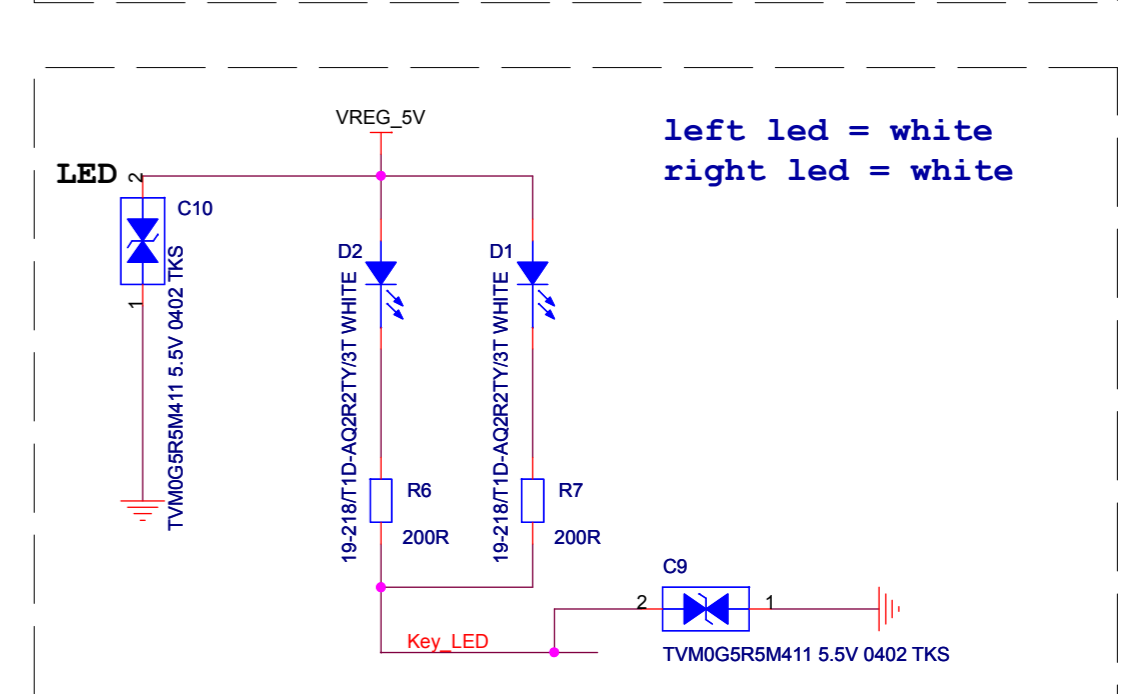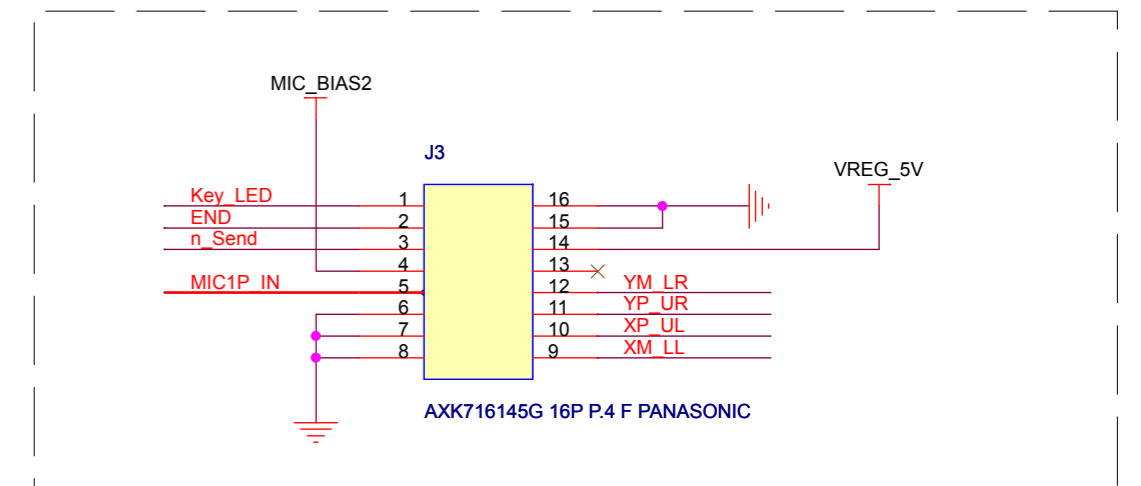


left led = white
right led = white

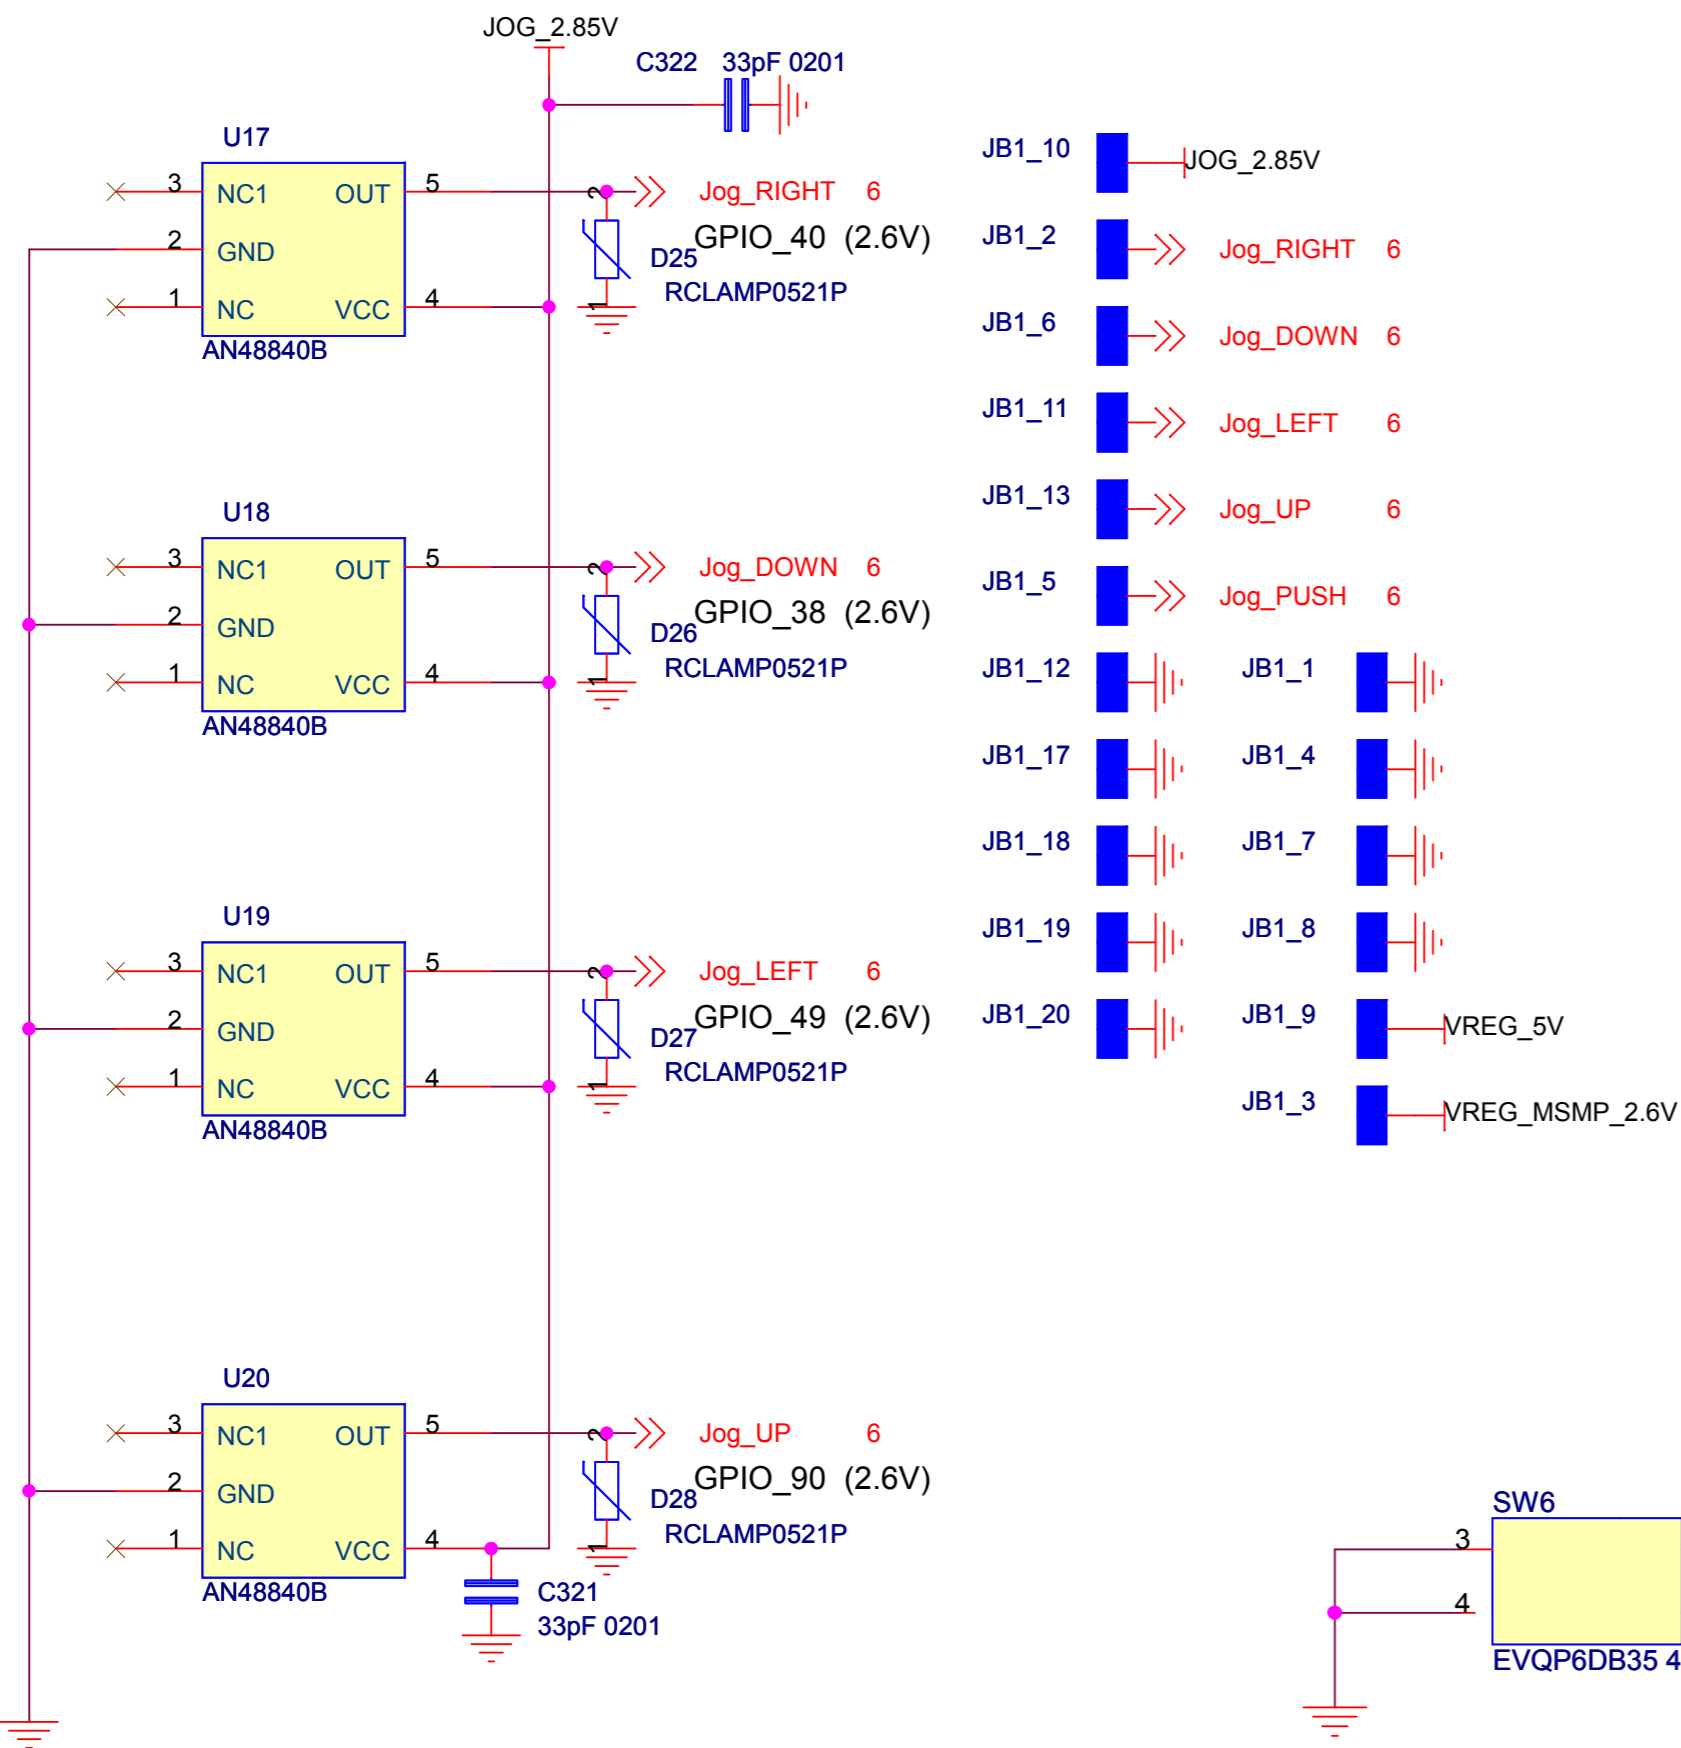

- JB1_10 JOG_2.85V
- JB1_2 JOG_RIGHT 6
- JB1_6 JOG_DOWN 6
- JB1_11 JOG_LEFT 6
- JB1_13 JOG_UP 6
- JB1_5 JOG_PUSH 6
- JB1_12 JB1_1
- JB1_17 JB1_4
- JB1_18 JB1_7
- JB1_19 JB1_8
- JB1_20 JB1_9
- JB1_3 VREG_5V
- JB1_3 VREG_MSMP_2.6V

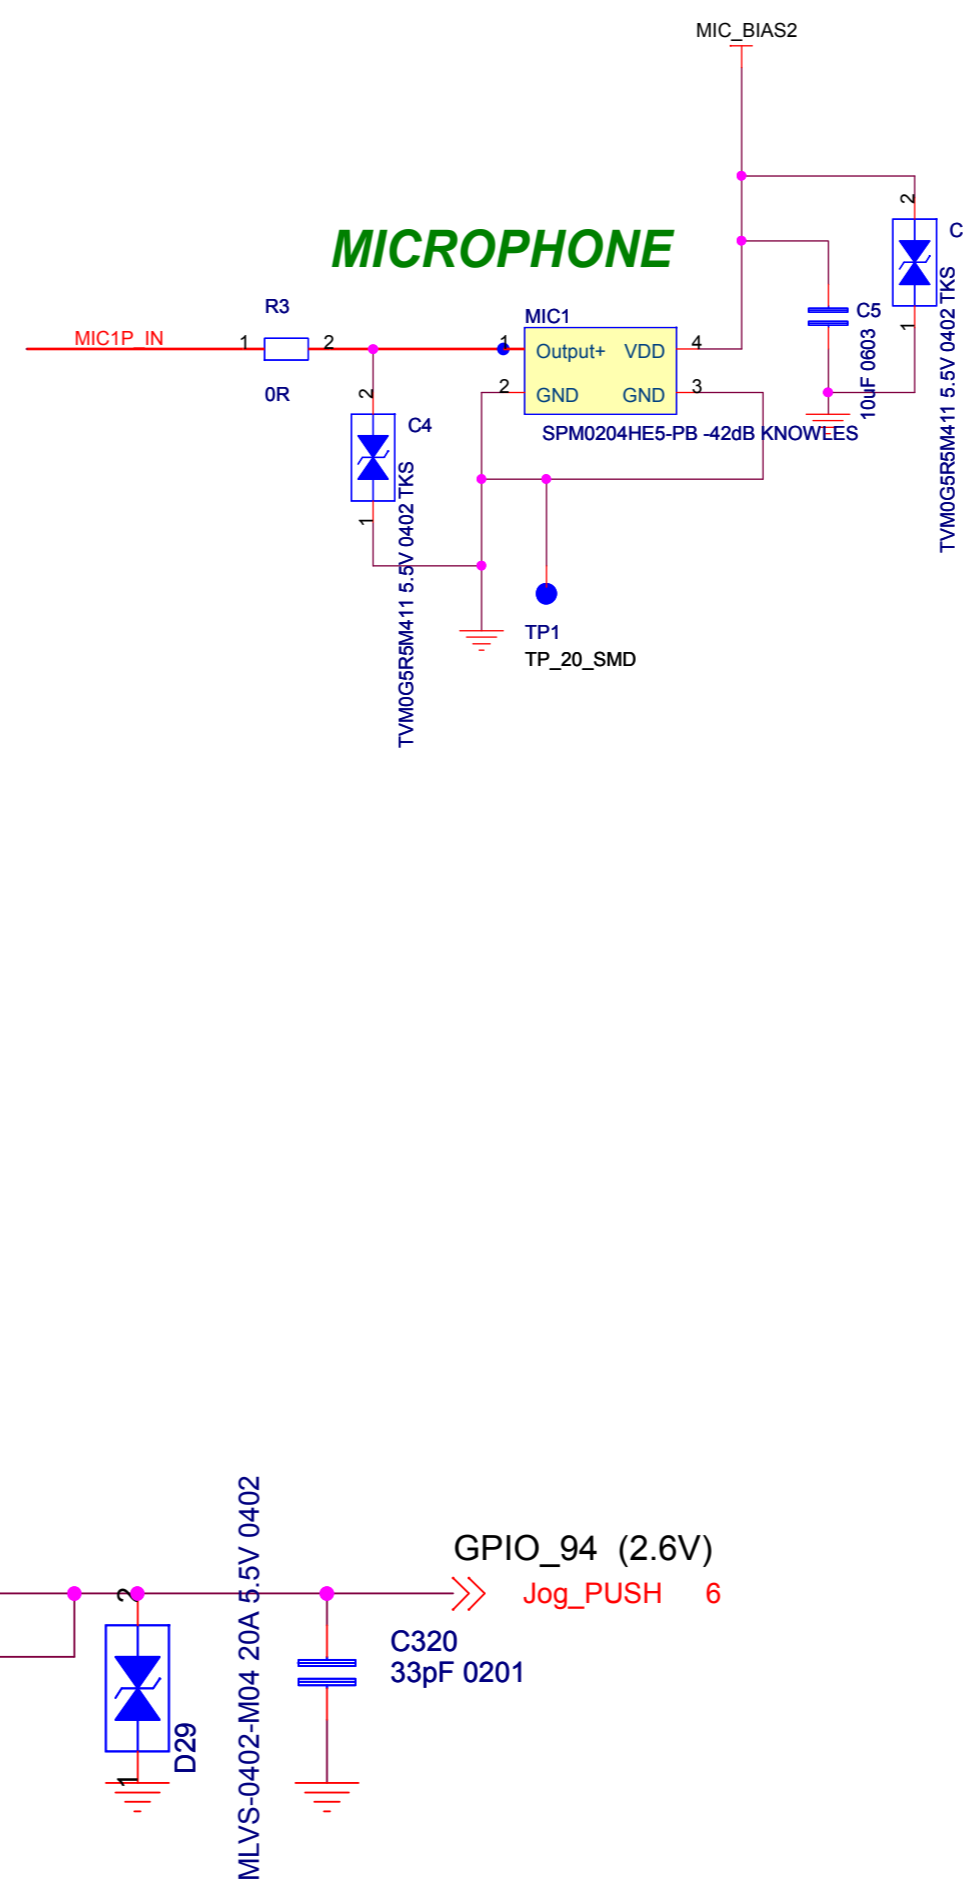

MICROPHONE

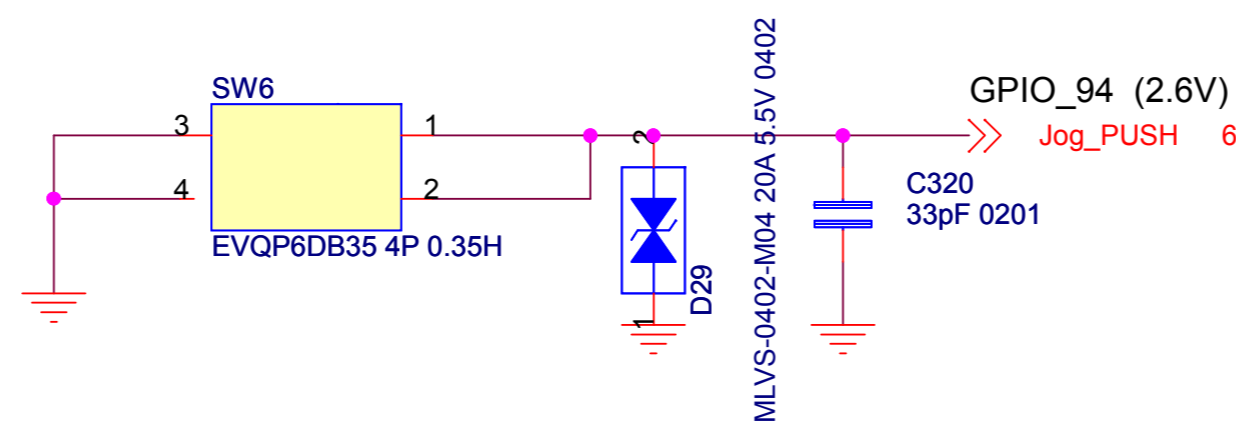

A3100

Repair Optimization
Service Training
Level 3 Authorized

Repair Optimization Service Training	2009.01.16
Level 3 Schematics	Rev. 1.0
A3100	Page 6 of 6