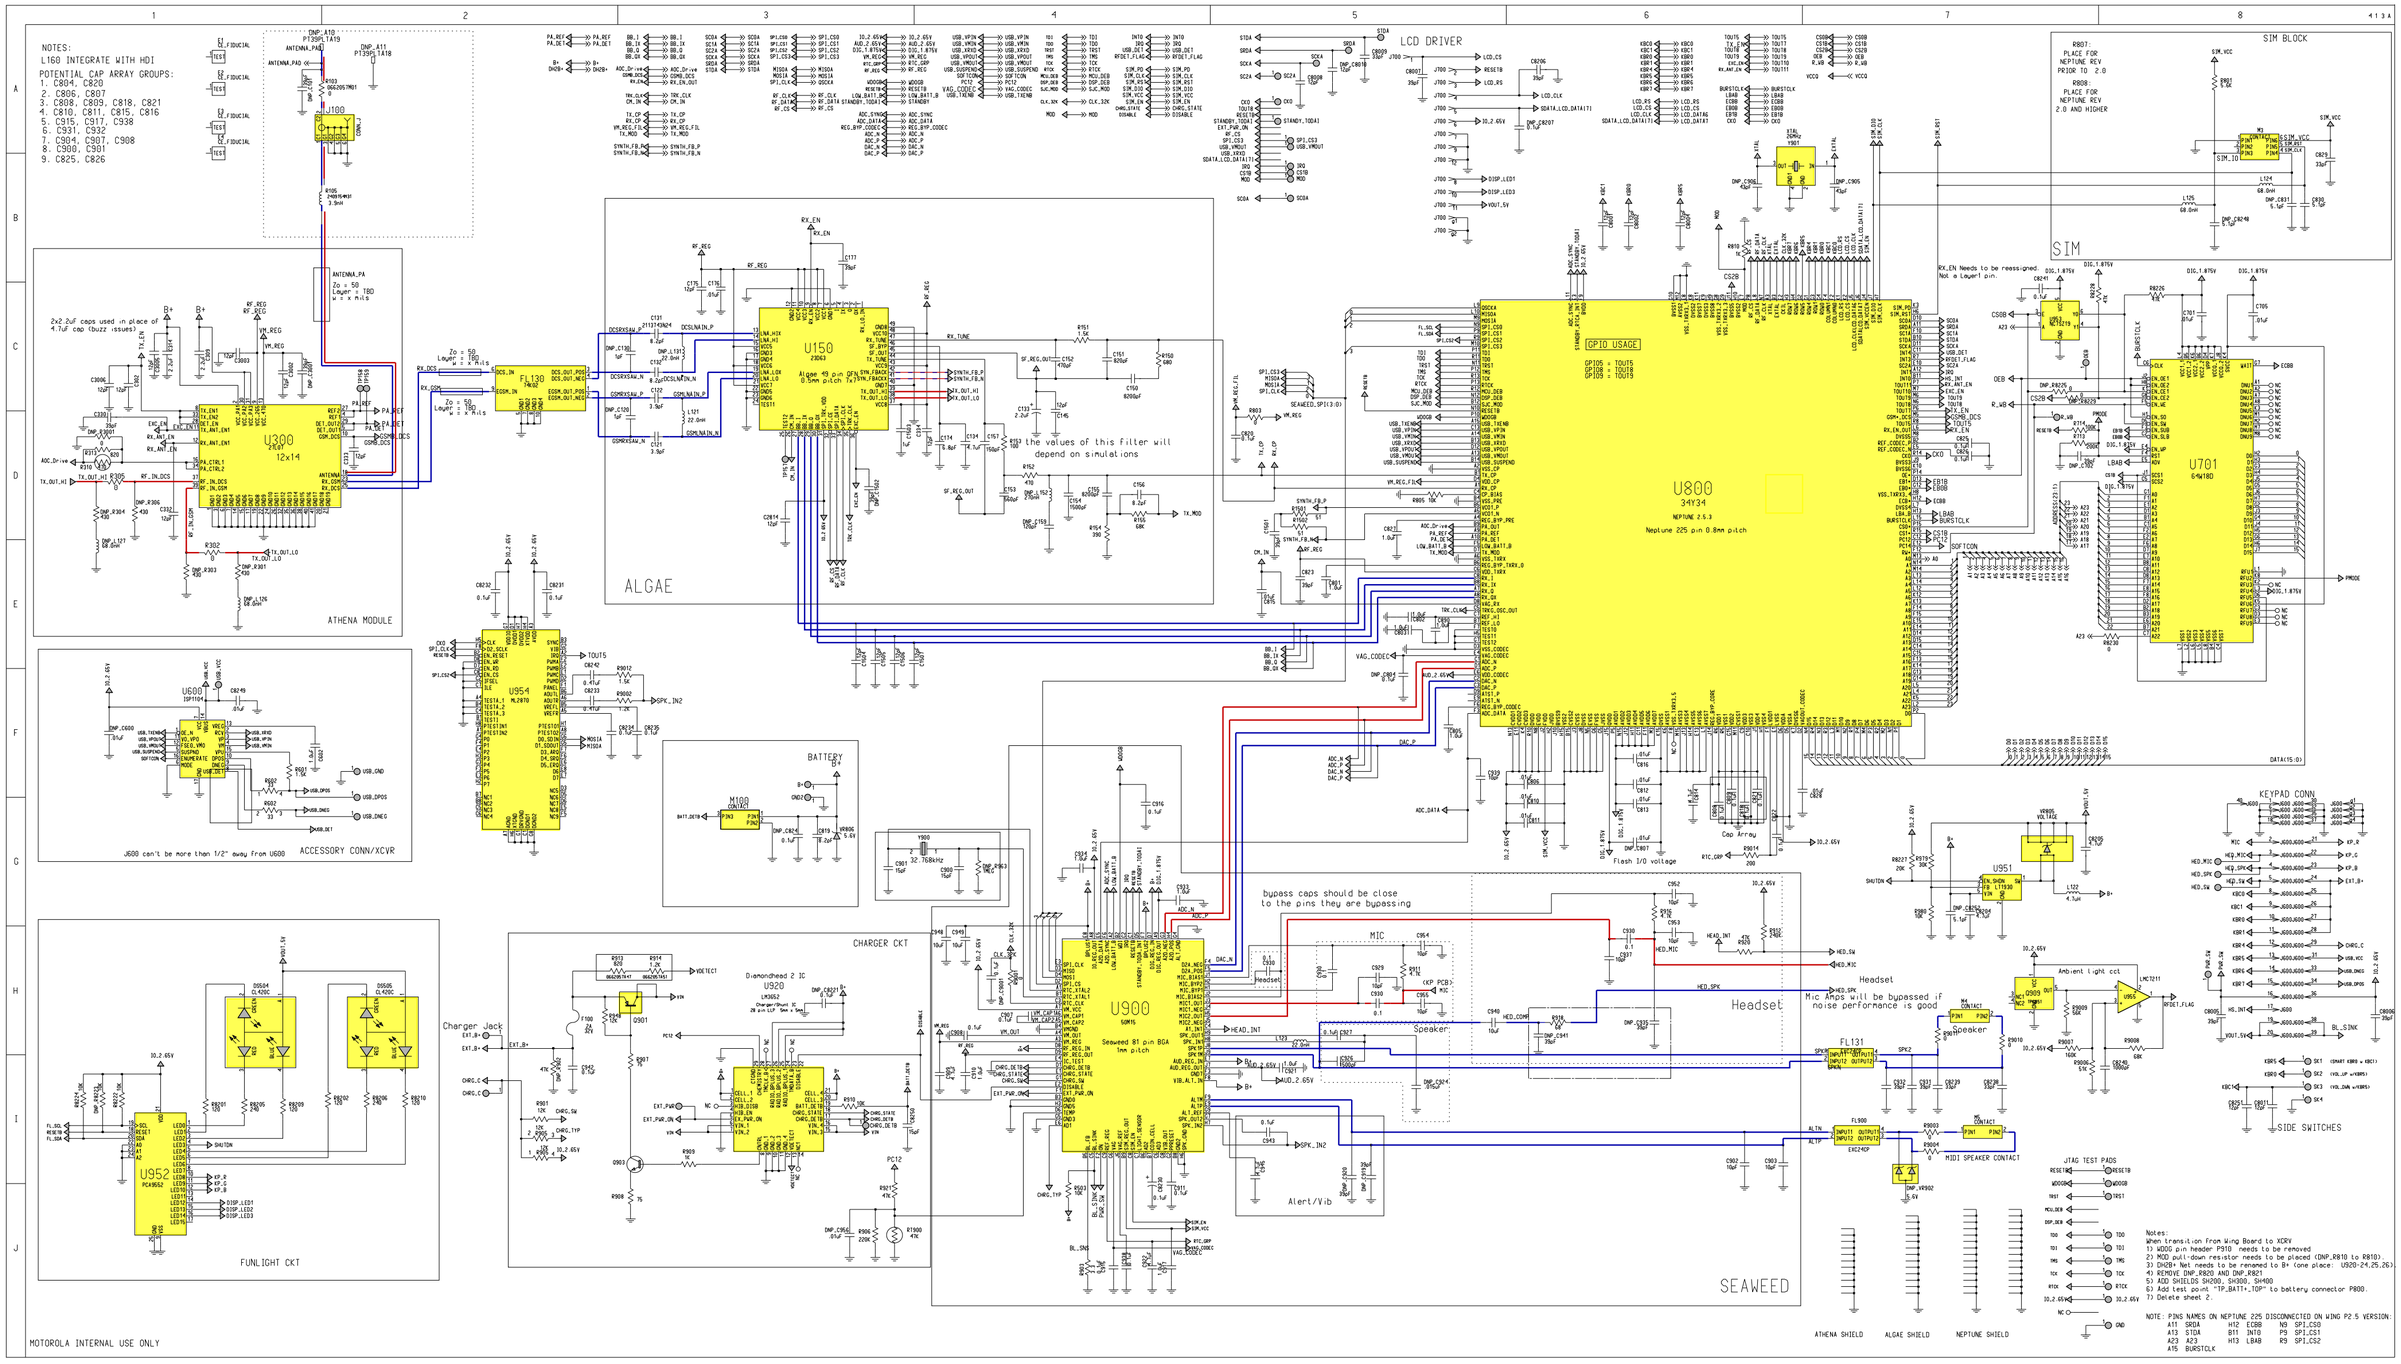

Notes:
When transition from Wing Board to XCRV
1) WDOG pin header P910 needs to be removed
2) MOD pull-down resistor needs to be placed (DNP_R810 to R810).
3) DVDD+ Net needs to be renamed to B+ (one place: U920-24,25,26)
4) REMOVE DNP_R820 AND DNP_R821
5) ADD SHIELDS SH300, SH900, SH400
6) Add test point "TP_BATT+_TOP" to battery connector P800.
7) Delete sheet 2.

NOTE: PINS NAMES ON NEPTUNE 225 DISCONNECTED ON WING P2.5 VERSION:
A11 SRDA — H12 EC86 — N9 SP1_CS0
A13 STDA — B11 INT0 — P9 SP1_CS1
A23 A23 — H13 LBAB — R9 SP1_CS2
A15 BURSTCLK